

HONDA



50

MODEL

P 50





2

PARTS LIST

HONDA GENUINE PARTS

HONDA
GENUINE PARTS

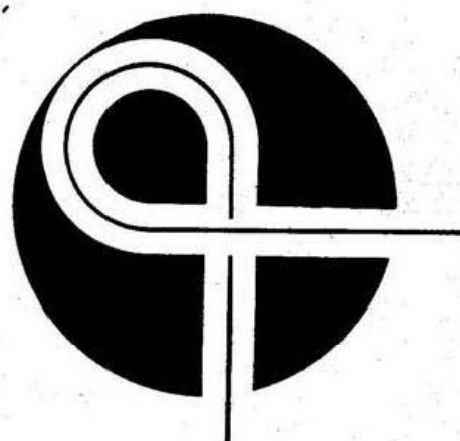

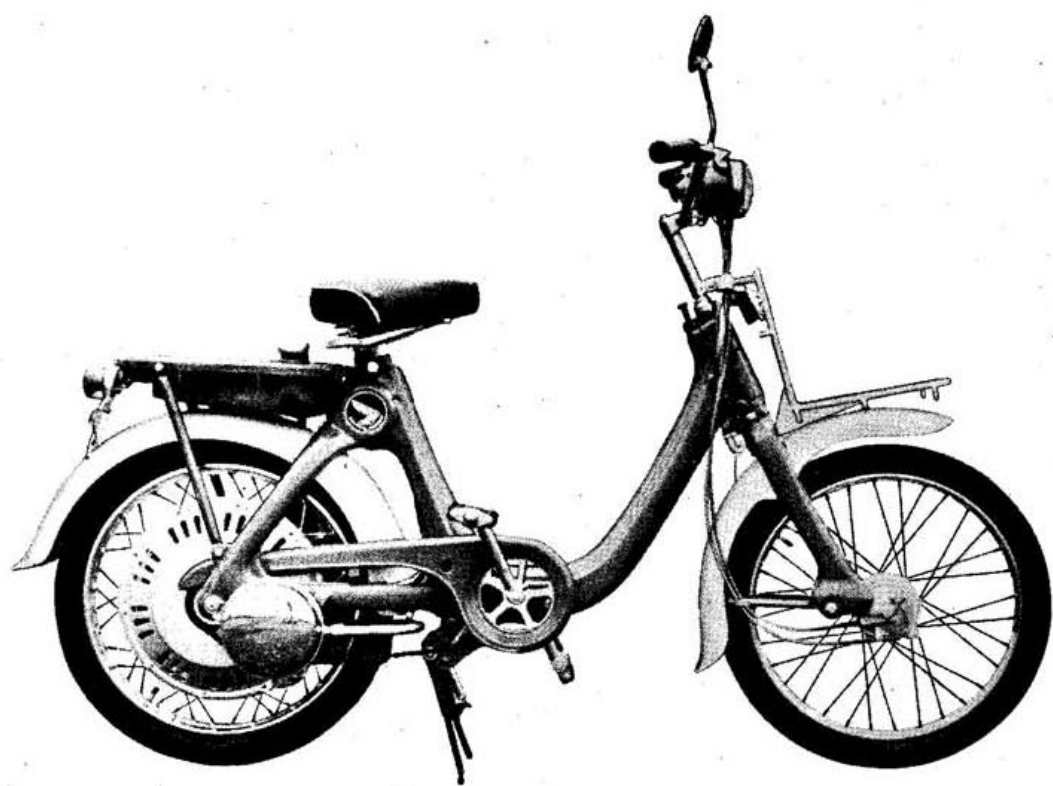

APPLICATION OF PARTS LIST

This is a list of parts used of Honda 50 Model P50

1. How to see the Part Number

The composition of Part Number is as follows.

(Example)



2. How to order the Parts

When ordering parts to us, please let us know the correct number of the parts, referring to this Parts List.

When changing parts, check the frame number, then the parts used can be found. The frame number is stamped on the main stand bracket of the frame body.

3. About the News Number

News Number is the number of the Parts News issued by Honda Service Center. When you need to know the contents of modified parts and related parts in detail.

4. This Parts List can be revised with Revision Sheet

For the future modification of parts and parts to be provided "Revision Sheet" will be issued every three months. Please do put the Revision Sheet in the place of each page according to instructions shown under the sheet. If you make sure of this, the Parts List will be kept always up-to-date.

5. This Parts List was compiled at 20th, May, 1967.

HONDA MOTOR CO., LTD.
SERVICE DIVISION

Contents


ENGINE GROUP

Ref. No.	Nomenclature	Page
E- 1.....	Cylinder Head Cover • Camshaft	2
E- 2.....	Cylinder • Cylinder Head • Piston	4
E- 3.....	Right Crankcase Cover • Reduction.....	6
E- 4.....	Cam Chain Tensioner	10
E- 5.....	Dynamo Cover • Flywheel	12
E- 6.....	Crankcase • Contact Breaker	14
E- 7.....	Crankshaft	16
E- 8.....	Carburetor (1).....	18
	Carburetor (2).....	22

FRAME GROUP

F- 1.....	Steering Handle	24
F- 2.....	Head Light • Carrier • Front Fender.....	26
F- 3.....	Head Light (Used in U. S. A.)	30
F- 4.....	Front Fork • Front Cushion	32
F- 5.....	Front Wheel	36
F- 6.....	Seat • Fuel Tank • Rear Fender	38
F- 7.....	Tail Light (1) (Used in England)	42
	Tail Light (2) (Used in U. S. A.)	44
F- 8.....	Stand • Chain Case • Crank Arm	46
F- 9.....	Carburetor Cover • Muffler	50
F-10.....	Rear Wheel	52
F-11.....	Rear Brake	54
F-12.....	Frame Body • Air Cleaner • Wire Harness	56
F-13.....	Battery (Used in U. S. A.)	64
F-14.....	Basket Hook (Optional Parts)	66
F-15.....	Head Light Bracket • Exhaust Pipe Protector (Optional Parts)	68
F-16.....	Winker (1) (Optional Parts)	70
	Winker (2) (Used in U. S. A.) (Optional Parts)	74

E-1 Cylinder Head Cover • Camshaft

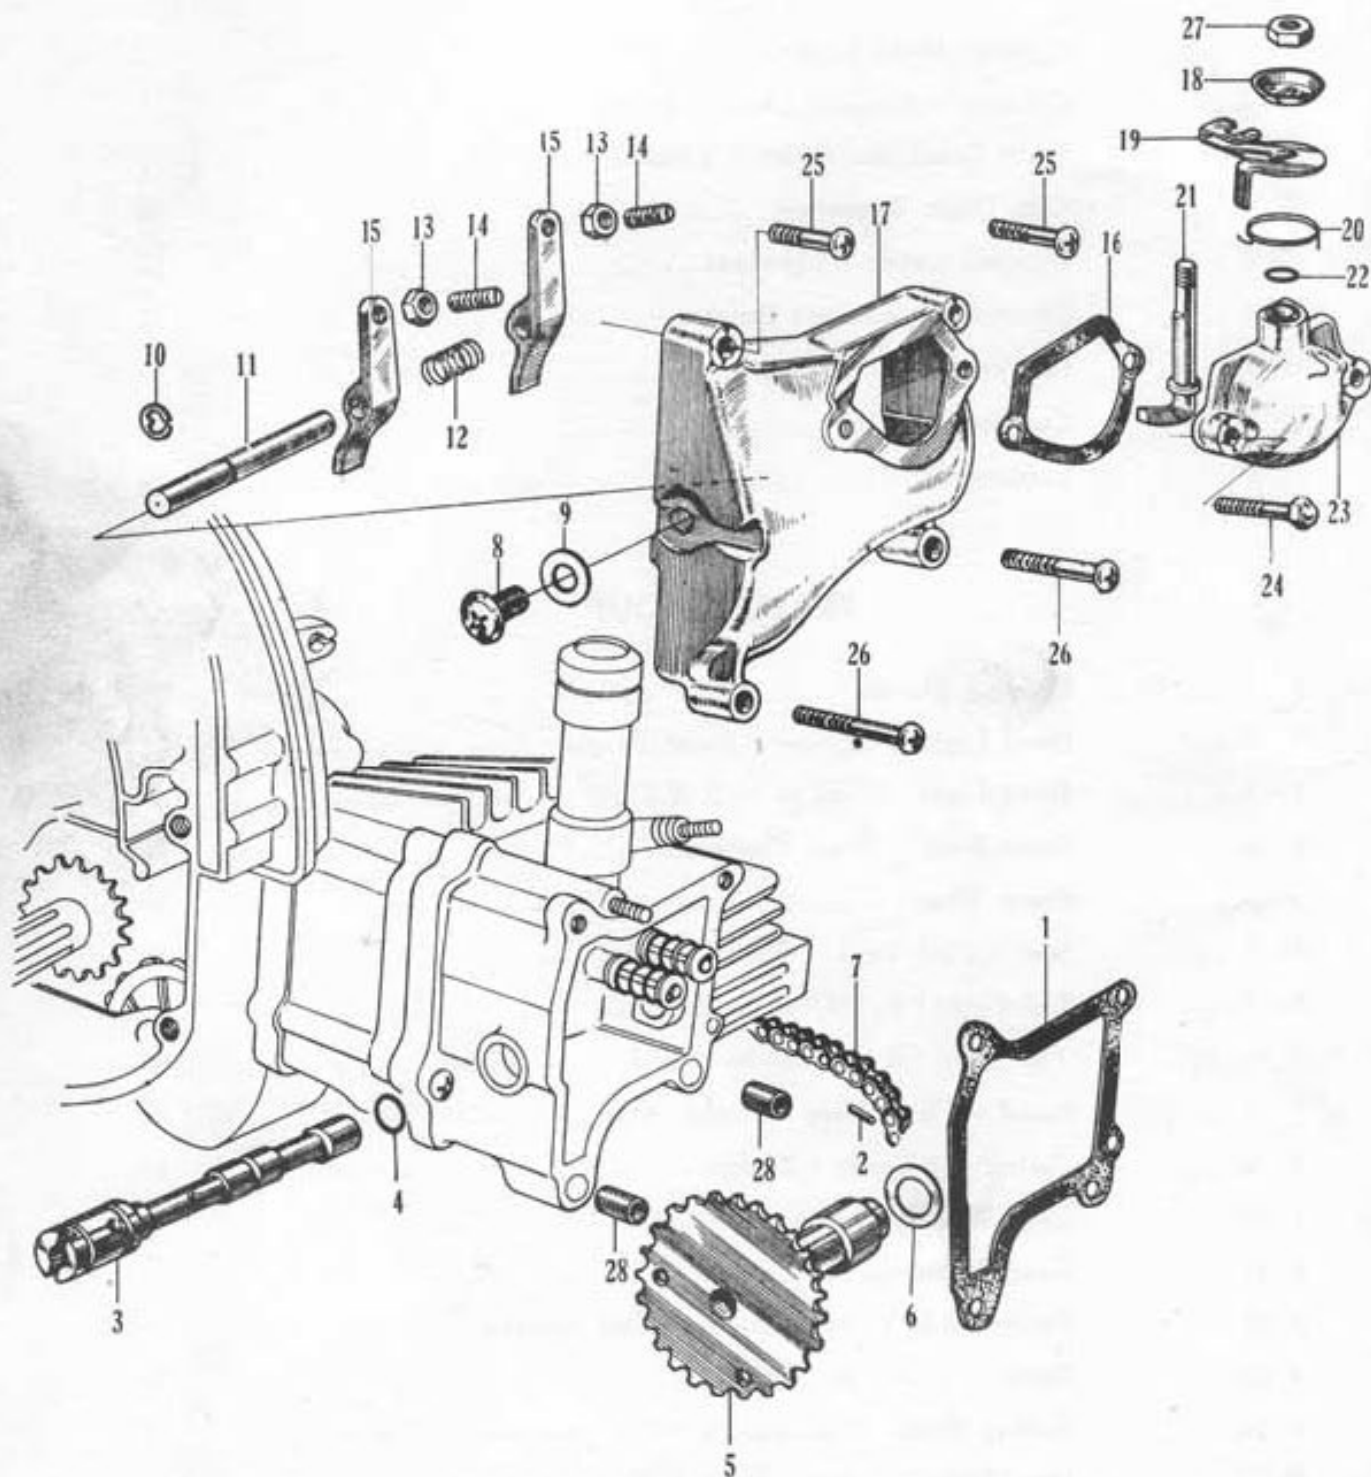


E-1 Cylinder Head Cover · Camshaft

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	12391-044-030	GASKET, cylinder head cover	1	P50-A100001.....		
2	90742-044-000	PIN, knock, 3×12	1	P50-A100001.....		
3	14120-044-010	PIN, center, camshaft	1	P50-A100001.....		
	14120-044-020	PIN, center, camshaft	1	P50-A100071.....	N.I.	
4	91302-044-000	O RING, 8.7×1.8	1	P50-A100001.....		
	91302-044-010	O RING, 6.9×1.5	1	P50-A100071.....	N.I.	
5	14100-044-000	CAMSHAFT	1	P50-A100001.....		
	14100-044-010	CAMSHAFT.....	1	P50-A100071.....	N.I.	
6	90457-044-010	WASHER, A, 10 mm.....	1	P50-A100001.....		
7	14401-044-000	CHAIN, cam.....	1	P50-A100001.....		
8	90081-044-000	BOLT, sealing, 8 mm.....	1	P50-A100001.....		
9	90488-044-000	WASHER, 8 mm	1	P50-A100001.....		
10	90603-044-000	CIR-CLIP, 6 mm	1	P50-A100001		
11	14451-044-000	SHAFT, valve rocker arm	1	P50-A100001		
12	14481-044-000	SPRING, side, rocker arm	1	P50-A100001		
13	90206-001-000	NUT, tappet adjusting	2	P50-A100001		
14	90012-044-000	SCREW, tappet adjusting	2	P50-A100001.....		
15	14431-044-030	ARM, valve rocker.....	2	P50-A100001.....		
16	12401-044-020	GASKET, tappet cap	1	P50-A100001		
17	12301-044-020	COVER, cylinder head	1	P50-A100001.....		
18	90444-044-000	WASHER, lock, 5 mm	1	P50-A100001		
19	14925-044-020	LEVER, decompression	1	P50-A100001		
20	14935-044-010	SPRING, decompression lever return	1	P50-A100001.....		
21	14921-044-010	ARM, decompression.....	1	P50-A100001.....		
22	91216-044-000	OIL-SEAL, 6-11-3	1	P50-A100001.....		
23	12361-044-030	CAP, tappet	1	P50-A100001.....		
24	92500-06022	BOLT, blind, 6×22	2			
25	93500-06028	SCREW, cross, 6×28	2			
26	93500-06036	SCREW, cross, 6×36	2			
27	94001-05000	NUT, hex., 5 mm	1			
28	94301-08140	PIN, knock, 8×14A	2			
	90457-044-010	WASHER-A-CAMSHAFT.....	1	P50-A100071.....		
	90458-044-000	WASHER-B-CAMSHAFT.....	1	P50-A100071.....		


E-2 Cylinder · Cylinder Head · Piston

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	17120-044-000	BAND, carburetor connecting	2	P50-A100001	P50-A148606	
	17120-044-000	BAND, carburetor connecting	1	P50-A148607		
2	17125-044-000	INSULATOR, connecting pipe	1	P50-A100001		
3	17112-044-020	PIPE, carburetor connecting	1	P50-A100001	P50-A148606	
	17112-044-030	PIPE, carburetor connecting	1	P50-A148607		
4	12251-044-010	GASKET, cylinder head	1	P50-A100001		
	12251-044-020	GASKET, cylinder head	1	P50-A100043		
5	14771-044-000	RETAINER, valve spring	2	P50-A100001		
6	14751-044-000	SPRING, valve	2	P50-A100001		
7	14781-044-000	SEAT, under, valve spring	1	P50-A100001		
8	14711-044-680	VALVE, inlet	1	P50-A100001		
9	14721-044-680	VALVE, exhaust	1	P50-A100001		
10	12023-044-000	GUIDE, exhaust valve	1	P50-A100001		
11	12206-044-300	CLIP, valve guide	1	P50-A100001		
12	12200-044-090	HEAD, cylinder	1	P50-A100001		
	12200-044-100	HEAD, cylinder	1	P50-A173712		
13	12101-044-010	CYLINDER	1	P50-A100001		
	12101-044-020	CYLINDER	1	P50-A100043		
14	12191-044-000	GASKET, cylinder	1	P50-A100001		
15	13115-001-000	CLIP, piston pin	2	P50-A100001		
16	13111-044-010	PIN, piston	1	P50-A100001		
17	13010-044-000	RING-SET, piston	1	P50-A100001		
18	13101-044-020	PISTON	1	P50-A100001		
19	92700-06030	STUD, 6×30	2			
20	93500-06080	SCREW, cross, 6×80	1			
21	94001-06000	NUT, hex., 6 mm	4			
22	94101-06000	WASHER, flat, 6 mm	4			
23	94301-08140	PIN, knock, 8×14A	2			
24	98056-56710	PLUG, sparking	1			
25	93512-04014	SCREW, cross, 4×14	2			
26	17130-044-000	BAND B, carburetor connecting	1	P50-A148607		
	12021-044-000	GUIDE VALVE INLET	1	P50-A173712		

E-2 Cylinder · Cylinder Head · Piston

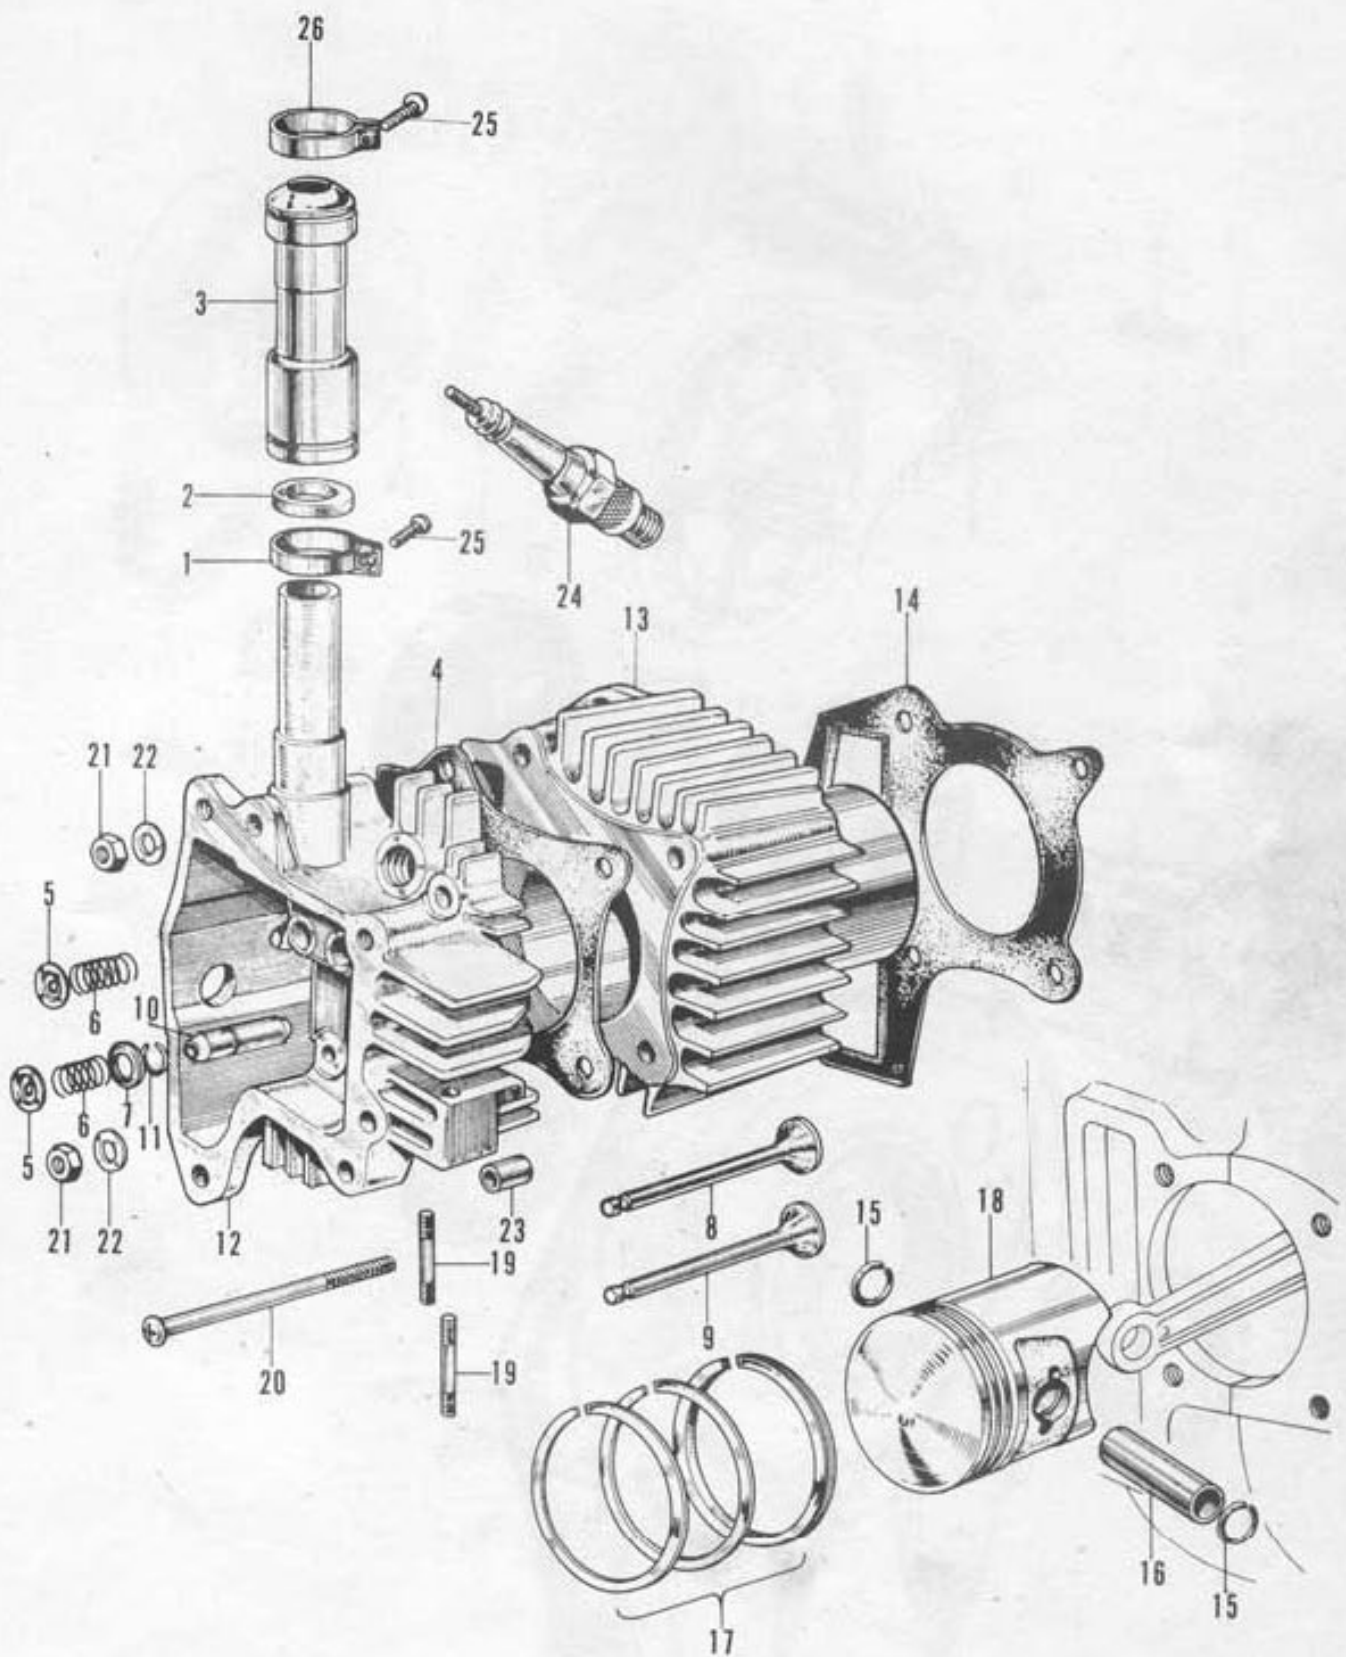

E-3 Right Crankcase Cover - Reduction

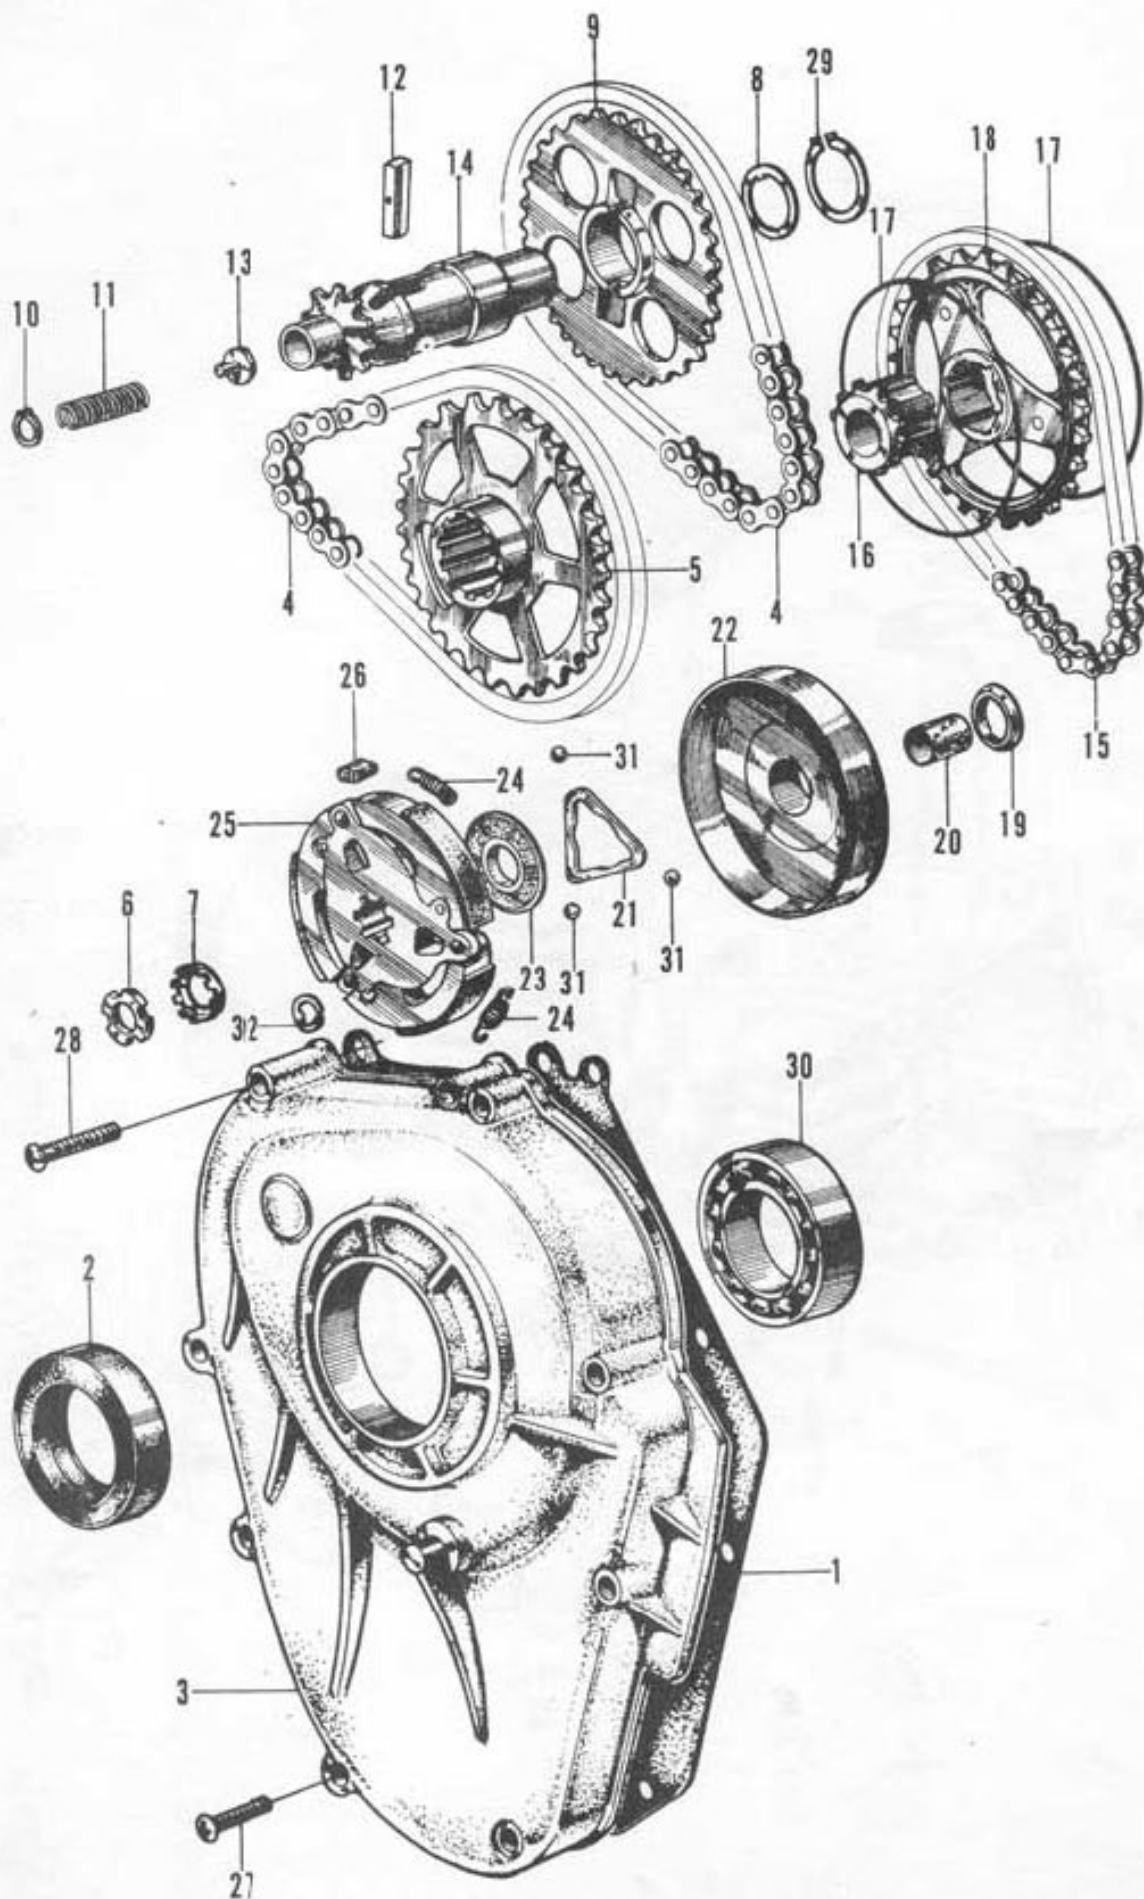


E-3 Right Crankcase Cover • Reduction

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	11394-044-010	GASKET, right crankcase cover	1	P50-A100001		
2	91213-044-010	OIL-SEAL, 37-55-8	1	P50-A100001		
3	11330-044-020	11330-044-020 superseded by 11330-044-333 including 91005-044-000	1	P50-A100001	P50-A112419	
	11330-044-333	COVER, right crankcase	1	P50-A112420		
4	23350-044-000	CHAIN, final drive	2	P50-A100001		
5	23321-044-020	SPROCKET, final driven	1	P50-A100001		
	23320-044-691	GEAR, final drive (Used in Netherland)...	1	P50-A128651		
6	90231-001-000	NUT, lock, 14 mm	1	P50-A100001		
7	90443-044-000	WASHER, lock, 14 mm	1	P50-A100001		
8	90452-044-000	WASHER, thrust, 22 mm	1	P50-A100001	P50-A125534	
9	23221-044-030	SPROCKET, secondary driven	1	P50-A100001		
	23221-044-690	SPROCKET, secondary driven (Used in Netherland)	1	P50-A128651		
10	90602-044-000	CIR-CLIP, internal, 10.5 mm	1	P50-A100001		
11	24621-044-020	SPRING, free pole	1	P50-A100001		
12	24111-044-010	POLE, free	1	P50-A100001		
13	24615-044-000	GUIDE, free pole	1	P50-A100001	P50-A111514	
	24615-044-010	GUIDE, free pole	1	P50-A111515		
14	23311-044-020	SHAFT, final drive	1	P50-A100001	P50-A125533	
	23311-044-030	SHAFT, final drive	1	P50-A125534		
	23310-044-691	GEAR, final drive (Used in Netherland)...	1	P50-A128651		
15	23150-044-000	CHAIN, primary drive	1	P50-A100001		
16	23211-044-000	SPROCKET, secondary drive	1	P50-A100001		
17	23131-044-000	RING, damper	2	P50-A100001		
18	23110-044-030	SPROCKET, primary driven	1	P50-A100001		
18	23110-044-040	SPROCKET, primary driven	1	P50-A157532		
19	14315-044-010	COLLER, timing sprocket distance	1	P50-A100001		
20	22131-044-020	GUIDE, clutch center	1	P50-A100001		
21	22802-044-000	RETAINER, ball	1	P50-A100001		
22	23100-044-040	SPROCKET, primary drive	1	P50-A100001		
23	22201-044-050	PLATE, friction	1	P50-A100001		
24	22401-044-010	SPRING, clutch	3	P50-A100001		
25	22300-044-000	PLATE, drive	1	P50-A100001		
	23421-044-343	COLLAR	1	P50-A157532		


E-3 Right Crankcase Cover • Reduction

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
26	22804-044-000	RUBBER, clutch damper	3	P50-A100001		
27	93500-06028	SCREW, cross, 6×28	7			
28	93500-06045	SCREW, cross, 6×45	2			
29	94510-22000	CIR-CLIP, 22 mm	1			
30	96100-60070	BEARING, radial ball, 6007	1			
	91005-044-000	BEARING, radial ball, 16007	1	P50-A112420		
31	96211-10000	BALL, steel, # 10	3			
32	90603-044-000	CIR-CLIP, 6 mm	3	P50-A100001		

E-3 Right Crankcase Cover - Reduction

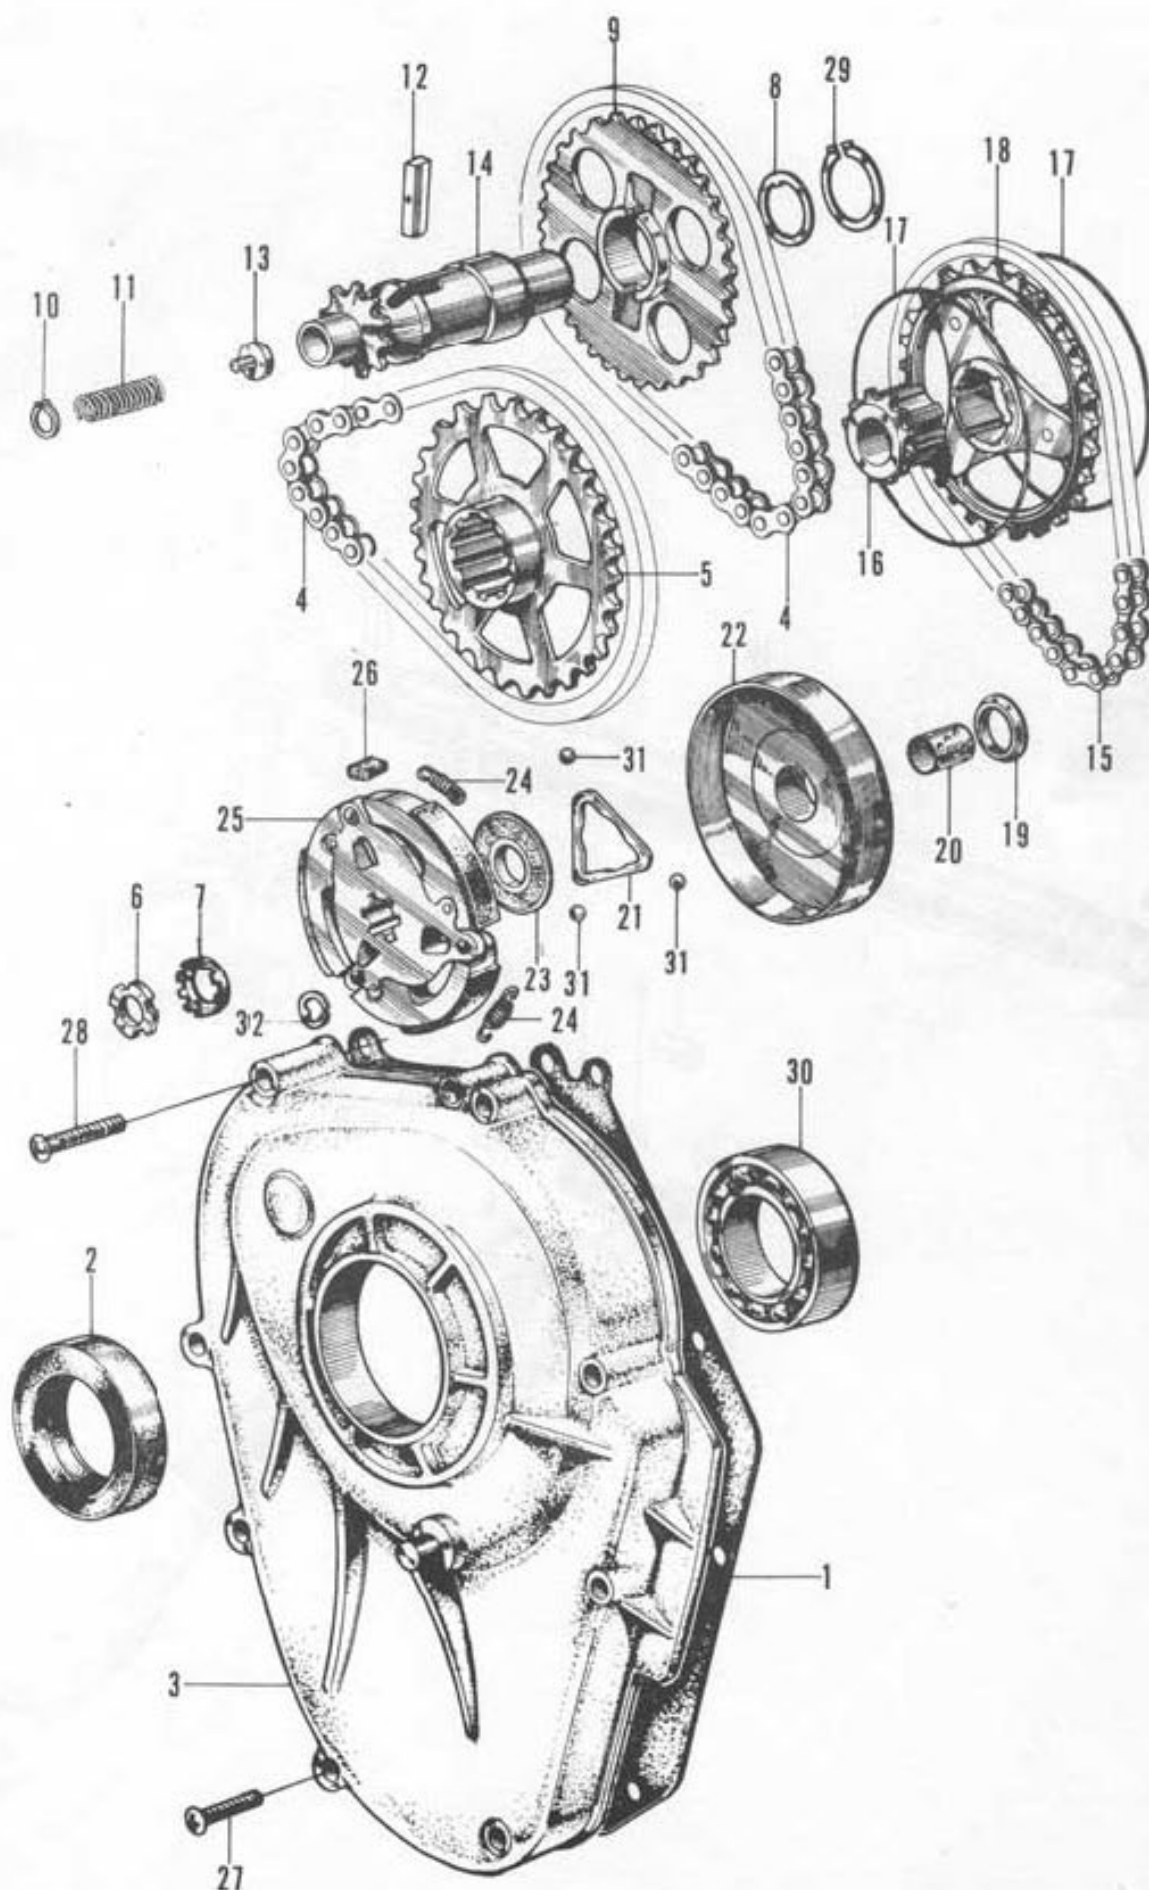

E-4 Cam Chain Tensioner

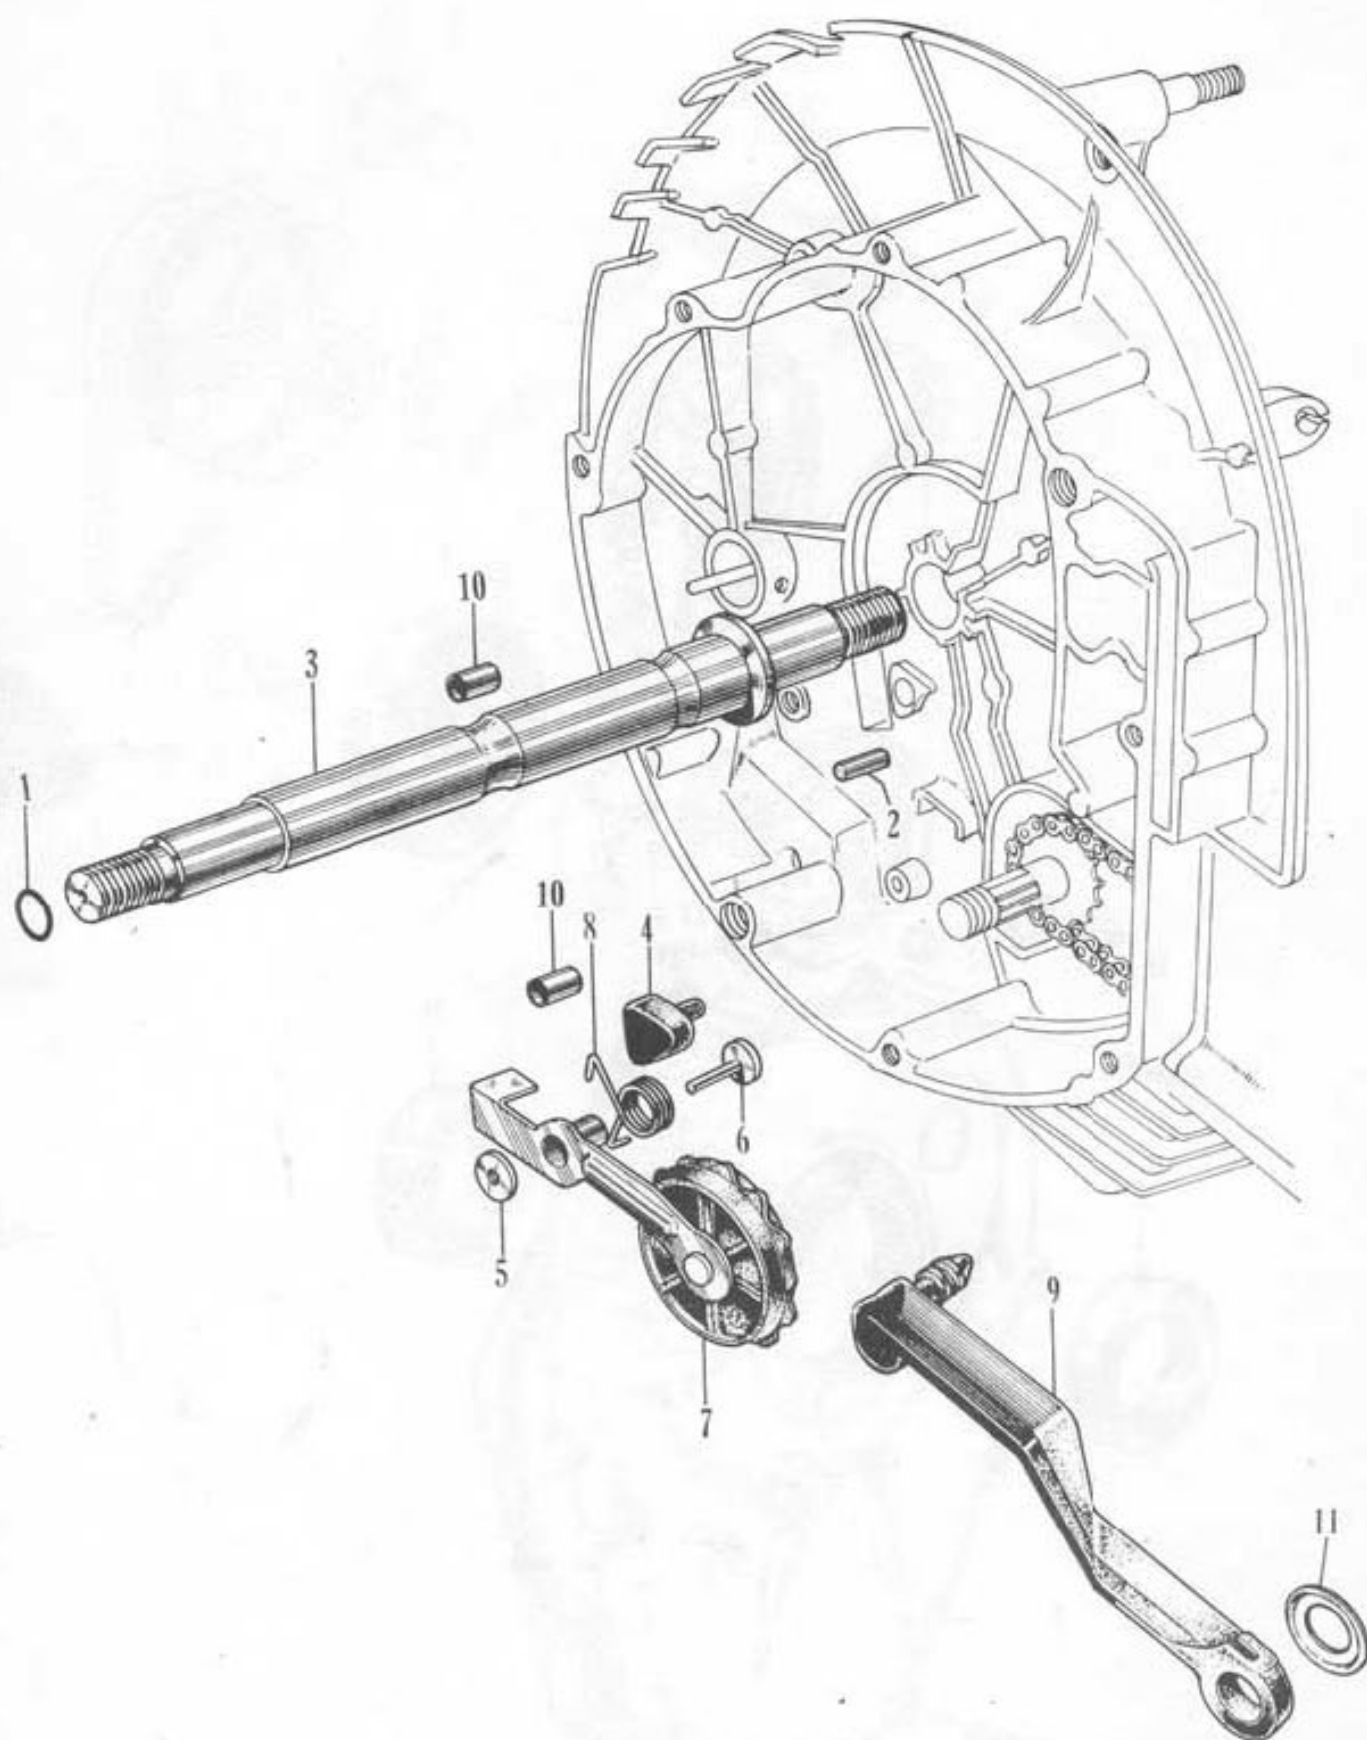


E-4 Cam Chain Tensioner

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	91307-044-000	O RING, 16×1.6.....	1	P50-A100001.....		
2	91101-268-000	ROLLER, 4×10	1	P50-A100001.....		
3	42300-044-040	AXLE, rear wheel	1	P50-A100001.....		
4	14521-044-000	STOPPER, cam chain tensioner.....	1	P50-A100001.....		
5	90445-044-300	WASHER, 4 mm.....	1	P50-A100001.....		
6	11116-044-300	RIVET A, 4 mm.....	1	P50-A100001.....		
7	11120-044-330	TENSIONER, cam chain	1	P50-A100001.....		
8	11117-044-320	SPRING, cam chain tensioner	1	P50-A100001.....		
9	15420-044-040	GUIDE, oil	1	P50-A100001.....		
	15420-044-060	GUIDE, oil	1	P50-A100071.....		
10	90704-035-000	PIN, knock, 10×14A	2	P50-A100001.....		
11	90458-044-000	WASHER B, 10 mm	1	P50-A100001.....		


E-5 Dynamo Cover · Flywheel

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	90091-044-000	SCREW, 5×14.....	2	P50-A100001.....		
2	11431-044-040	COVER, dynamo.....	1	P50-A100001.....		
3	90201-044-000	NUT, 10 mm.....	1	P50-A100001.....		
4	90426-001-000	WASHER, magneto fixing	1	P50-A100001.....		
5	31121-044-681	FLYWHEEL ASSY., magneto	1	P50-A100001.....		
6	32906-044-020	CLAMP, dynamo cord	1	P50-A100001.....		
7	93500-05012	SCREW, cross, 5×12	1			

E-5 Dynamo Cover • Flywheel

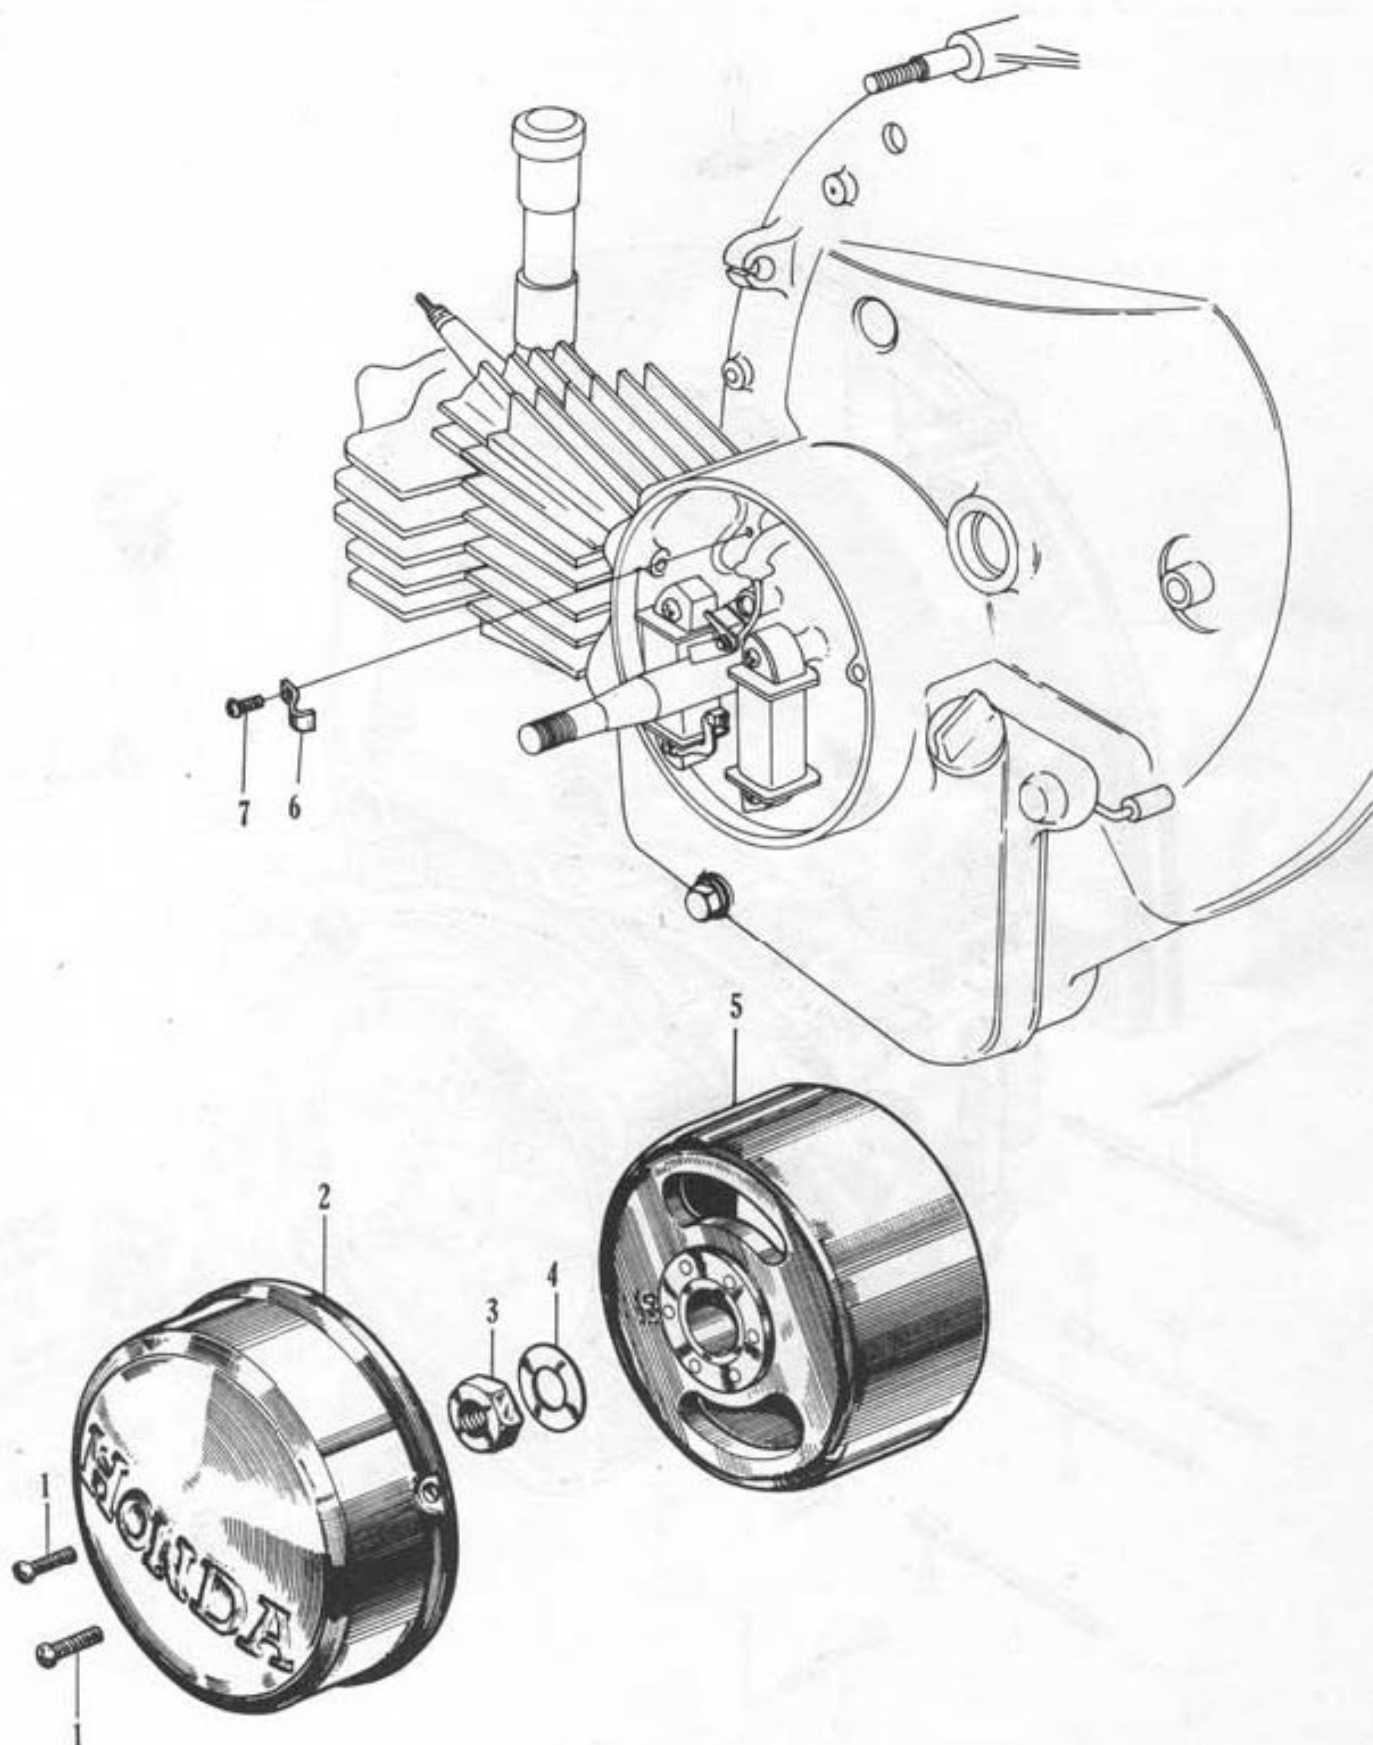

E-6 Crankcase · Contact Breaker

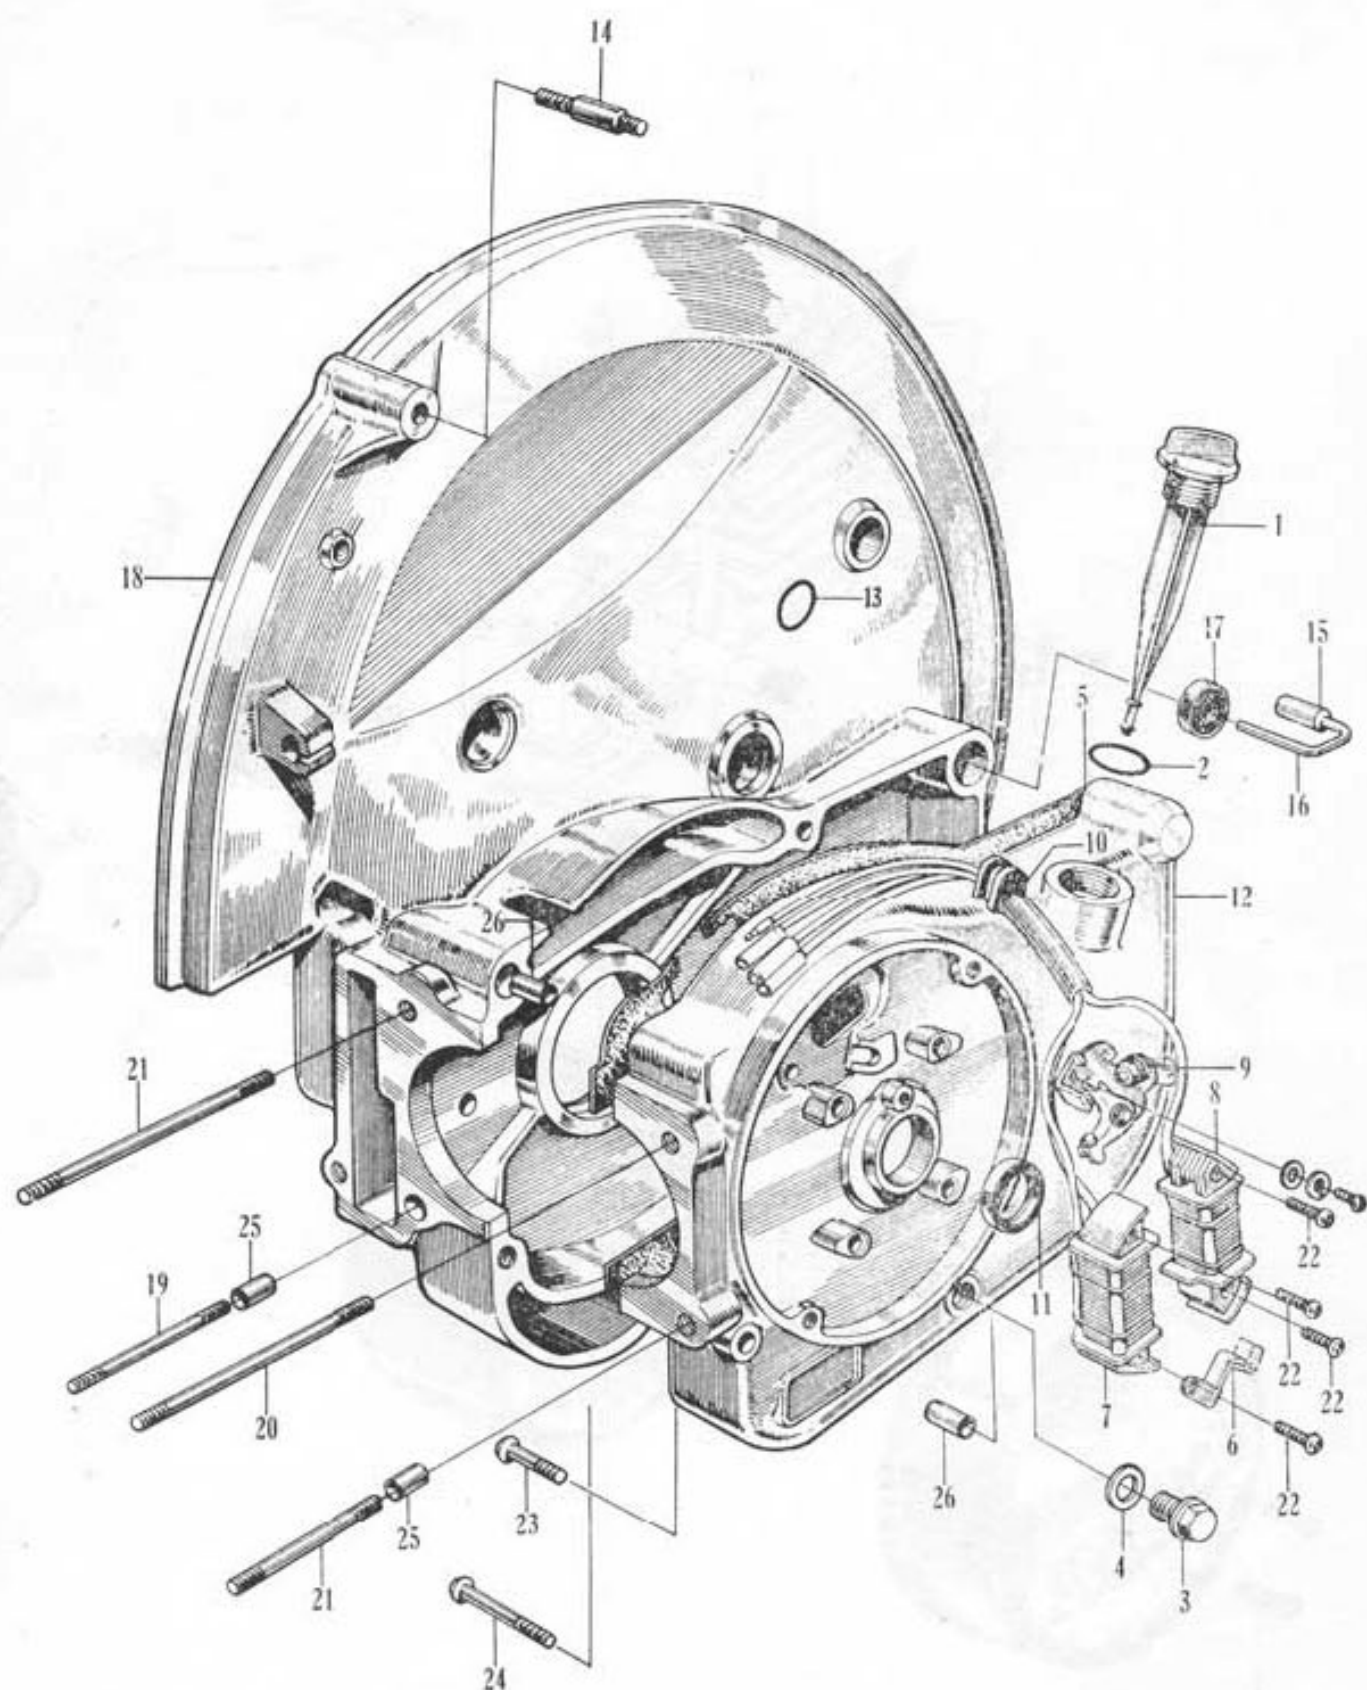


E-6 Crankcase · Contact Breaker

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	15650-044-010	GAUGE, oil	1	P50-A100001.....		
2	91311-044-000	O RING, 8×3	1	P50-A100001.....		
3	90013-044-000	BOLT, drain plug, 8 mm	1	P50-A100001.....		
4	90488-044-000	WASHER A, 8 mm	1	P50-A100001.....		
5	11191-044-040	GASKET, crankcase	1	P50-A100001.....		
6	30205-044-004	CONTACT, oil felt	1	P50-A100001.....		
7	31631-044-681	COIL, lamp	1	P50-A100001.....		
	31631-044-601	COIL, lamp (Used in England)	1	P50-A100001.....		
	31631-044-621	COIL, lamp (Used in France & Netherland)	1	P50-A100001.....		
	31631-044-671	COIL, lamp (Used in U.S.A.).....	1	P50-A167186.....		
8	30540-044-004	COIL, primary.....	1	P50-A100001.....		
9	30202-044-000	BREAKER, contact	1	P50-A100001.....		
10	32956-044-000	GROMMET, dynamo cord	1	P50-A100001.....		
	32956-044-670	GROMMET, dynamo cord (Used in U.S.A.)	1	P50-A167186.....		
11	91211-044-000	OIL-SEAL, 15-25-6	1	P50-A100001.....		
12	11200-044-050	CRANKCASE, left.....	1	P50-A100001.....	P50-A127240	
	11200-044-060	CRANKCASE, left.....	1	P50-A127241.....		
13	91315-044-000	O RING, 19.4×2.8	1	P50-A100001.....		
14	43441-044-020	STUD, torque stopper	1	P50-A100001.....		
15	24612-044-000	CAP, free pole slider.....	1	P50-A100001.....		
16	24611-044-020	SLIDER, free pole	1	P50-A100001.....	P50-A111514	
	24611-044-030	SLIDER, free pole	1	P50-A111515.....		
17	91215-044-010	OIL-SEAL, 5-18-7	1	P50-A100001.....		
18	11100-044-100	CRANKCASE, right	1	P50-A100001.....		
19	92700-06090	STUD, 6×90	1			
20	92700-06101	STUD, 6×101	1			
21	92700-06111	STUD, 6×111	2			
22	93500-04020	SCREW, cross, 4×20	4			
23	93500-06036	SCREW, cross, 6×36	4			
24	93500-06045	SCREW, cross, 6×45	3			
25	94301-08140	PIN, knock, 8×14A	2			
26	90704-035-000	PIN, knock, 10×14A	2	P50-A100001.....		


E-7 Crankshaft

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	13000-044-060	CRANKSHAFT ASSY.	1	P50-A100001.....		
1	90741-044-000	PIN, knock, 3×4.....	1	P50-A100001.....		
2	14311-044-020	SPROCKET, timing	1	P50-A100001.....		
3	13311-044-050	CRANKSHAFT, right	1	P50-A100001.....		
4	13381-044-020	PIN, crank.....	1	P50-A100001.....		
5	13321-044-050	CRANKSHAFT, left	1	P50-A100001.....		
6	91111-044-000	ROLLER, 2×8.....	24	P50-A100001.....		
7	13211-044-010	RETAINER, roller	1	P50-A100001.....		
8	13201-044-010	ROD, connecting.....	1	P50-A100001.....		
9	96100-62020	BEARING, radial ball, 6202.....	1			
10	96100-62030	BEARING, radial ball, 6203.....	1			

E-7 Crankshaft

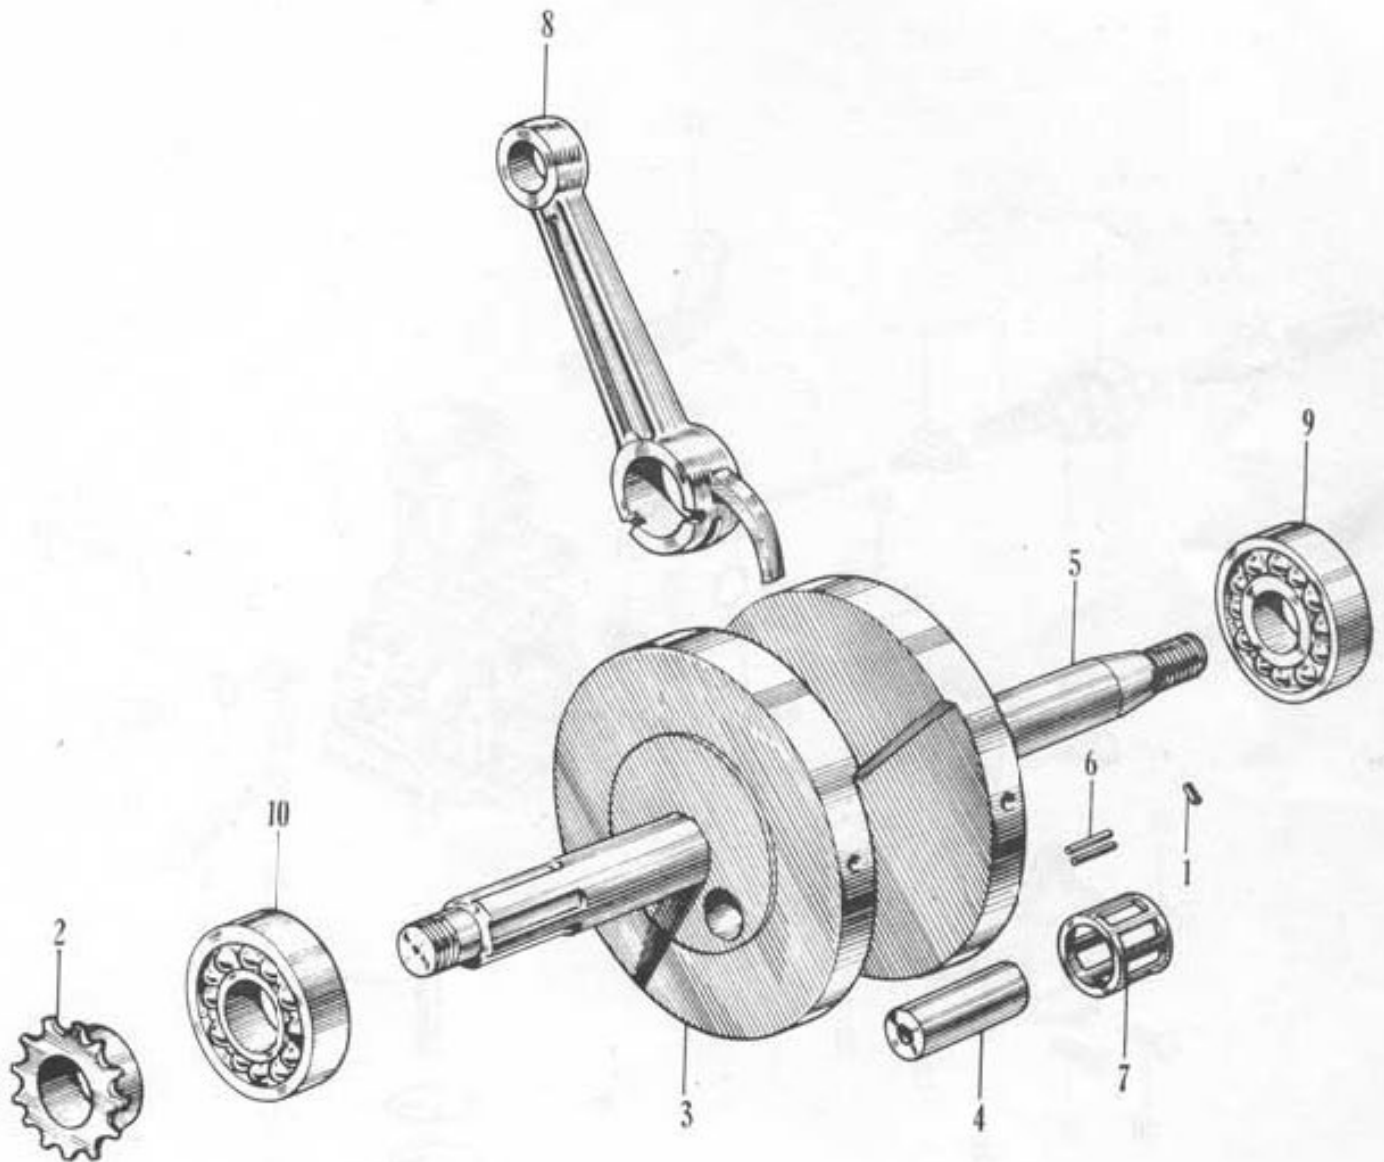

E-8 Carburetor (1)

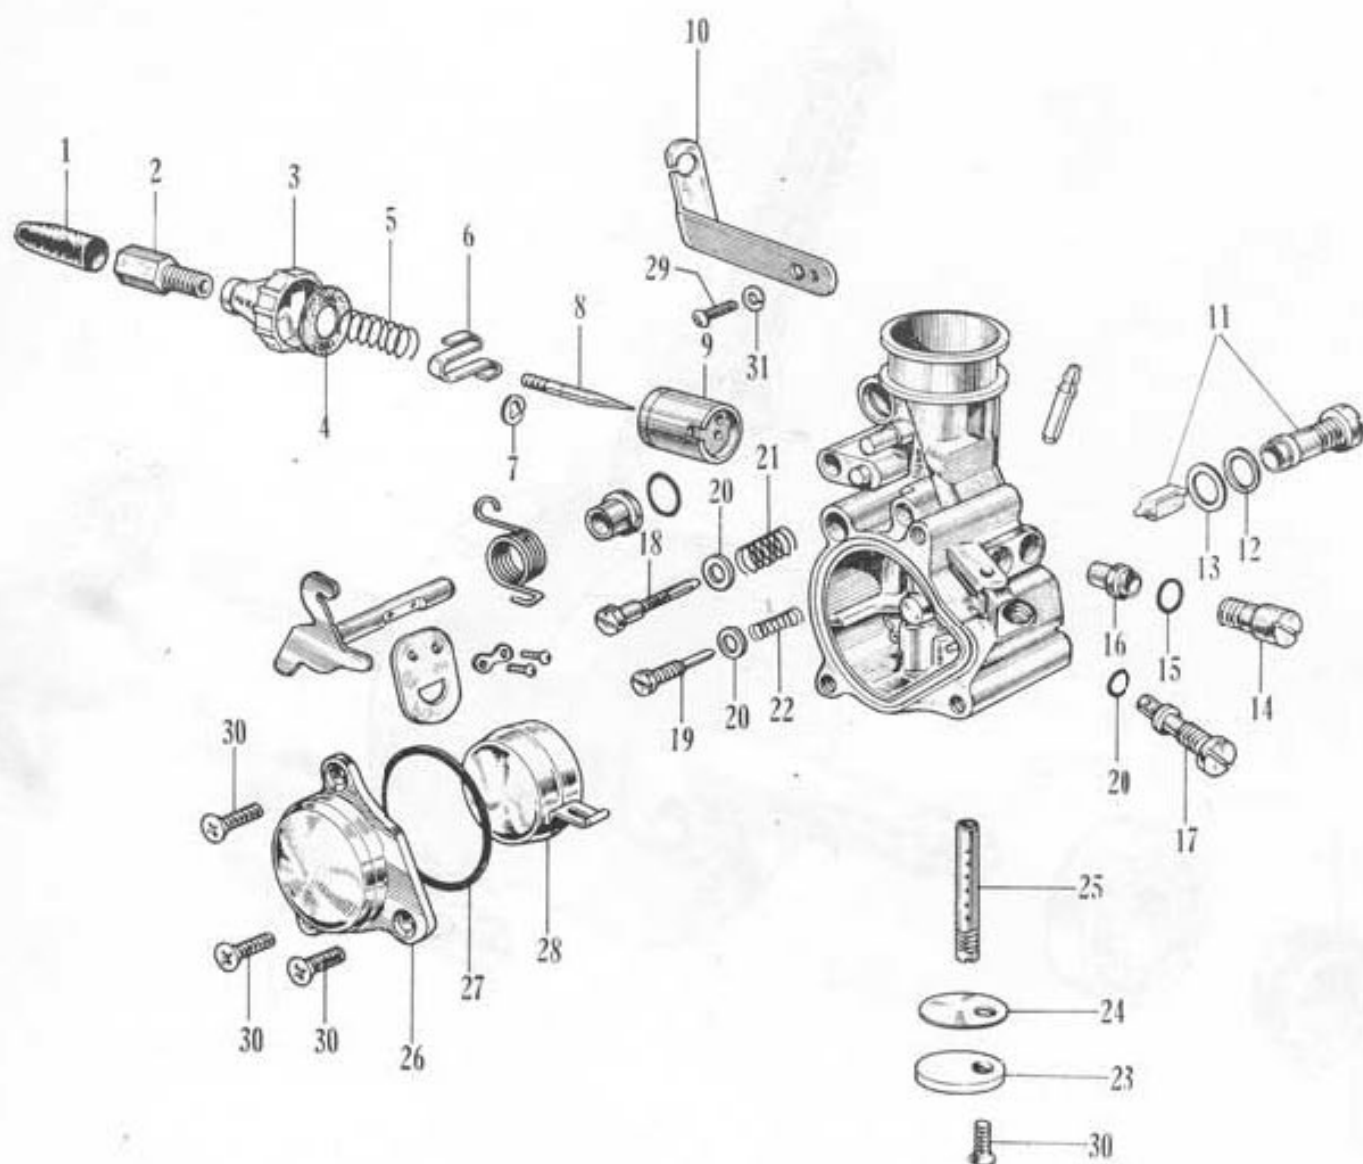



E-8 Carburetor (1)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	16100-044-681	CARBURETOR ASSY.....	1	P50-A100001	 P50-A148606	
	16100-044-691	CARBURETOR ASSY..... (Used in Netherland)	1	P50-A128651		
1	16194-044-004	CAP, cable	1	P50-A100001		
2	16118-044-004	ADJUSTER, cable	1	P50-A100001		
3	16119-044-004	TOP.....	1	P50-A100001		
4	16171-044-004	WASHER, top	1	P50-A100001		
5	16185-044-004	SPRING, throttle	1	P50-A100001		
6	16156-044-004	PLATE, needle clip	1	P50-A100001		
7	16157-044-004	CLIP, needle	1	P50-A100001		
8	16151-044-681	NEEDLE, jet	1	P50-A100001	 P50-A148606	
9	16141-044-681	VALVE, throttle	1	P50-A100001	 P50-A148606	
10	16193-044-004	SUPPORT, cable	1	P50-A100001		
11	16125-044-004	VALVE SET, float	1	P50-A100001		
12	16173-044-004	O RING, 8 ϕ	1	P50-A100001		
13	16188-044-004	WASHER, fiber	1	P50-A100001		
14	16139-027-004	HOLDER, needle jet	1	P50-A100001	 P50-A148606	
15	16175-001-004	O RING, 4.5 ϕ	1	P50-A100001		
16	16133-044-681	JET, needle	1	P50-A100001	 P50-A148606	
17	99144-03504	JET, slow (# 35)	1			
	99144-03804	JET, slow (# 38)	1			
18	16163-044-004	SCREW, throttle stop	1	P50-A100001	 P50-A148606	
19	16162-259-004	SCREW, air	1	P50-A100001		
20	16173-260-004	O RING, 2.8 ϕ	3	P50-A100001		
21	16182-011-004	SPRING, throttle stop	1	P50-A100001		
22	16181-202-004	SPRING, air screw	1	P50-A100001		
23	16124-044-004	COVER, oil chamber	1	P50-A100001	 P50-A148606	
24	16123-044-004	PACKING, oil chamber	1	P50-A100001	 P50-A148606	
25	99120-04504	JET, main (# 45)	1	P50-A100001	 P50-A148606	
	99120-04804	JET, main (# 48)	1	P50-A100001	 P50-A148606	
	99120-05004	JET, main (# 50)	1	P50-A100001	 P50-A148606	
	99120-05204	JET, main (# 52)	1	P50-A100001	 P50-A148606	
	99120-05504	JET, main (# 55)	1	P50-A100001	 P50-A148606	

E-8 Carburetor (1)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	99120-05804	JET, main (# 58)	1	P50-A100001.....	P50-A148606	
	99120-06004	JET, main (# 60)	1	P50-A100001.....	P50-A148606	
	99114-044-0501	JET, main (# 50) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0521	JET, main (# 52) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0551	JET, main (# 55) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0581	JET, main (# 58) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0601	JET, main (# 60) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0621	JET, main (# 62) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0651	JET, main (# 65) (Used in Netherland) ...	1	P50-A128651.....		
	99114-044-0681	JET, main (# 68) (Used in Netherland) ...	1	P50-A128651.....		
26	16112-044-004	COVER, float chamber	1	P50-A100001.....	P50-A148606	
27	16174-044-004	O RING, 40.5 ϕ	1	P50-A100001.....		
28	16122-044-004	FLOAT	1	P50-A100001.....	P50-A148606	
29	93500-04008	SCREW, cross, 4 $\times$ 8	1			
30	93600-04008	SCREW, cross, 4 $\times$ 8	4			
31	94111-04000	WASHER, spring, 4 mm	1			

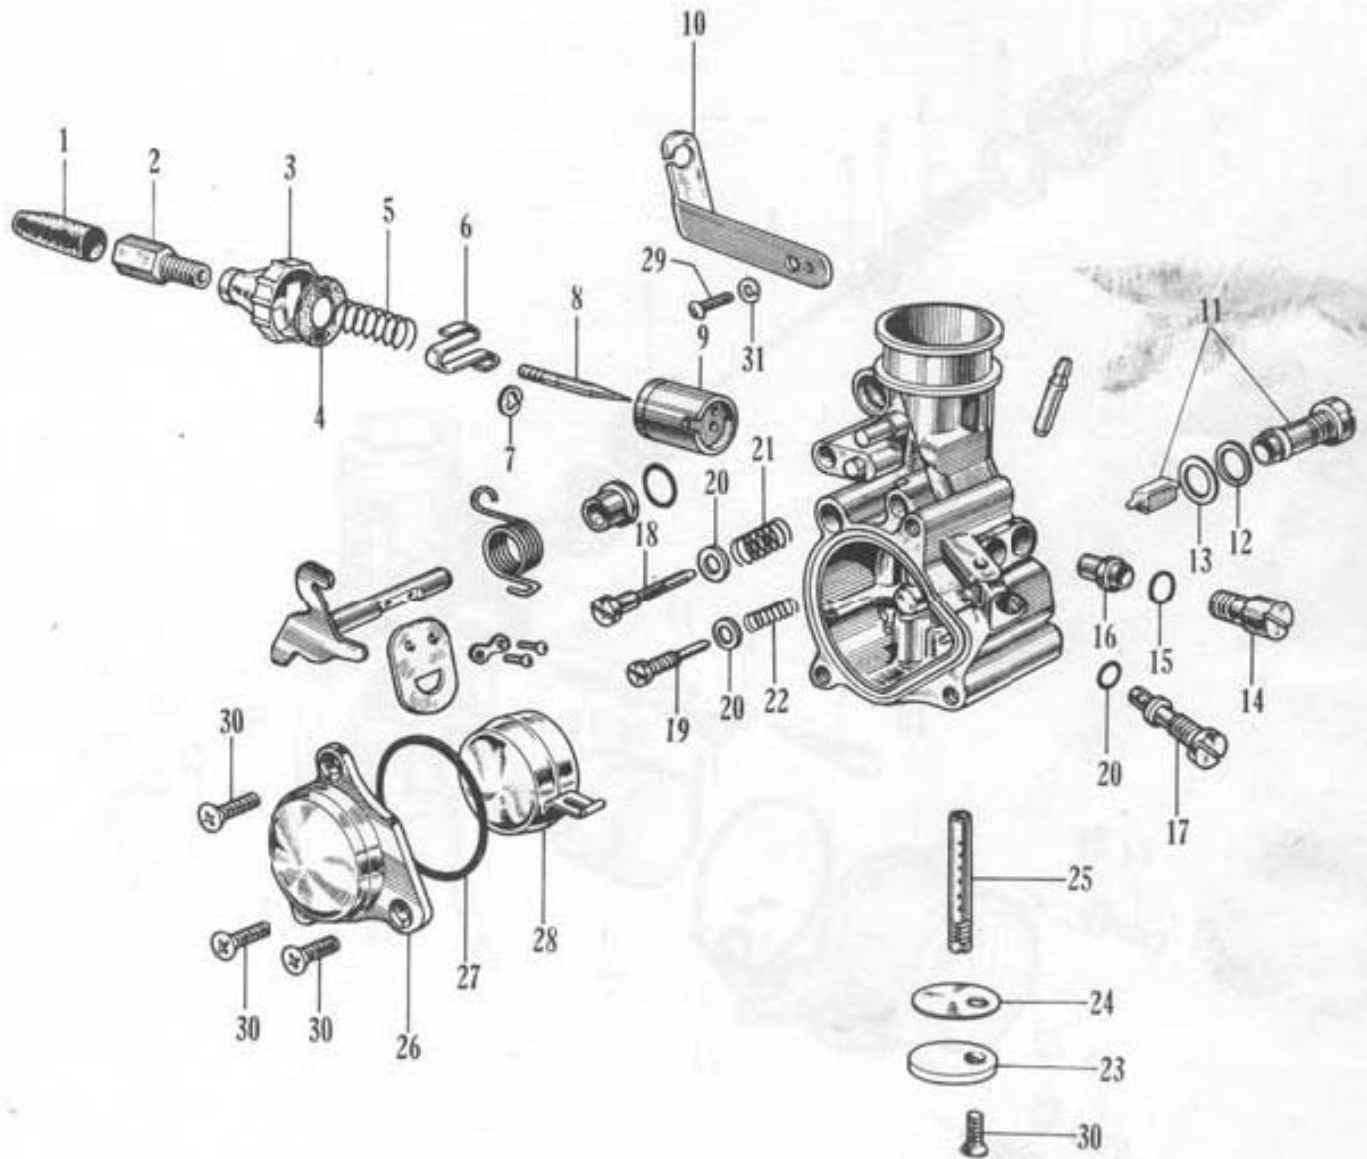

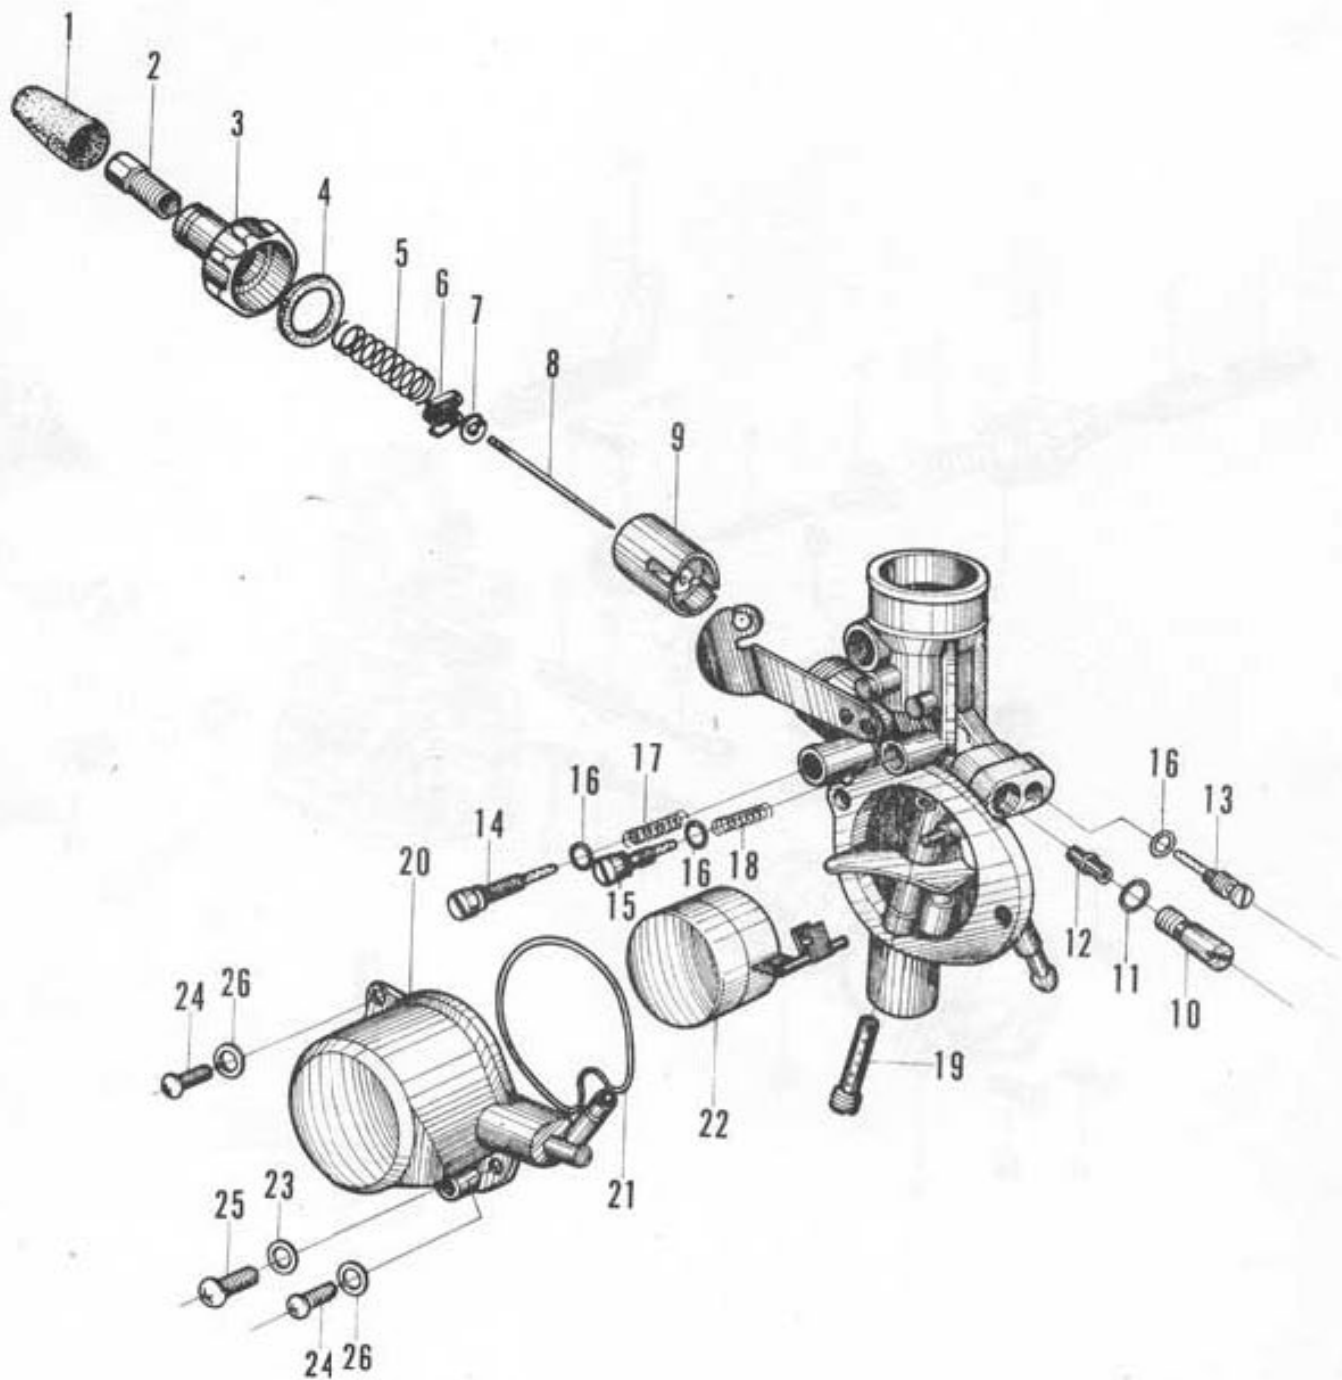


E-8 Carburetor (2)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	16100-044-683	CARBURETOR ASSY.....	1	P50-A148607.....		
1	16194-044-004	CAP, cable	1	P50-A100001.....		
2	16118-044-004	ADJUSTER, cable	1	P50-A100001.....		
3	16119-044-004	TOP.....	1	P50-A100001.....		
4	16171-044-004	WASHER, top	1	P50-A100001.....		
5	16185-044-004	SPRING, throttle	1	P50-A100001.....		
6	16156-044-004	PLATE, needle clip	1	P50-A100001.....		
7	16157-044-004	CLIP, needle	1	P50-A100001.....		
8	16151-044-683	NEEDLE, jet	1	P50-A148607.....		
9	16141-044-683	VALVE, throttle	1	P50-A148607.....		
10	16139-044-004	HOLDER, needle jet	1	P50-A148607.....		
11	16175-001-004	O RING, 4.5 ϕ	1	P50-A100001.....		
12	16133-044-683	JET, needle	1	P50-A148607.....		
13	99144-03514	JET, slow (# 35)	1			
	99144-03814	JET, slow (# 38)	1			
14	16163-044-014	SCREW, throttle stop	1	P50-A148607.....		
15	16162-044-004	SCREW, air	1	P50-A148607.....		
16	16173-260-004	O RING, 2.8 ϕ	3	P50-A100001.....		
17	16182-011-004	SPRING, throttle stop	1	P50-A100001.....		
18	16181-202-004	SPRING, air screw.....	1	P50-A100001.....		
19	99120-05514	JET, main (# 55)	1			
	99120-05814	JET, main (# 58)	1			
	99120-06014	JET, main (# 60)	1			
20	16112-044-014	COVER, float chamber	1	P50-A148607.....		
21	16174-044-004	O RING, 40.5 ϕ	1	P50-A100001.....		
22	16122-044-014	FLOAT	1	P50-A148607.....		
23	16189-044-004	WASHER, fiber, 4 mm	1	P50-A148607.....		
24	93500-03008	SCREW, cross, 3 $\times$ 8	2			
25	93500-04008	SCREW, cross, 4 $\times$ 8	1			
26	94111-03000	WASHER, spring, 3 mm	2			

F-1 Steering Handle


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	90114-044-010	SCREW, handle lever pivot	3	P50-A100001.....		
2	45450-044-000	CABLE, front brake	1	P50-A100001.....		
3	43450-044-000	CABLE, rear brake	1	P50-A100001.....		
4	14950-044-000	CABLE, decompression	1	P50-A100001.....		
5	14955-044-000	GROMMET, decompression cable	1	P50-A100001.....		
6	53175-044-010	LEVER, right handle	1	P50-A100001.....		
7	53178-044-010	LEVER, left handle	1	P50-A100001.....		
8	53181-044-010	LEVER, decompression	1	P50-A100001.....		
9	35300-044-010	SWITCH ASSY., horn button	1	P50-A100001.....		
10	90101-044-000	SCREW, throttle grip set	1	P50-A100001.....		
11	17910-044-000	CABLE, throttle	1	P50-A100001.....		
12	17911-044-000	GROMMET, throttle cable	1	P50-A100001.....		
13	53161-044-000	HINGE, throttle cable	1	P50-A100001.....		
14	53162-044-000	HOLDER, outer, throttle cable	1	P50-A100001.....		
15	53163-044-000	STOPPER, throttle grip	1	P50-A100001.....		
16	53165-044-010	RUBBER, right, grip	1	P50-A100001.....		
17	53141-044-000	PIPE, throttle grip	1	P50-A100001.....		
18	53166-044-010	RUBBER, left, grip	1	P50-A100001.....		
19	53109-044-000	NUT, handle set	1	P50-A100001.....		
20	90301-044-000	NUT, steering head stem.....	1	P50-A100001.....		
21	81211-044-000	BRACKET, front carrier	1	P50-A100001.....		
22	90151-044-000	BOLT, handle set	1	P50-A100001.....		
23	53100-044-050	HANDLE, steering	1	P50-A100001.....		
	53100-044-671	HANDLE, steering (Used in U.S.A.)	1	P50-A167186.....		
24	93500-03012	SCREW, cross, 3×12	1			
25	94001-05000	NUT, hex., 5 mm	3			
26	94111-03000	WASHER, spring, 3 mm	1			
27	35310-044-680	PLUG, horn button (Used in Netherland)	1	P50-A128651.....		
28	90544-044-000	WASHER, handle set	1	P50-A100001.....		
	53185-044-670	PLUG, handle pipe (Used in U.S.A.)	1	P50-A167186.....		

F-1 Steering Handle

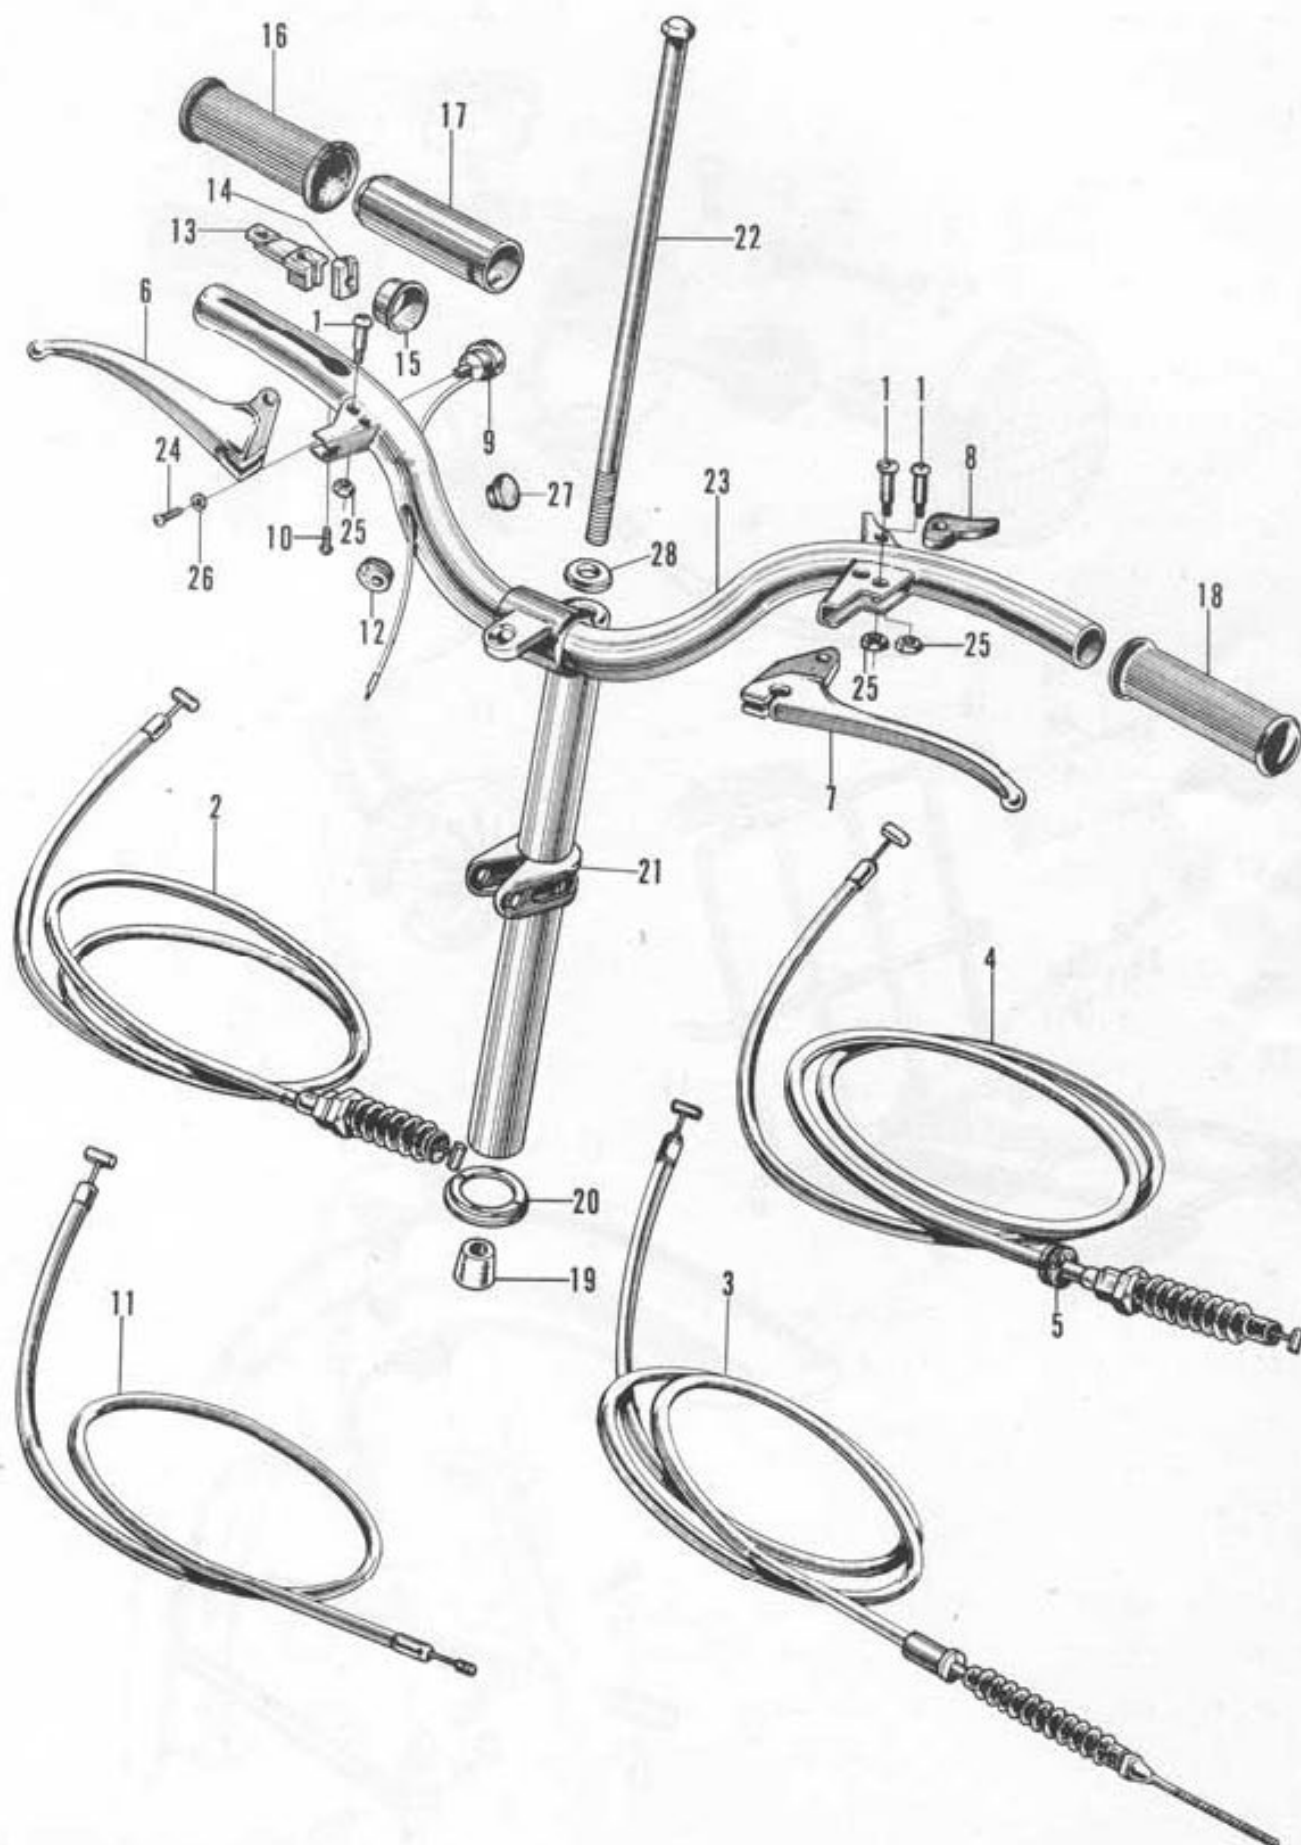

FRAME GROUP

F-2 Head Light • Carrir • Front Fender

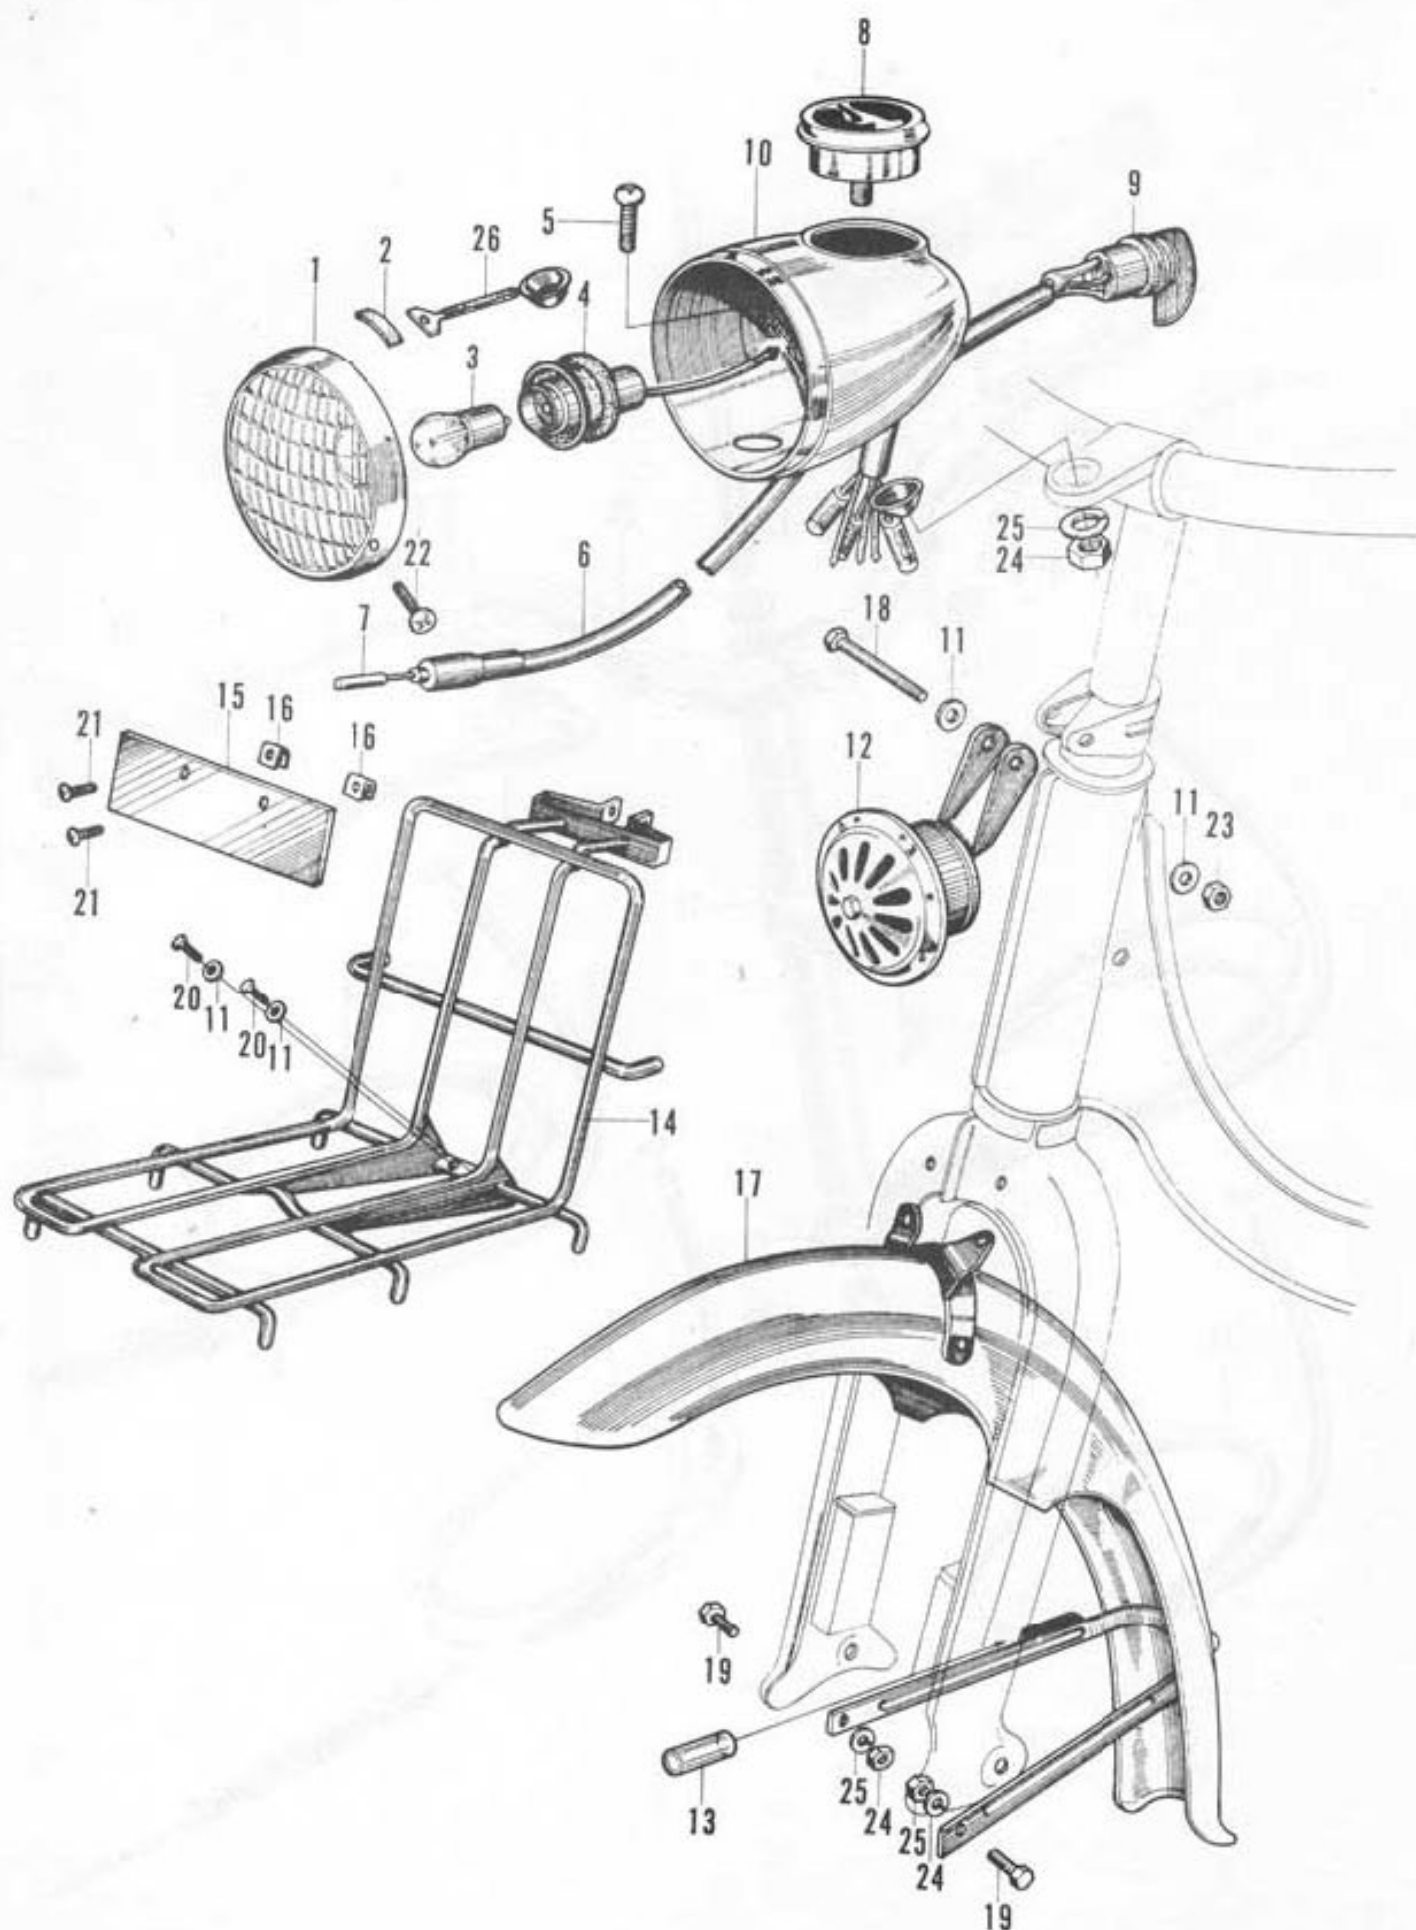


F-2 Head Light • Carrir • Front Fender

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	33100-044-000	LIGHT ASSY., head	1	P50-A100001.....		
	33100-044-620	LIGHT ASSY., head (Used in France, Ned.)	1	P50-A100001.....		
1	33121-044-000	LENS, head light	1	P50-A100001.....		
2	33123-044-000	PLUG, head light window	1	P50-A100001.....		
3	34901-044-690	BULB, head light (Local arrangement) Ned	1	P50-A100001.....	6V. 10 W.	
4	33130-044-000	SOCKET, head light	1	P50-A100001.....		
	33130-044-620	SOCKET, head light (Used in France) ...	1	P50-A100001.....		
5	90121-044-000	SCREW, head light set.....	1	P50-A100001.....	P50-A100080	
	90152-044-000	SCREW, head light set.....	1	P50-A100081.....		
6	44830-044-030	CABLE, speedometer.....	1	P50-A100001.....		
	44830-044-670	CABLE, speedometer (Used in U.S.A.) ...	1	P50-A167186.....		
7	44831-044-000	CABLE, inner, speedometer	1	P50-A100001.....		
	44831-044-670	CABLE, inner, speedometer	1	P50-A167186.....		
		(Used in U.S.A.)				
8	37200-044-680	SPEEDOMETER (km)	1	P50-A100001	P50-A100080	
	37200-044-682	SPEEDOMETER (km)	1	P50-A100081.....		
	37200-044-691	SPEEDOMETER (km)	1	P50-A128651.....		
		(Used in Netherland)				
	37201-044-680	SPEEDOMETER (MPH)	1	P50-A100001	P50-A100080	
	37200-044-602	SPEEDOMETER (MPH)	1	P50-A100081.....		
9	35100-044-030	SWITCH, lighting	1	P50-A100001.....		
10	63101-044-000C	CASE, head light (Scarlet)	1	P50-A100001.....	P50-A100080	
	63101-044-000XE	CASE, head light (Sky blue)	1	P50-A100001.....	P50-A100080	
	63101-044-000XP	CASE, head light (Peppermint blue)	1	P50-A100001.....	P50-A100080	
	63101-044-000XN	CASE, head light (Apple green)	1	P50-A100001.....	P50-A100080	
	63101-044-000XT	CASE, head light (Charcoal gray)	1	P50-A100001.....	P50-A100080	
	63101-044-000Z	CASE, head light (Non sanding)	1	P50-A100001.....	P50-A100080	
	63101-044-010 R.	CASE, head light (Ivory white)	1	P50-A128651.....		
		(Used in Netherland)				
11	90525-030-000	WASHER B, handle holder setting	4	P50-A100001		
12	38100-044-010	HORN	1	P50-A100001.....		
	38100-044-670	HORN (Used in U.S.A.)	1	P50-A167186		
13	61105-044-000	PROTECTOR, wire clip	1	P50-A100001.....		
14	81200-044-010XL	CARRIER, front (Ivory white)	1	P50-A100001.....		
15	61131-044-600	PLATE, front number (Used in England)	1	P50-A100001.....		
	87904-044-690	PLATE YELLOW.....	2		Ned.	

F-2 Head Light · Carrir · Front Fender

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
16	61135-044-600	BRACKET, front number plate..... (Used in England)	1	P50-A100001.....		
17	61100-044-020XL	FENDER, front (Ivory white).....	1	P50-A100001.....		
	61100-044-020R	FENDER, front (Ivory yellow) (Used in Netherland)	1	P50-A128651.....		
18	92000-06040	BOLT, hex., 6×40	1			
19	92000-08042	BOLT, hex., 8×42	2			
	93000-08045	BOLT, hex., 8×45	2			
20	93500-06014	SCREW, cross, 6×14	2			
21	93500-06016	SCREW, cross, 6×16.....	2			
22	93714-03010	SCREW, cross, 3×10.....	1			
23	94001-06000	NUT, hex., 6 mm	1			
	90345-044-000	NUT, head light	1	P50-A100081.....		
24	94001-08000	NUT, hex., 8 mm	3			
25	94111-08000	WASHER, spring, 8 mm	3			
27	90559-044-000	WASHER B, light case setting	1	P50-A100081.....		
28	34902-044-000	EARTE, head light... ..	1	P50-A100081.....		

F-2 Head Light • Carrir • Front Fender

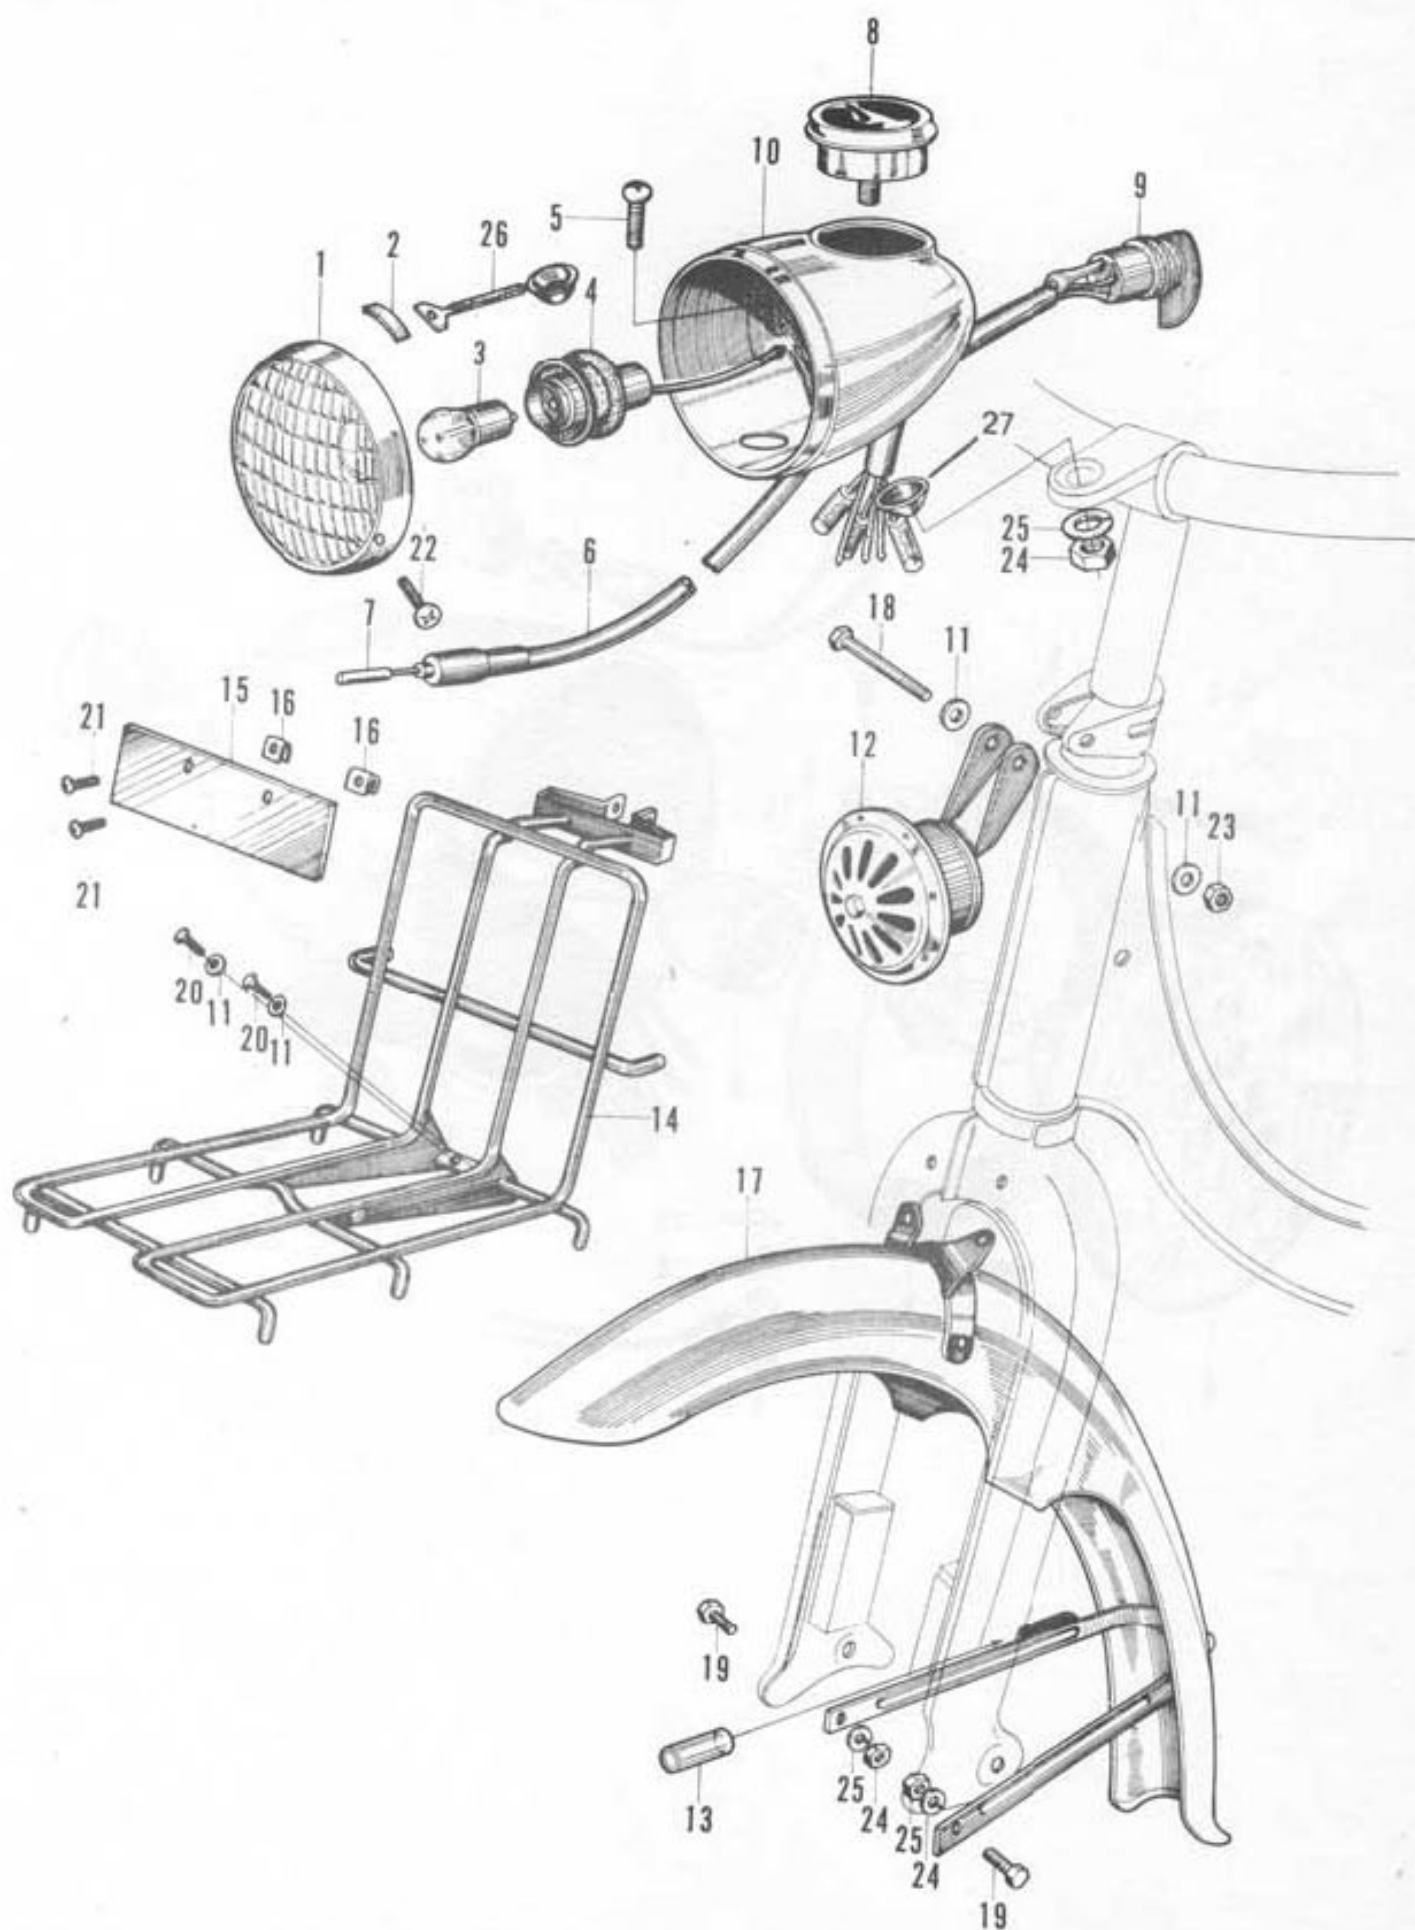

This technical drawing is an exploded view of a portable electronic device, likely a radio or a small amplifier. The main components are shown in their relative positions as they would be assembled. The central part is a cylindrical metal housing (14) with a handle (12) on top. To the left is a circular speaker grille (6) mounted on a frame (2). Various internal components like the speaker (9), transformer (4), and electronic components (10, 11, 13) are shown in their respective positions. The diagram includes 19 numbered callouts for individual parts and sub-assemblies.

Numbered parts shown in the diagram:

- 1: Small screw/bolt
- 2: Speaker frame
- 3: Long screw/bolt
- 4: Transformer
- 5: Small component
- 6: Speaker grille
- 7: Small component
- 8: Small component
- 9: Speaker
- 10: Small component
- 11: Wire/lead
- 12: Handle
- 13: Electronic component
- 14: Main housing
- 15: Small component
- 16: Small component
- 17: Small component
- 18: Small component
- 19: Small component


F-3 Head Light (Used in U.S.A.)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	33100-044-671	LIGHT ASSY., head	1	P50-A167186.....		
1	33101-044-671	RIM, head light	1	P50-A167186.....		
2	34901-001-671	BULB, head light	1	P50-A167186.....		
3	33102-001-003	SCREW, head light beam adjust	1	P50-A167186.....		
4	33107-001-003	SPRING, beam adjust	1	P50-A167186.....		
5	33117-001-003	NUT, beam adjust	1	P50-A167186.....		
6	33120-044-671	UNIT, head light	1	P50-A167186.....		
7	33125-200-030	SCREW, unit holder	2	P50-A167186.....		
8	33128-200-033	NUT, unit holder	2	P50-A167186.....		
9	33130-044-671	SOCKET, head light	1	P50-A167186.....		
10	33182-044-671	PIN, lock, 5 mm	2	P50-A167186.....		
11	33183-044-671	CORD, sub	1	P50-A167186.....		
12	35100-044-671	SWITCH ASSY., lighting	1	P50-A167186.....		
13	37550-044-671	LAMP ASSY., beam pilot	1	P50-A167186.....		
14	63101-044-671XL	CASE, head light (Ivory white).....	1	P50-A167186.....		
15	93500-05008	SCREW, cross, 5×8	1			
16	94001-06000	NUT, hex., 6 mm	1			
17	92000-06028	BOLT, hex., 6×28	1			
18	94111-06000	WASHER, spring, 6 mm	1			
19	94101-05000	WASHER, flat, 5 mm	1			
	37551-044-670	LENS, beam pilot	1	P50-A167186.....		


F-4 Front Fork · Front Cushion

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	53600-001-020	LOCK, handle	1	P50-A100001.....		
2	53212-044-000	RACE, bottom, steering cone	1	P50-A100001.....		
3	51404-044-030	RUBBER, front cushion rebound stopper	2	P50-A100001.....		
4	51100-044-050C	FORK, front (Scarlet)	1	P50-A100001.....P50-A136371		
	51100-044-050XE	FORK, front (Sky blue)	1	P50-A100001.....P50-A136371		
	51100-044-050XP	FORK, front (Peppermint blue)	1	P50-A100001.....P50-A136371		
	51100-044-050XN	FORK, front (Apple green)	1	P50-A100001.....P50-A136371		
	51100-044-050XT	FORK, front (Charcoal gray)	1	P50-A100001.....P50-A136371		
	51100-044-050Z	FORK, front (Non sanding)	1	P50-A100001.....P50-A136371		
	51100-044-070C	FORK, front (Scarlet)	1	P50-A136372		
	51100-044-070XE	FORK, front (Sky blue)	1	P50-A136372		
	51100-044-070XP	FORK, front (Peppermint blue)	1	P50-A136372		
	51100-044-070XN	FORK, front (Apple green)	1	P50-A136372		
	51100-044-070XT	FORK, front (Charcoal gray)	1	P50-A136372		
	51100-044-070Z	FGRK, front (Non sanding)	1	P50-A136372		
5	51231-044-000	COLLER, front arm pivot	2	P50-A100001.....		
6	51223-044-000	SEAL, front arm pivot bush	4	P50-A100001.....		
7	90149-044-000	BOLT, under, front cushion	2	P50-A100001.....		
8	51400-044-030	CUSHION ASSY., front	2	P50-A100001.....		
	51400-044-691	CUSHION ASSY., front (Used in Netherland)	2	P50-A128651.....		
9	50401-044-040	METAL, upper, front cushion	2	P50-A100001.....		
10	51405-044-000	RUEBER, front cushion stopper	2	P50-A100001.....		
	51405-044-690	RUEBER, front cushion stopper (Used in Netherland)	2	P50-A128651.....		
11	51403-044-040	SPRING, front cushion	2	P50-A100001.....		
	51403-044-690	SPRING, front cushion (Used in Netherland)	2	P50-A128651.....		
12	51402-044-030	METAL, lower, front cushion	2	P50-A100001.....		
13	51213-044-000	SEAL, front cushion under bush	4	P50-A100001.....		
14	51211-044-000	BUSH, under, front cushion	4	P50-A100001.....		
15	51221-044-000	BUSH, front arm pivot	4	P50-A100001.....		
16	51210-044-040	ARM, right, front suspension	1	P50-A100001.....P50-A117520		
	51210-044-303	ARM, right, front suspension	1	P50-A117521.....		
	51210-044-690	ARM, right, front suspension	1	P50-A128651.....		

F-4 Front Fork · Front Cushion

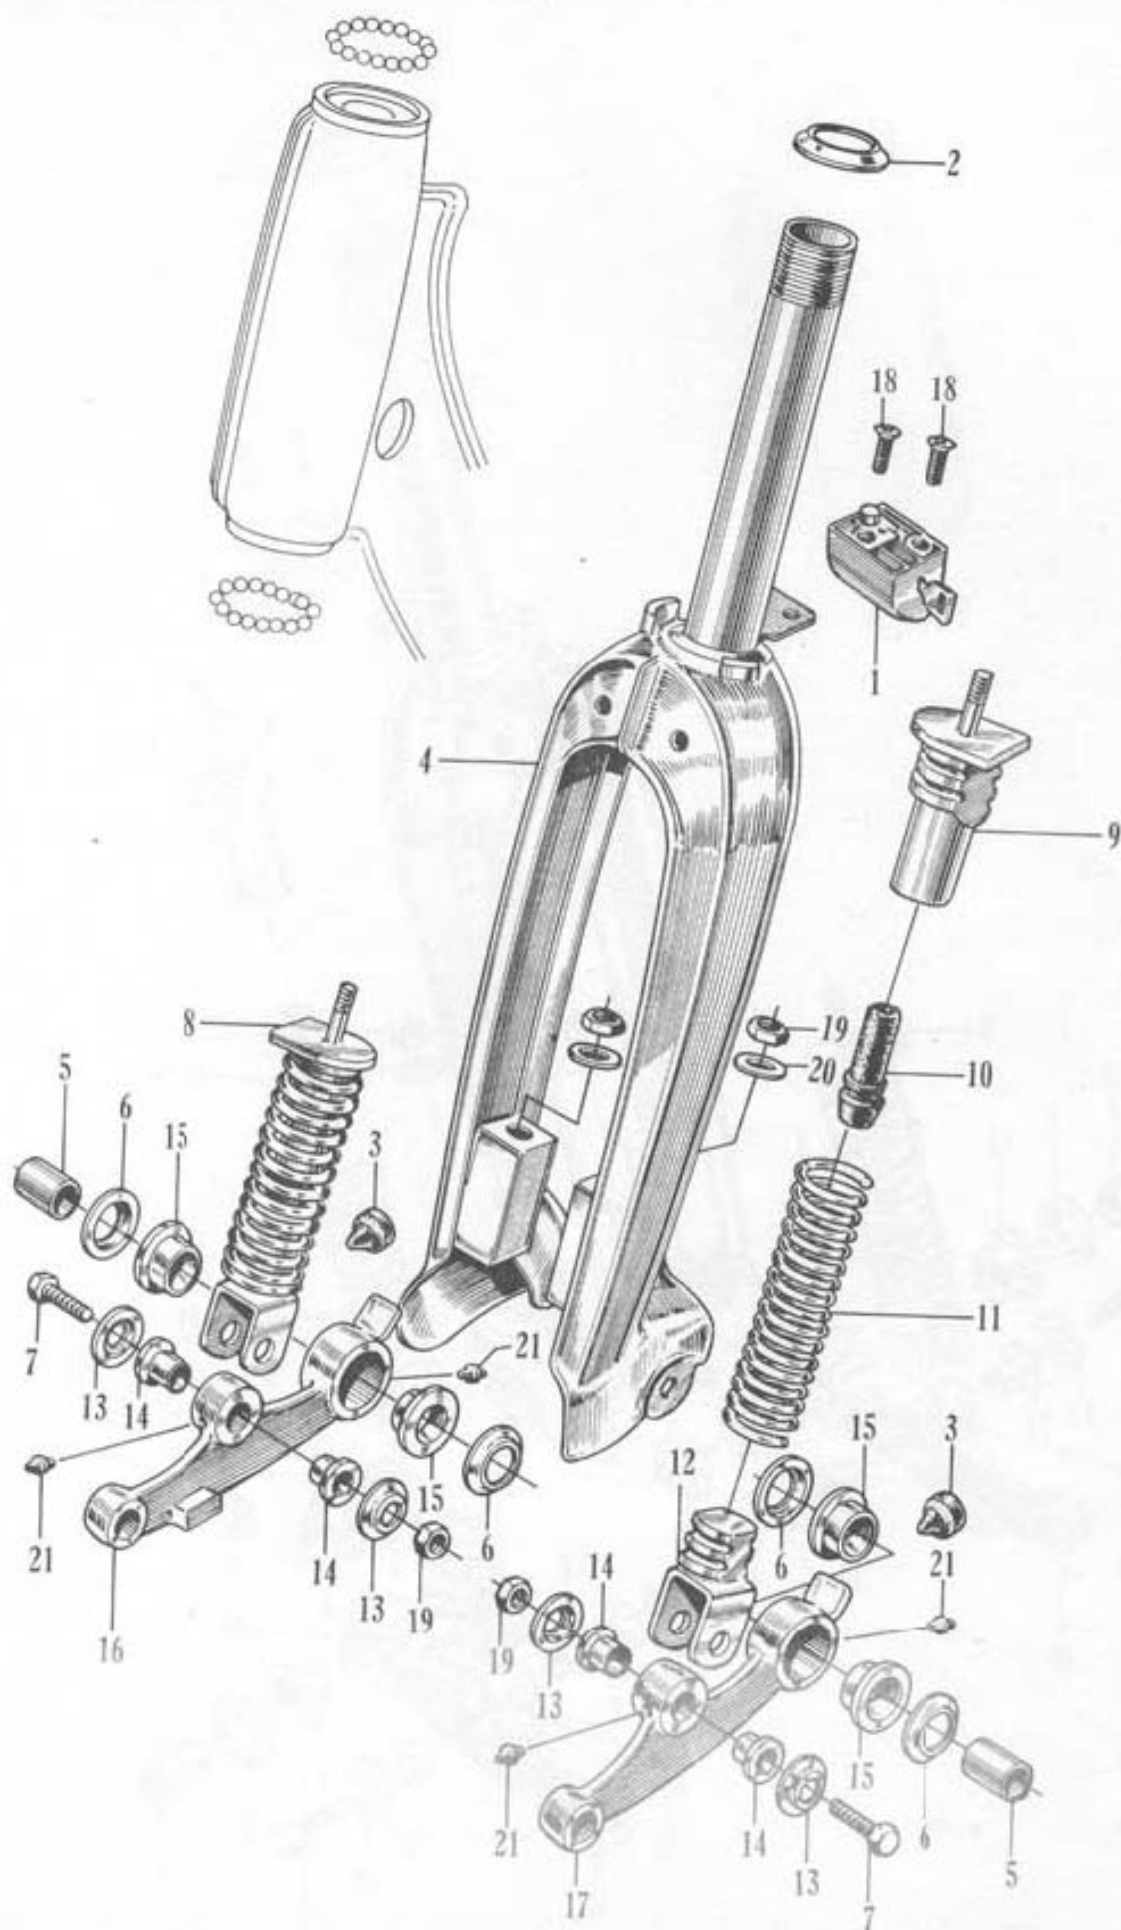

F-4 Front Fork • Front Cushion

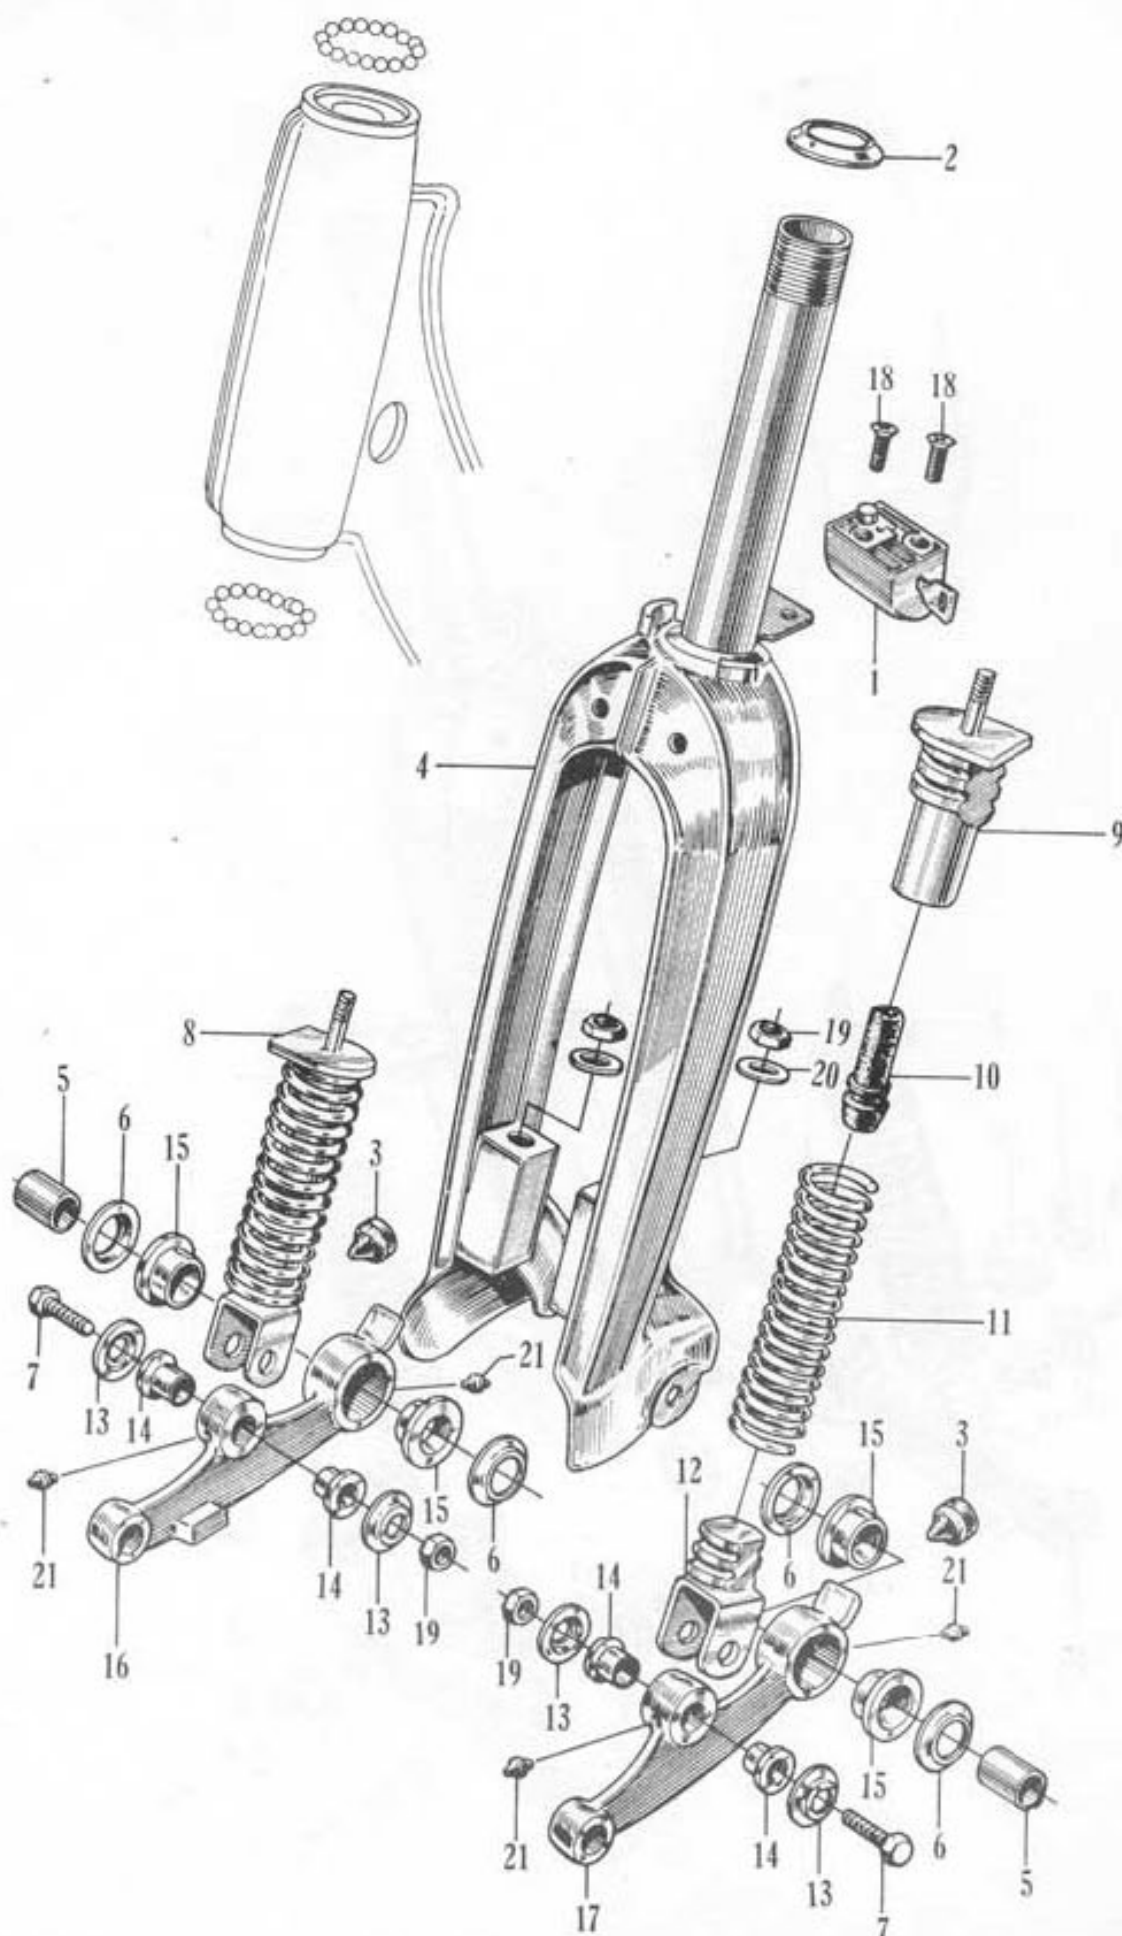


F-4 Front Fork • Front Cushion


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
17	51220-044-040	ARM, left, front suspension	1	P50-A100001	P50-A117520	
	51220-044-303	ARM, left, front suspension	1	P50-A117521		
	51220-044-690	ARM, left, front suspension	1	P50-A128651		
		(Used in Netherland)				
18	93600-06012	SCREW, cross, 6×12	2			
19	94001-06000	NUT, hex., 6 mm	4			
20	94111-06000	WASHER, spring, 6 mm	2			
21	96201-30000	NIPPLE, grease, 4.5 φ	4			

F-5 Front Wheel

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	45410-044-030	ARM, front brake	1	P50-A100001		
2	44301-044-000	AXLE, front wheel	1	P50-A100001		
3	44311-044-010	COLLAR, side, front wheel.....	1	P50-A100001		
4	45133-044-000	SPRING, front brake shoe	1	P50-A100001		
5	45120-044-000	SHOE, front brake	2	P50-A100001.....		
6	44806-044-030	GEAR, speedometer	1	P50-A100001	P50-A135601	
	44806-044-040	GEAR, speedometer	1	P50-A135602		
	44806-044-690	GEAR, speedometer (Used in Netherland)	1	P50-A128651		
7	45131-044-020	CAM, front brake	1	P50-A100001.....	P50-A107670	
	45131-044-030	CAM, front brake	1	P50-A107671		
8	90751-044-000	OIL-SEAL, 39475	1	P50-A100001		
9	45100-044-050	PANEL, front brake	1	P50-A100001	P50-A100070	
	45100-044-060	PANEL, front brake	1	P50-A100071	P50-A107670	
	45100-044-070	PANEL, front brake	1	P50-A107671		
10	90752-044-000	OIL-SEAL, 17326	2	P50-A100001.....		
11	44620-044-000	COLLER, front axle distance	1	P50-A100001		
12	44711-044-000	TIRE, front wheel (2.00~17)	1	P50-A100001.....		
13	44712-044-000	TUBE, wheel	1	P50-A100001		
14	44713-001-000	FLAP, tire	1	P50-A100001		
15	44701-044-010	RIM, front wheel	1	P50-A100001		
	44701-044-690	RIM, front wheel (Used in Netherland) ...	1	P50-A128651.....		
16	44601-044-010	HUB, front wheel	1	P50-A100001.....		
17	92000-05022	BOLT, hex., 5×22	1			
18	93714-04016	SCREW, cross, 4×16	1			
19	94001-05000	NUT, hex., 5 mm	1			
20	94001-10000	NUT, hex., 10 mm	1			
21	94101-06000	WASHER, flat, 6 mm	1			
22	96100-62010	BEARING, ball, 6201	2			
23	97142-111941	SPOKE A, # 13.177.....	16			
	97142-112451	SPOKE A, # 13×202.5 (Used in Netherland)	16			
24	97243-111941	SPOKE A, # 13.177.....	16			
	97141-112441	SPOKE A, # 13×202 (Used in Netherland)	16			
	44809-044-000	WASHER, speedometer gear	2	P50-A135602		

F-5 Front Wheel

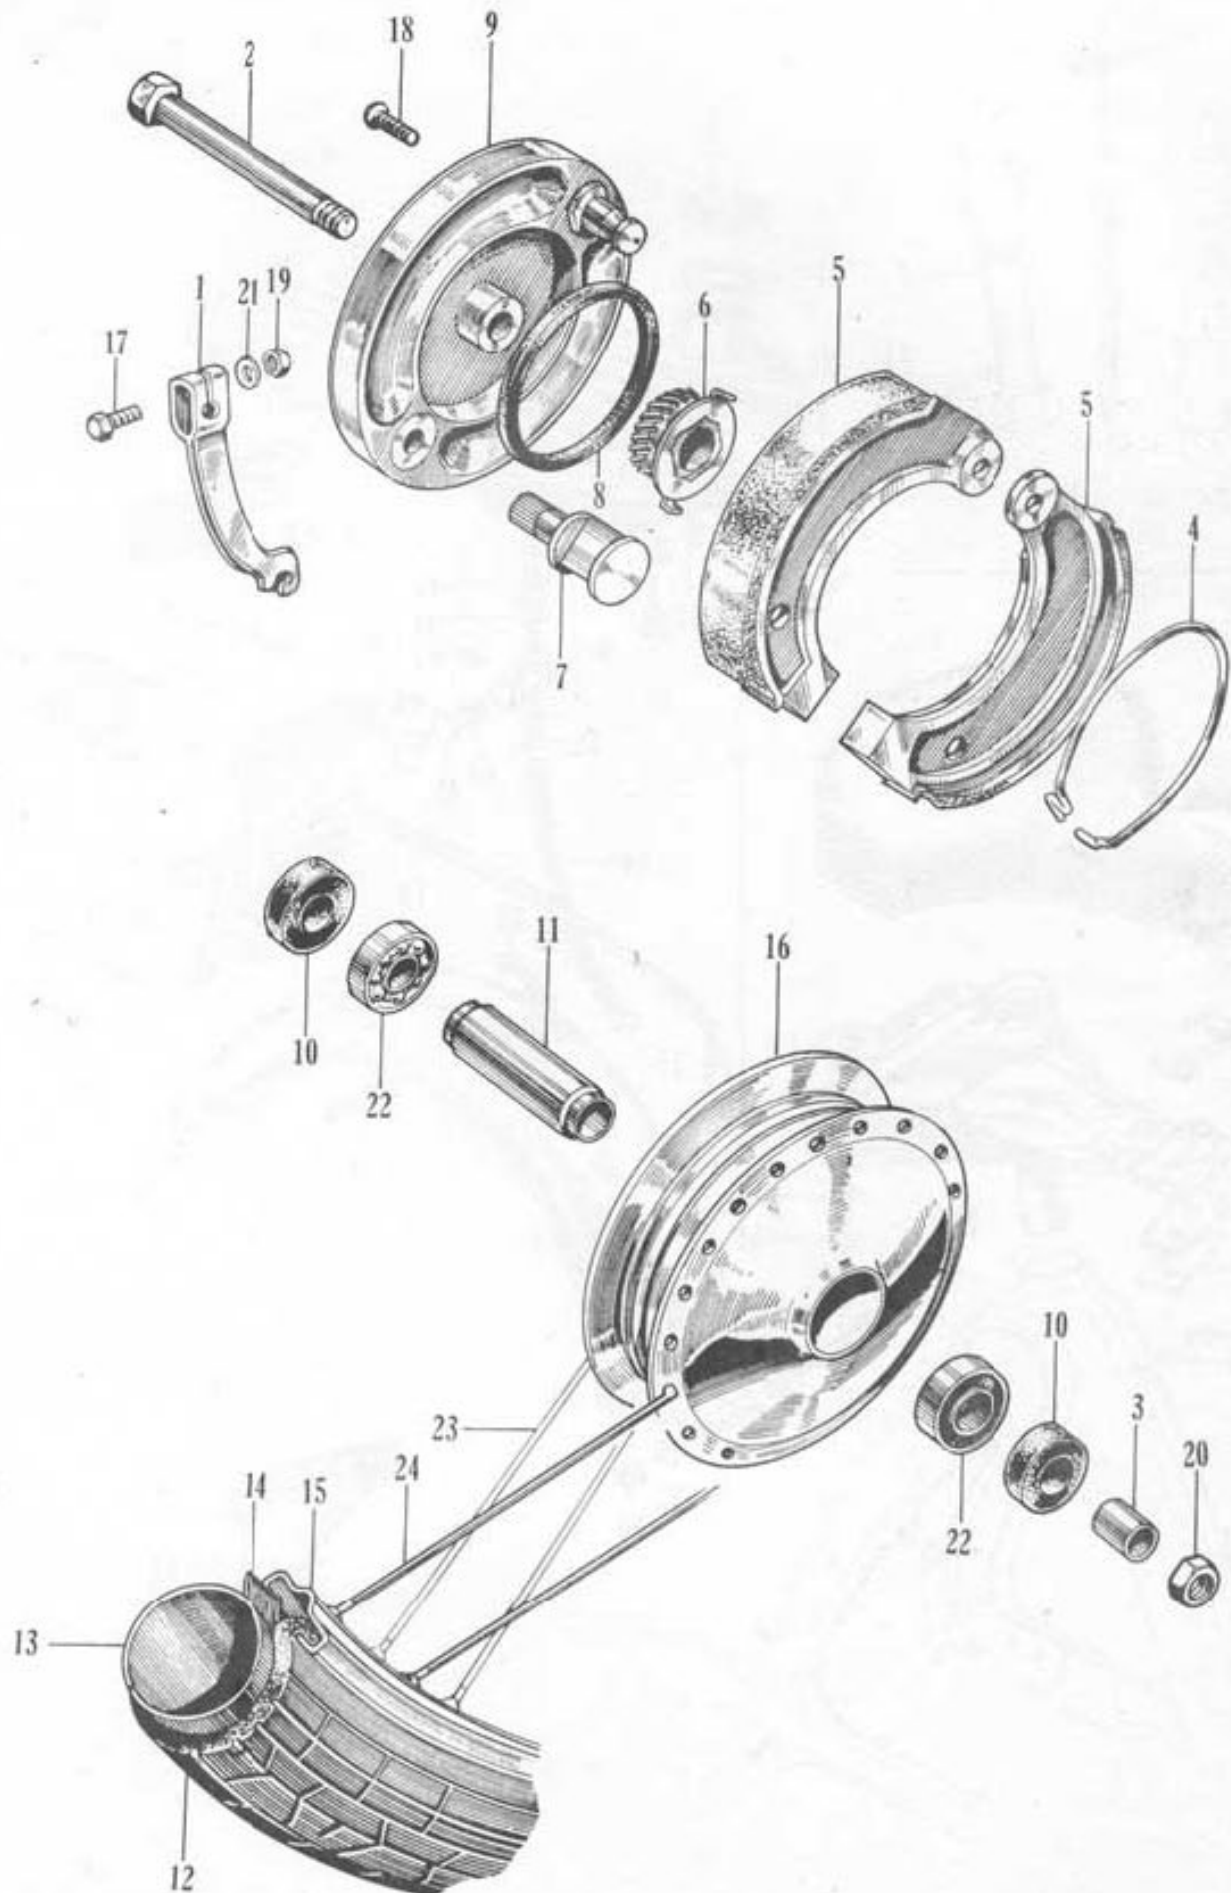

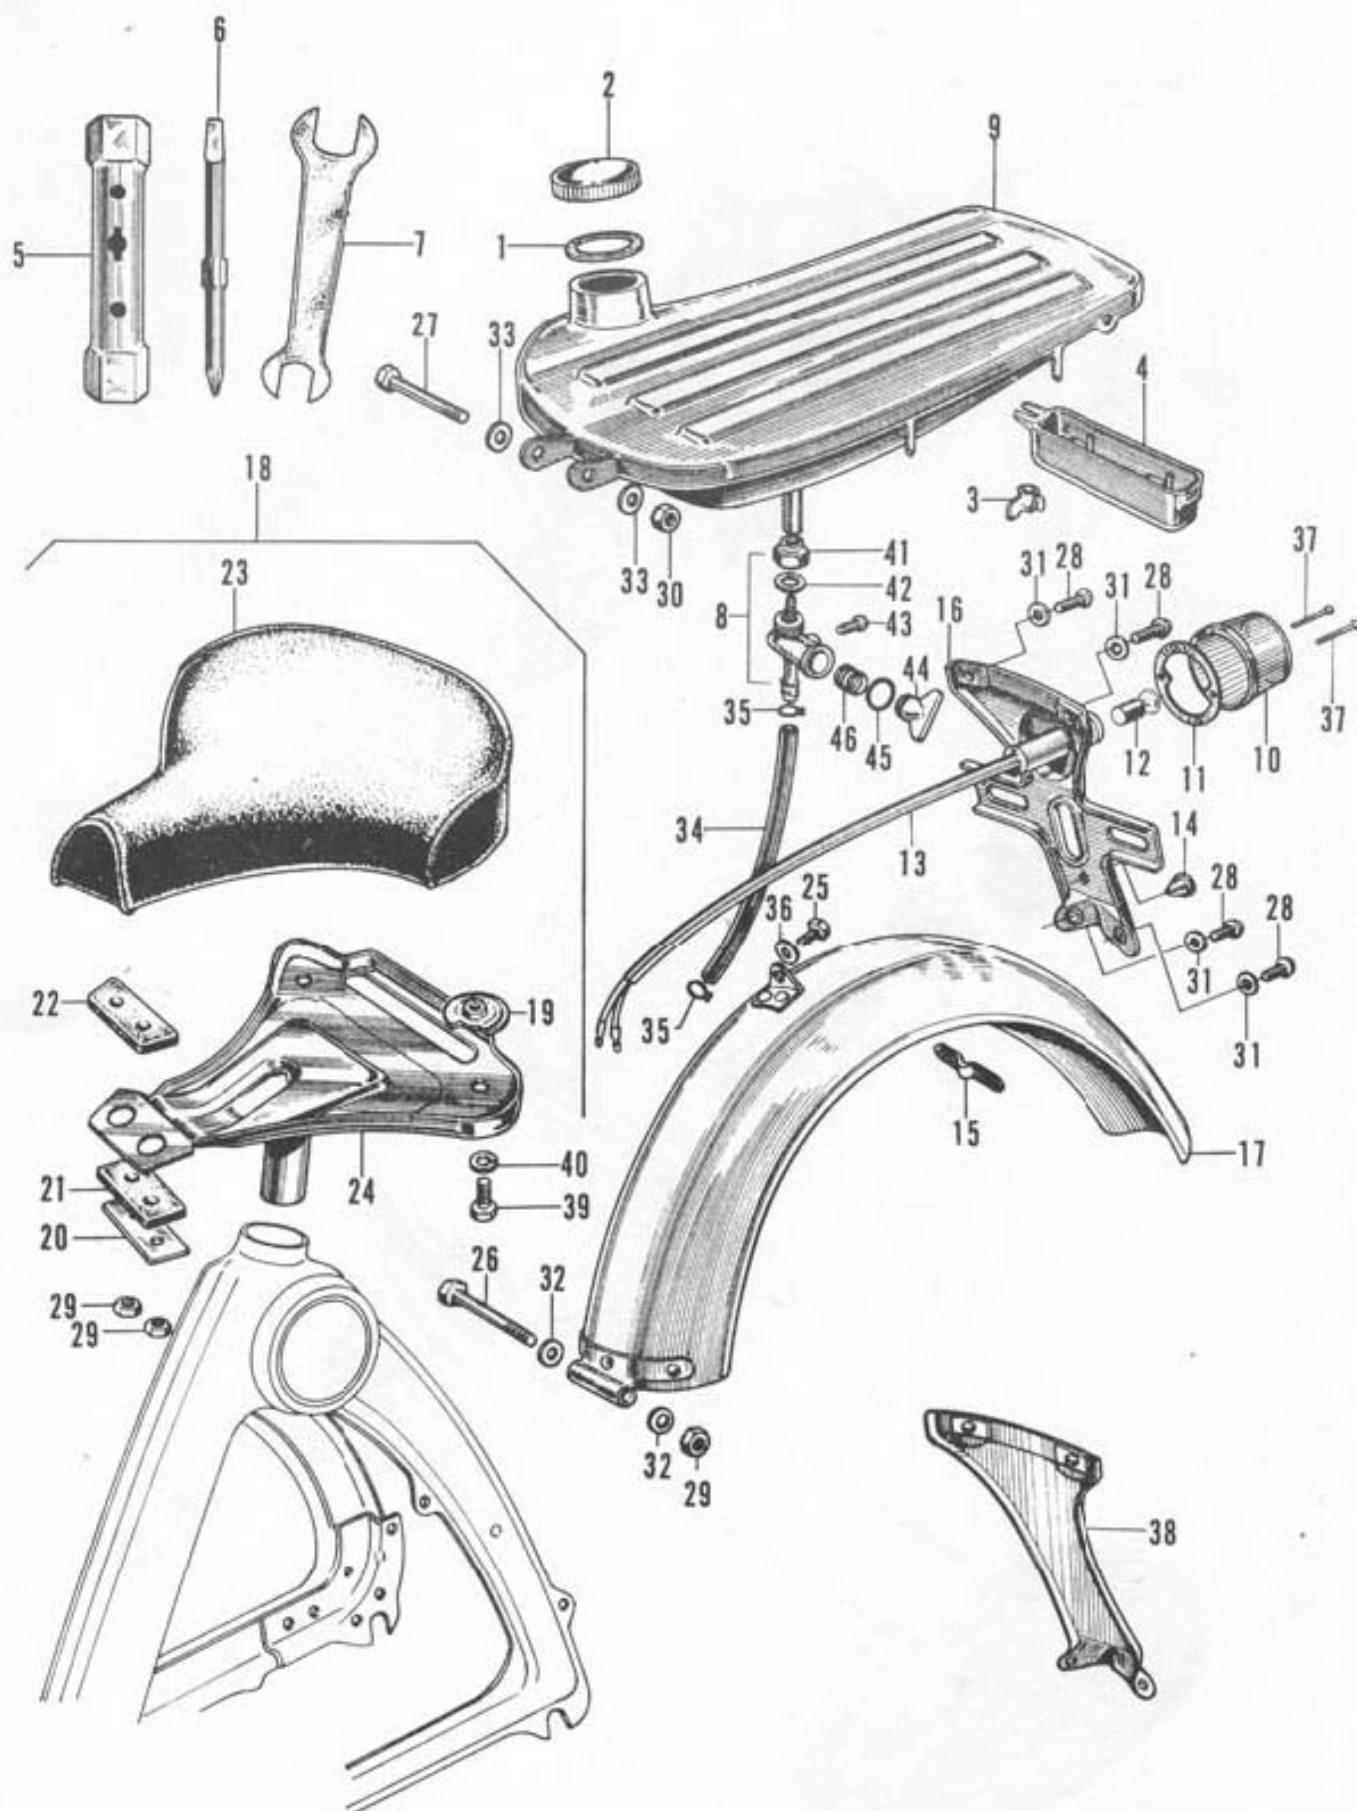


F-6 Seat • Fuel Tank • Rear Fender


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	17631-253-000	PACKING, fuel filler cap.....	1	P50-A100001.....		
2	17620-044-000	CAP, fuel filler	1	P50-A100001.....		
3	90325-044-000	NUT, tool box setting	1	P50-A100001.....		
4	83500-044-010C	BOX, tool (Scarlet)	1	P50-A100001.....		
	83500-044-010XE	BOX, tool (Sky blue).....	1	P50-A100001.....		
	83500-044-010XP	BOX, tool (Peppermint blue)	1	P50-A100001.....		
	83500-044-010XN	BOX, tool (Apple green)	1	P50-A100001.....		
	83500-044-010XT	BOX, tool (Charcoal gray)	1	P50-A100001.....		
5	83517-044-000	WRENCH, spark plug	1	P50-A100001.....		
6	83513-044-000	DRIVER.....	1	P50-A100001.....		
7	83511-044-000	SPANNER, 10×14	1	P50-A100001.....		
8	16950-044-010	COCK ASSY., fuel.....	1	P50-A100001.....		
9	17500-044-010C	TANK, fuel (Scarlet).....	1	P50-A100001.....		
	17500-044-010XE	TANK, fuel (Sky blue).....	1	P50-A100001.....		
	17500-044-010XP	TANK, fuel (Peppermint blue)	1	P50-A100001.....		
	17500-044-010XN	TANK, fuel (Apple green)	1	P50-A100001.....		
	17500-044-010XT	TANK, fuel (Charcoal gray)	1	P50-A100001.....		
	17500-044-010Z	TANK, fuel (Non sauding).....	1	P50-A100001.....		
	33700-044-000	LIGHT ASSY., tail.....	1	P50-A100001.....		
	33700-044-620	LIGHT ASSY., tail (Used in France)	1	P50-A100001.....		
10	33701-044-000	LENS, tail light	1	P50-A100001.....		
11	33709-044-000	PACKING, tail light lens.....	1	P50-A100001.....		
12	34906-044-000	BULB, tail light	1	P50-A100001.....		
13	33703-044-000	SOCKET, tail light.....	1	P50-A100001.....		
	33703-044-621	SOCKET, tail light (Used in France)	1	P50-A100001.....		
14	33711-044-000	RUBBER, number plate bracket shock ...	1	P50-A100001.....		
15	80109-044-010	PLATE, number plate bracket nut	1	P50-A100001.....		
16	33705-044-000	BRACKET, number plate	1	P50-A100001.....		
17	80100-044-040XL	FENDER, rear (Ivory white)	1	P50-A100001.....		
	80100-044-620XL	FENDER, rear (Ivory white) (Used in France)	1	P50-A100001.....		
	80100-044-600XL	FENDER, rear (Ivory white) (Used in England)	1	P50-A100001.....		
	80100-044-690A	FENDER, rear (White)..... (Used in Netherland)	1	P50-A128651.....		

F-6 Seat • Fuel Tank • Rear Fender

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	80100-044-670XL	FENDER, rear (Ivory white) (Used in U.S.A.)	1	P50-A167186		
18	77100-044-010	SADDLE ASSY.	1	P50-A100001		
19	77133-044-020	PLATE, spring setting	2	P50-A100001		
20	77131-044-000	WASHER, saddle hinge rubber	1	P50-A100001		
21	77123-044-300	RUBBER B, saddle hinge	1	P50-A100001		
22	77123-044-300	RUBBER A, saddle hinge	1	P50-A100001		
23	77011-044-010	SEAT	1	P50-A100001		
24	77135-044-000	FRAME, saddle	1	P50-A100001		
25	92000-06010	BOLT, hex., 6×10	1			
	92000-06012	BOLT, hex., 6×12	1			
	92000-06016	BOLT, hex., 6×16 (Used in Netherland)	1			
25	92000-06050	BOLT, hex., 6×50	1			
	92000-06036	BOLT, hex., 6×36 (Used in Netherland)	1			
27	92000-08042	BOLT, hex., 8×42	1			
28	93500-05012	SCREW, cross, 5×12	4			
29	94001-06000	NUT, hex., 6 mm	3			
30	94001-08000	NUT, hex., 8 mm	1			
31	94101-05000	WASHER, flat, 5 mm	4			
32	94101-06000	WASHER, flat, 6 mm	3			
33	94101-08000	WASHER, flat, 8 mm	2			
34	95001-45185	TUBE, fuel, 4.5×185	1			
	17511-044-000	TUBE, fuel	1	P50-A101964		
35	95002-45000	CLIP, fuel tube, 4.5	2			
36	90527-044-000	WASHER, rear fender setting	1	P50-A100331		
37	93500-03035	SCREW, cross, 3×35	2			
38	33712-044-690A	STAY, rear fender (Used in Netherland)	1	P50-A128651		
39	92000-06012	BOLT, hex., 6×12	2			
40	94111-06000	WASHER, spring, 6 mm	2			
41	16962-044-004	NUT, turn buckle	1	P50-A100001		
42	16958-044-004	PACKING, turn buckle nut	1	P50-A100001		
43	16963-044-004	SCREW, lever stopper	1	P50-A100001		
44	16953-044-004	LEVER, hook	1	P50-A100001		
45	16997-044-004	O RING	1	P50-A100001		
46	16960-044-004	SPRING, valve	1	P50-A100001		

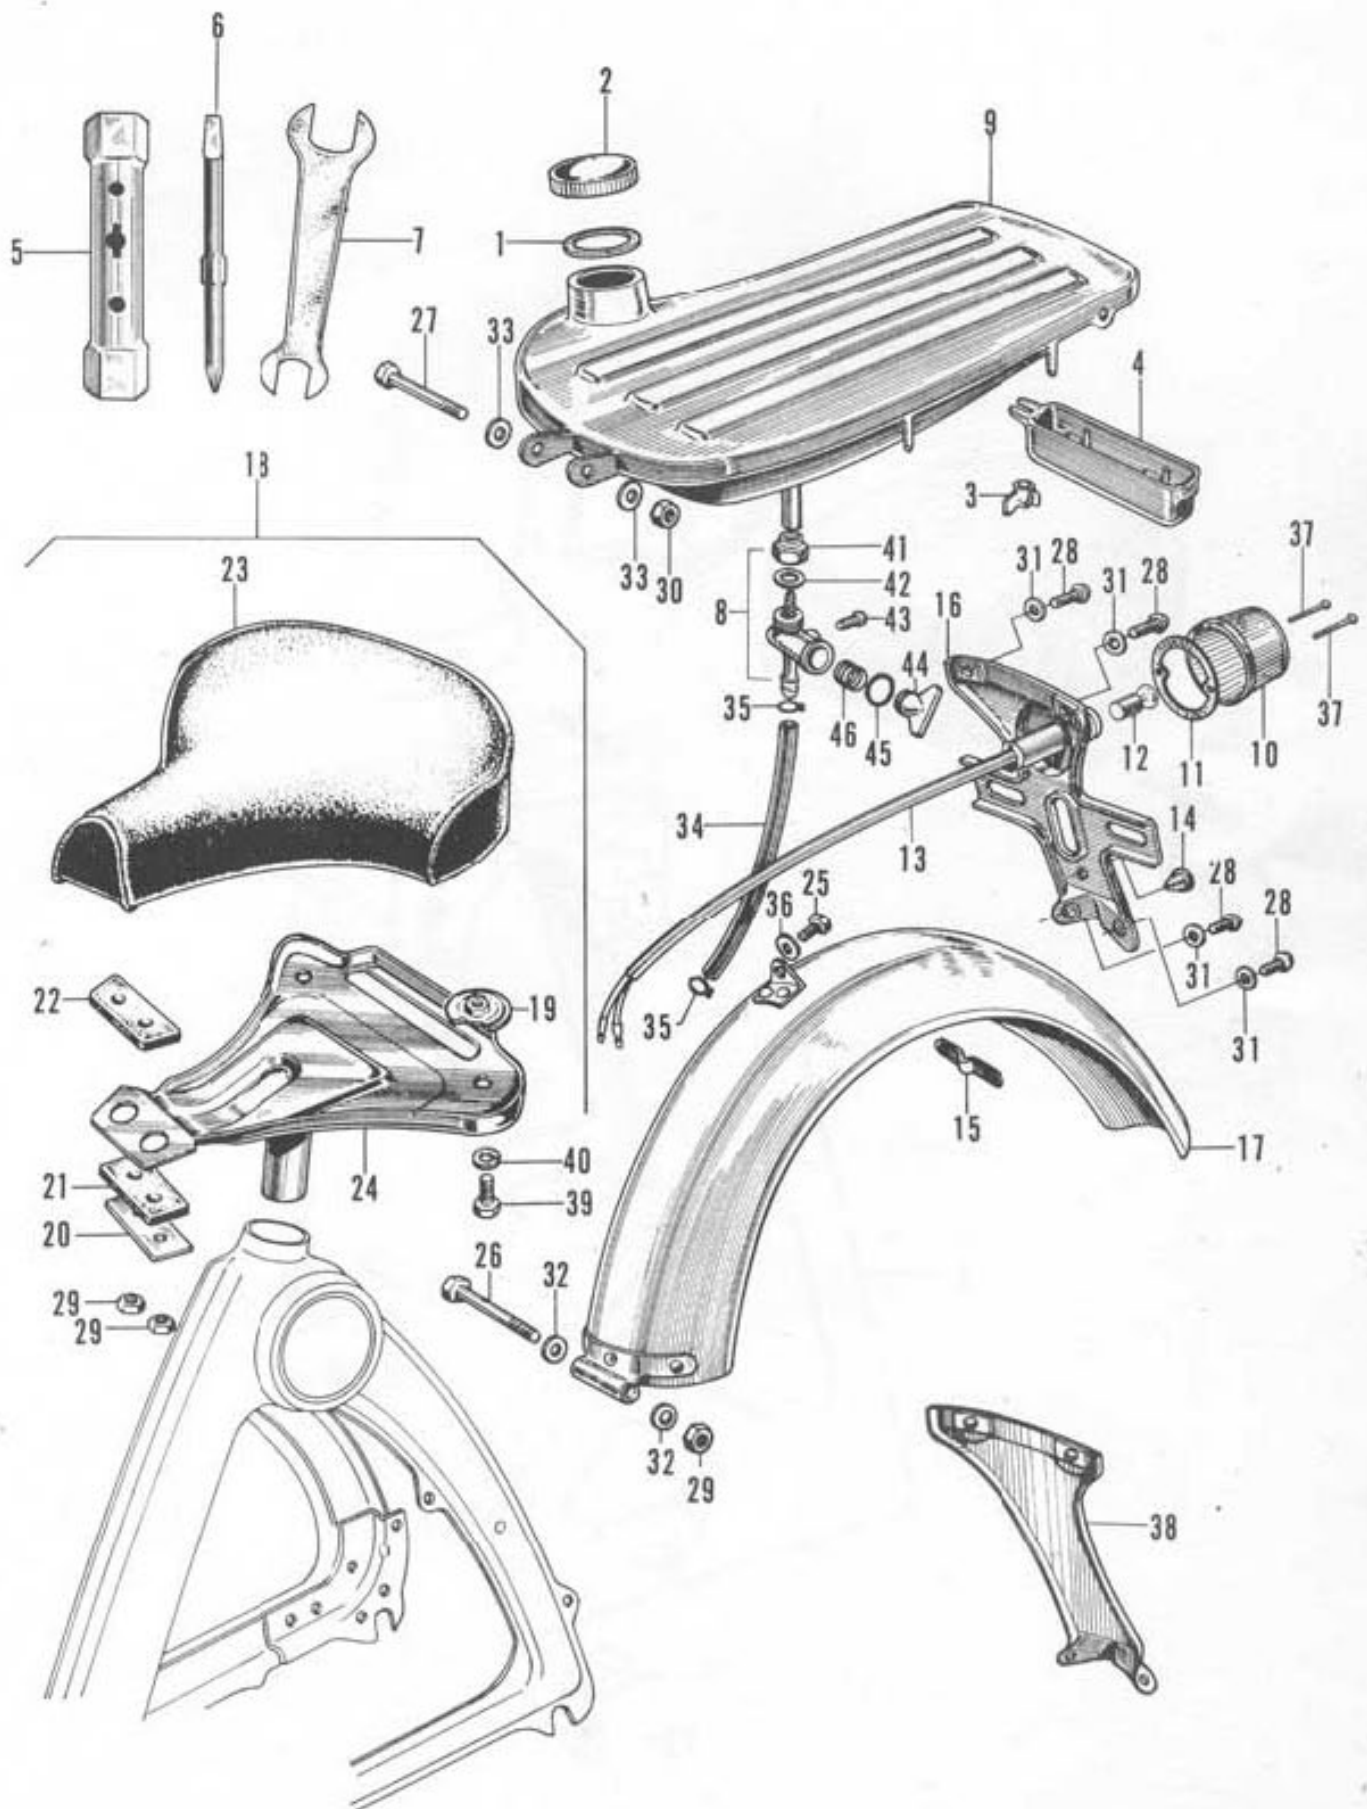

F-7 Tail Light (1) (Used in England)

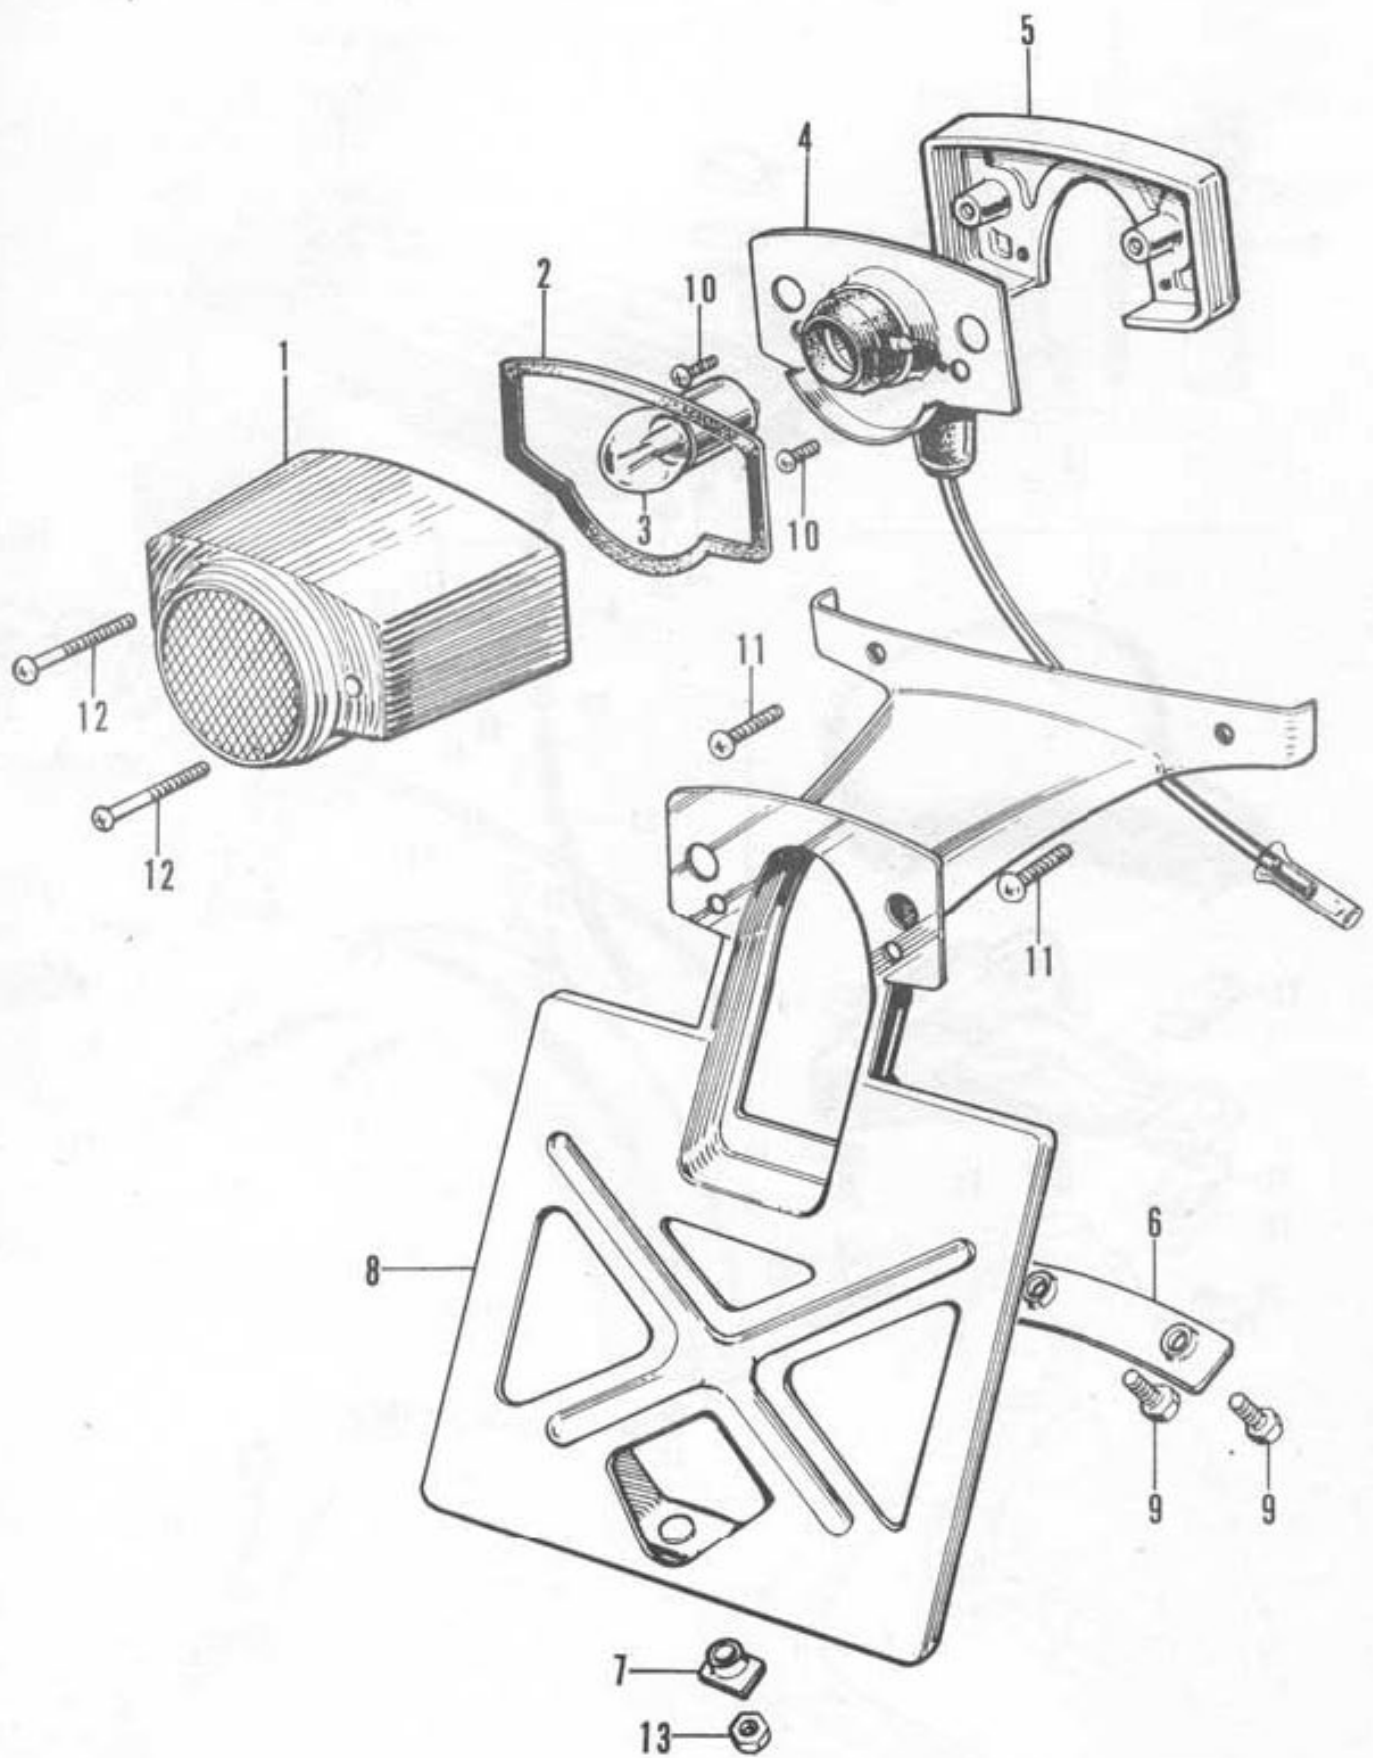


F-7 Tail Light (1) (Used in England)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	33700-044-600	LIGHT ASSY., tail.....	1	P50-A100001.....		
1	33701-268-600	LENS, tail light	1	P50-A100001.....		
2	33709-268-810	PACKING, tail light lens.....	1	P50-A100001.....		
3	34906-202-830	BULB, tail light	1	P50-A100001.....		
4	33703-044-600	SOCKET, tail light.....	1	P50-A100001.....		
5	33705-044-670	PLATE, tail light lens holder.....	1	P50-A100001.....		
6	80111-044-600	PLATE A, tail light setting.....	1	P50-A100001.....		
7	80112-044-600	PLATE B, tail light setting.....	1	P50-A100001.....		
8	84701-044-600	BRACKET, number plate	1	P50-A100001.....		
9	92000-05012	BOLT, hex., 5×12	2			
10	93500-04010	SCREW, cross, 4×10	2			
11	93500-05012	SCREW, cross, 5×12	2			
12	93714-03060	SCREW, cross, 3×60	2			
13	94001-06000	NUT, hex., 6 mm	1			


F-7 Tail Light (2) (Used in U. S. A. and NED.)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	33700-044-671	LIGHT ASSY., tail.....	1	P50-A167186.....		
1	33701-268-680	LENS, tail light	1	P50-A167186.....		
2	33703-044-671	SOCKET ASSY., tail light	1	P50-A167186.....		
3	33705-044-600	PLATE, tail light lens holder.....	1	P50-A167186.....		
4	33709-268-810	PACKING, tail light lens.....	1	P50-A167186.....		
5	33719-041-300	PACKING, tail light base.....	1	P50-A167186.....		
6	34906-202-830	BULB, tail light	1	P50-A167186.....		
7	84701-044-671	BRACKET, number plate	1	P50-A167186.....		
8	93508-04010	SCREW, cross, 4×10.....	2			
9	93720-03060	SCREW, cross, 3×60.....	2			
	33700-044-690	TAIL LIGHT.....	1	Ned.....		

F-7 Tail Light (2) (Used in U.S.A. and NED.)

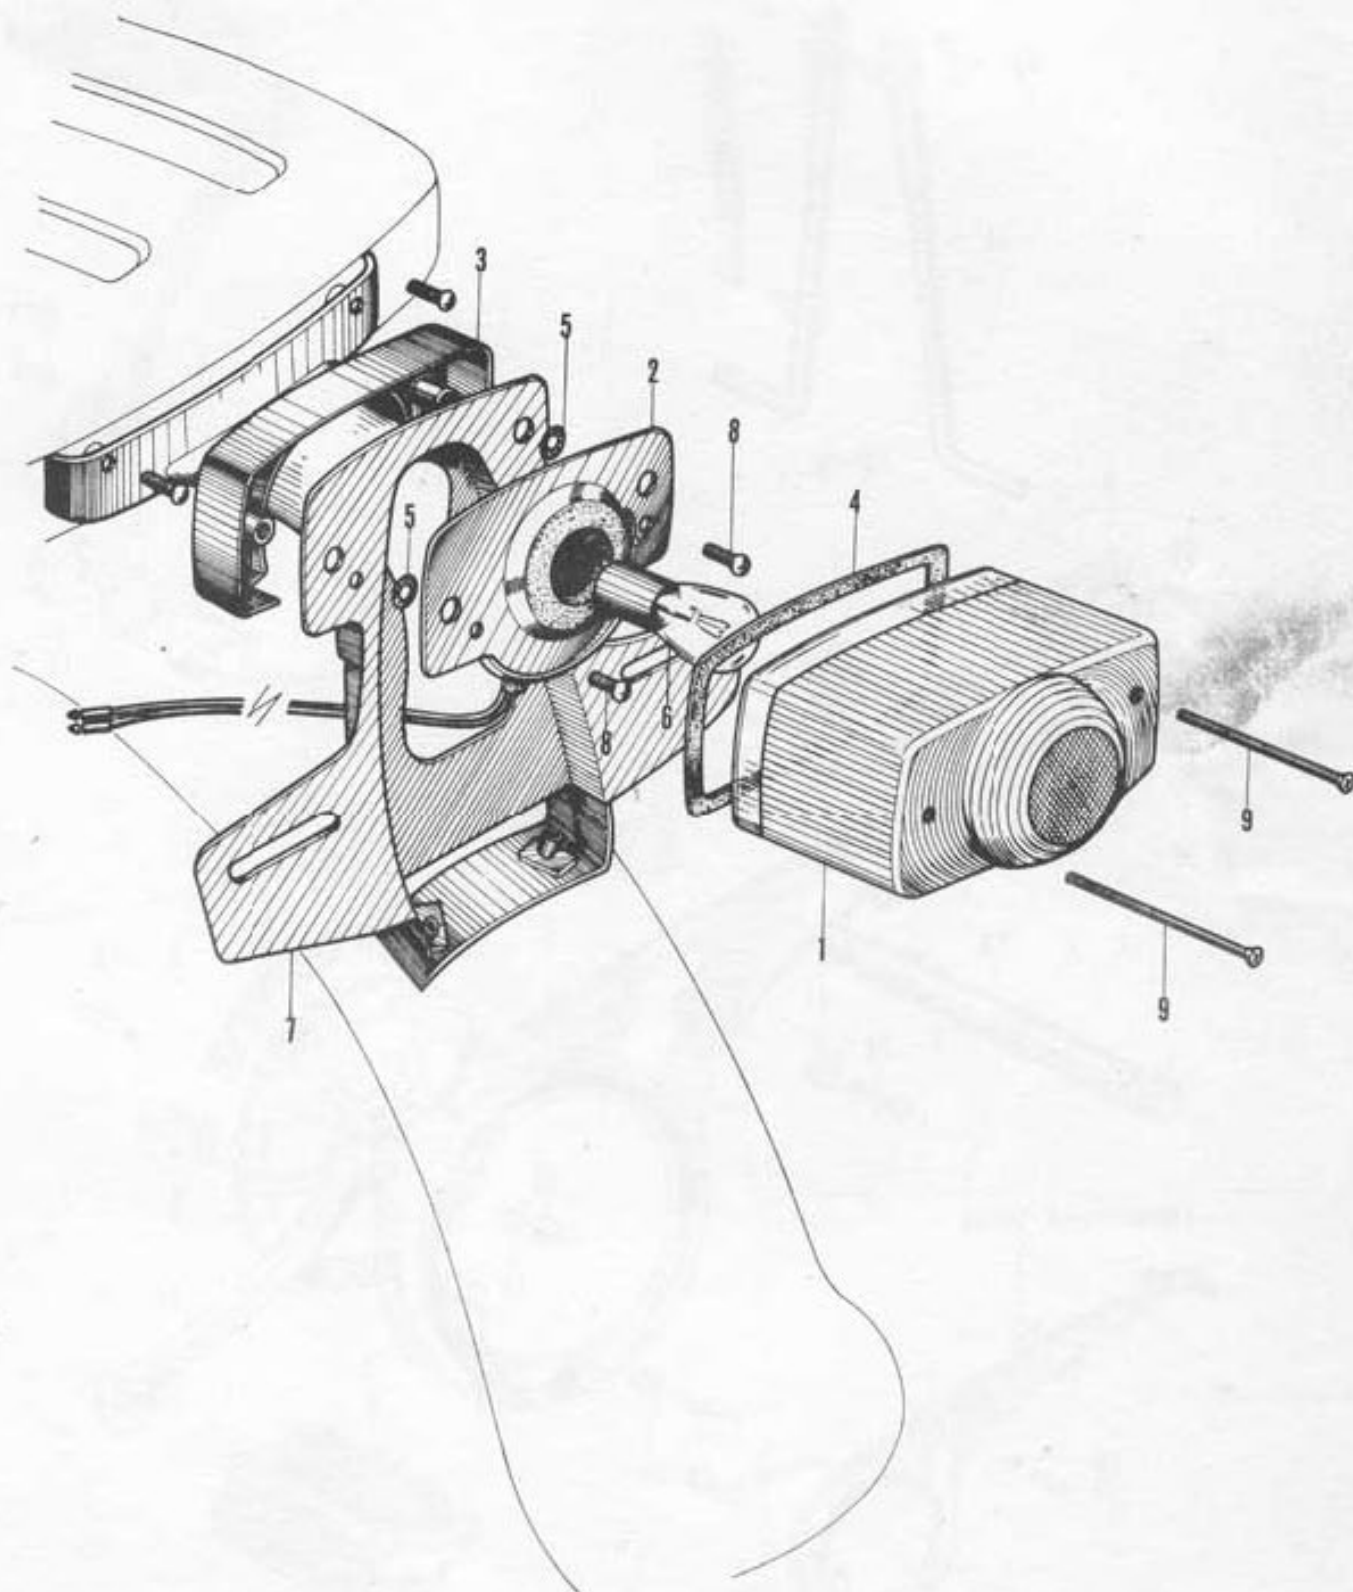

46

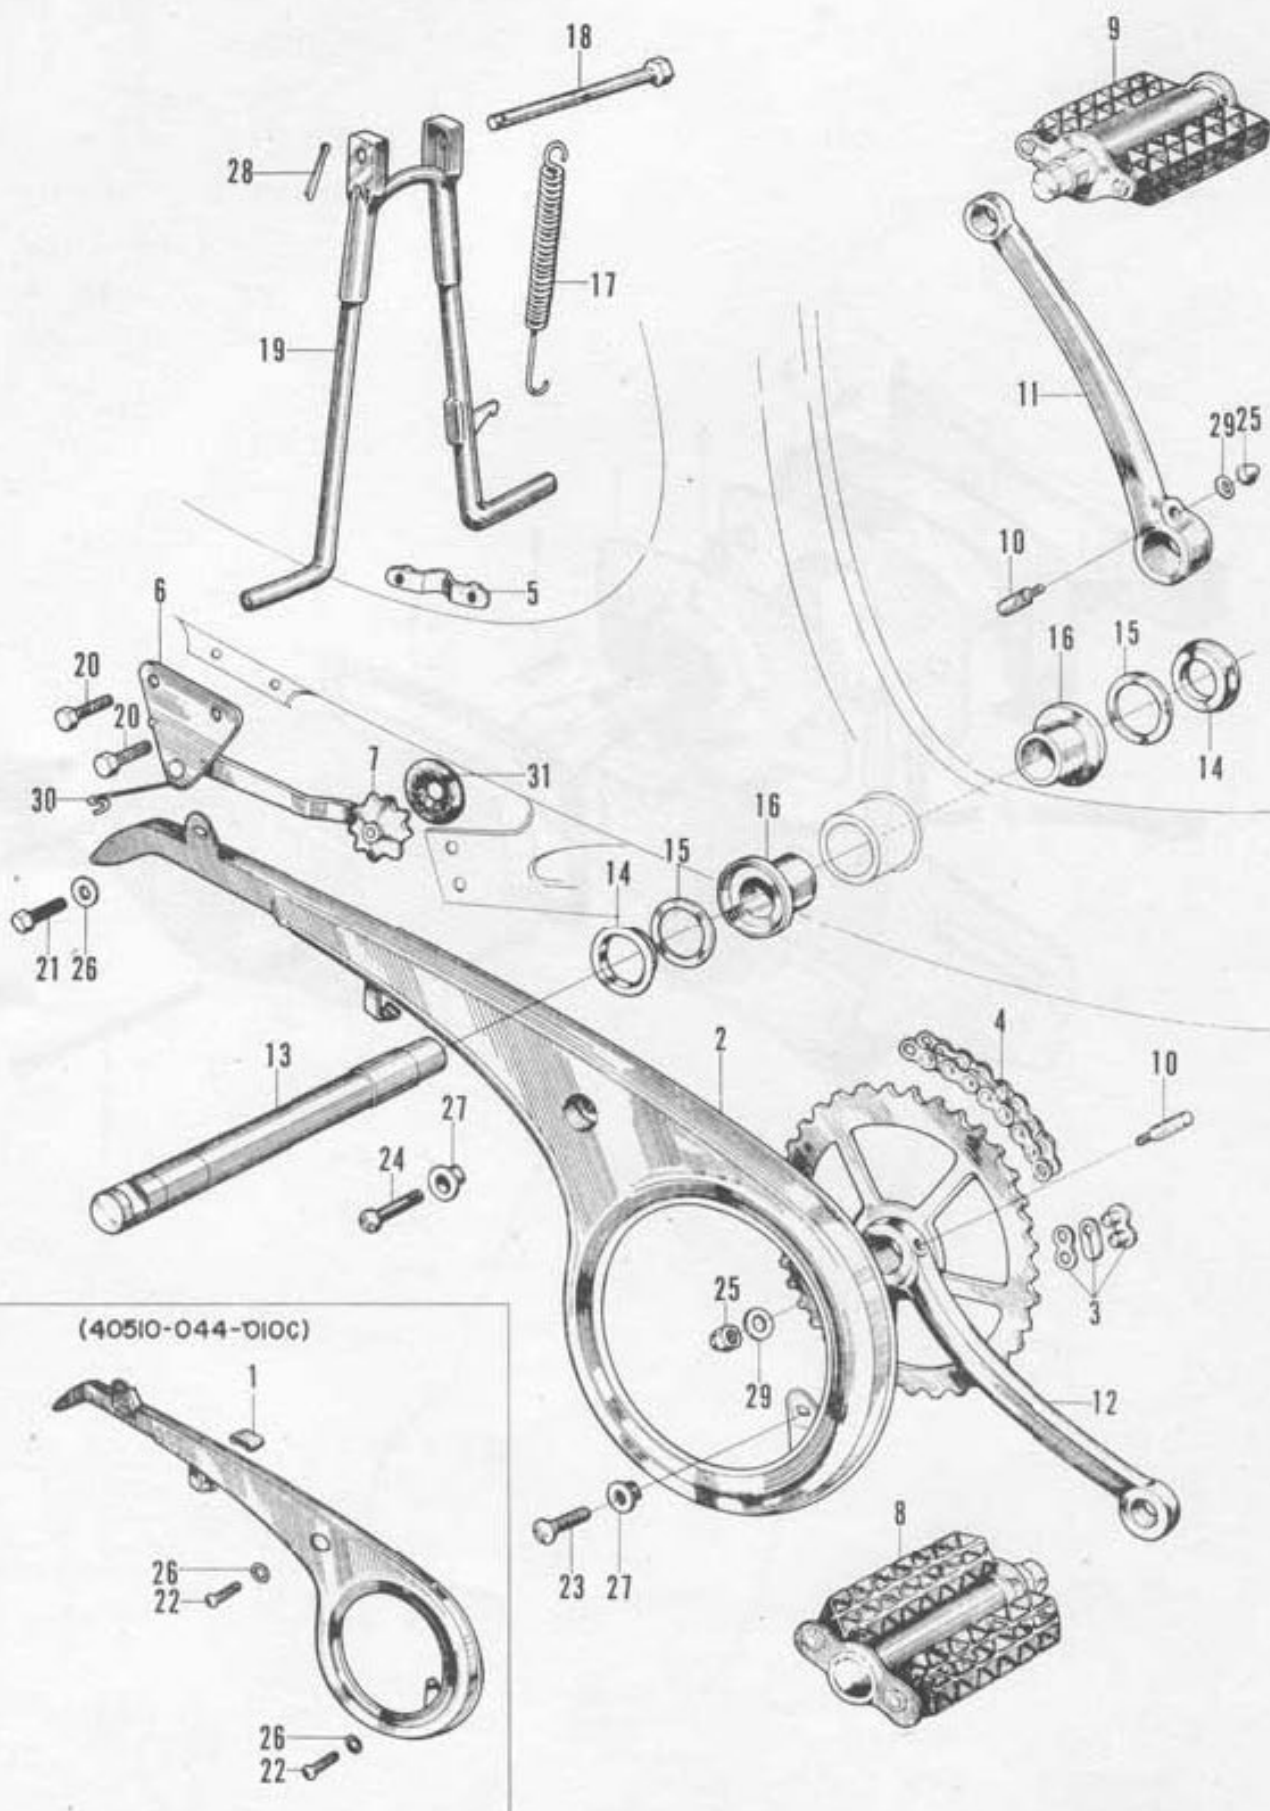


F-8 Stand • Chain Case • Crank Arm

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	40512-044-000	RUBBER, chain stopper	1	P50-A100001.....		
2	40510-044-010C	CASE, chain (Scarlet)	1	P50-A100001.....	P50-A104860	
	40510-044-010XE	CASE, chain (Sky blue)	1	P50-A100001.....	P50-A104860	
	40510-044-010XP	CASE, chain (Peppermint blue)	1	P50-A100001	P50-A104860	
	40510-044-010XN	CASE, chain (Apple green)	1	P50-A100001.....	P50-A104860	
	40510-044-010XT	CASE, chain (Charcoal gray)	1	P50-A100001	P50-A104860	
	40510-044-010Z	CASE, chain (Non sanding).....	1	P50-A100001	P50-A104860	
	40510-044-020R	CASE, chain (Ivory white)	1	P50-A104861.....		
3	40531-044-000	JOINT, drive chain	1	P50-A100001.....		
4	40530-044-000	CHAIN, drive (106L).....	1	P50-A100001.....		
5	90327-044-000	PLATE B, nut.....	1	P50-A100001.....		
6	40540-044-040	TENSIONER, chain	1	P50-A100001.....		
7	40545-044-040	ROLLER, tensioner	1	P50-A100001		
8	40215-044-000	PEDAL, right, crank	1	P50-A100001.....		
9	40225-044-000	PEDAL, left, crank	1	P50-A100001		
10	40235-044-000	PIN, crank arm setting	2	P50-A100001.....		
11	40220-044-020	ARM, left crank	1	P50-A100001.....		
12	40210-044-020	ARM, right, crank	1	P50-A100001.....		
	40210-044-690	ARM, right crank (Used in Netherland)...	1	P50-A128651.....		
13	40230-044-020	AXLE, hanger crank	1	P50-A100001.....	P50-A100357	
	40230-044-030	AXLE, hanger crank	1	P50-A100358		
14	40240-044-020	COLLER, hanger axle	2	P50-A100001.....		
15	40245-044-000	DUST-SEAL, hanger.....	2	P50-A100001.....		
16	50305-044-010	BUSH, hanger pipe	2	P50-A100001.....	P50-A100357	
	50305-044-020	BUSH, hanger pipe	2	P50-A100358.....		
17	50522-044-010	SPRING, main stand	1	P50-A100001.....		
18	90111-044-020	SHAFT, main stand	1	P50-A100001.....		
19	50500-044-040B	STAND, main (black)	1	P50-A100001.....		
	50500-044-690B	STAND, main (black) (Used in Netherland)	1	P50-A128651.....		
20	92000-06010	BOLT, hex., 6×10	2			
21	92000-06016	BOLT, hex., 6×16	1			
22	93500-06010	SCREW, cross, 6×10	2			
23	93500-06012	SCREW, cross, 6×12	1			


F-8 Stand · Chain Case · Crank Arm

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
24	93500-06032	SCREW, cross, 6×32	1			
25	94022-06000	NUT, blind, 6 mm	2			
26	94101-06000	WASHER, flat, 6 mm	3			
27	90554-028-000	WASHER, distance, 7×10	2	P50-A104861.....		
28	94201-20180	PIN, cotter, 2.0×18	1			
29	90545-044-000	WASHER, crank arm	2	P50-A100001.....		
30	40543-044-030	SPRING, tensioner.....	1	P50-A100001.....		
31	40553-044-000	BOOT, tensioner.....	1	P50-A116521.....		

F-8 Stand · Chain Case · Crank Arm

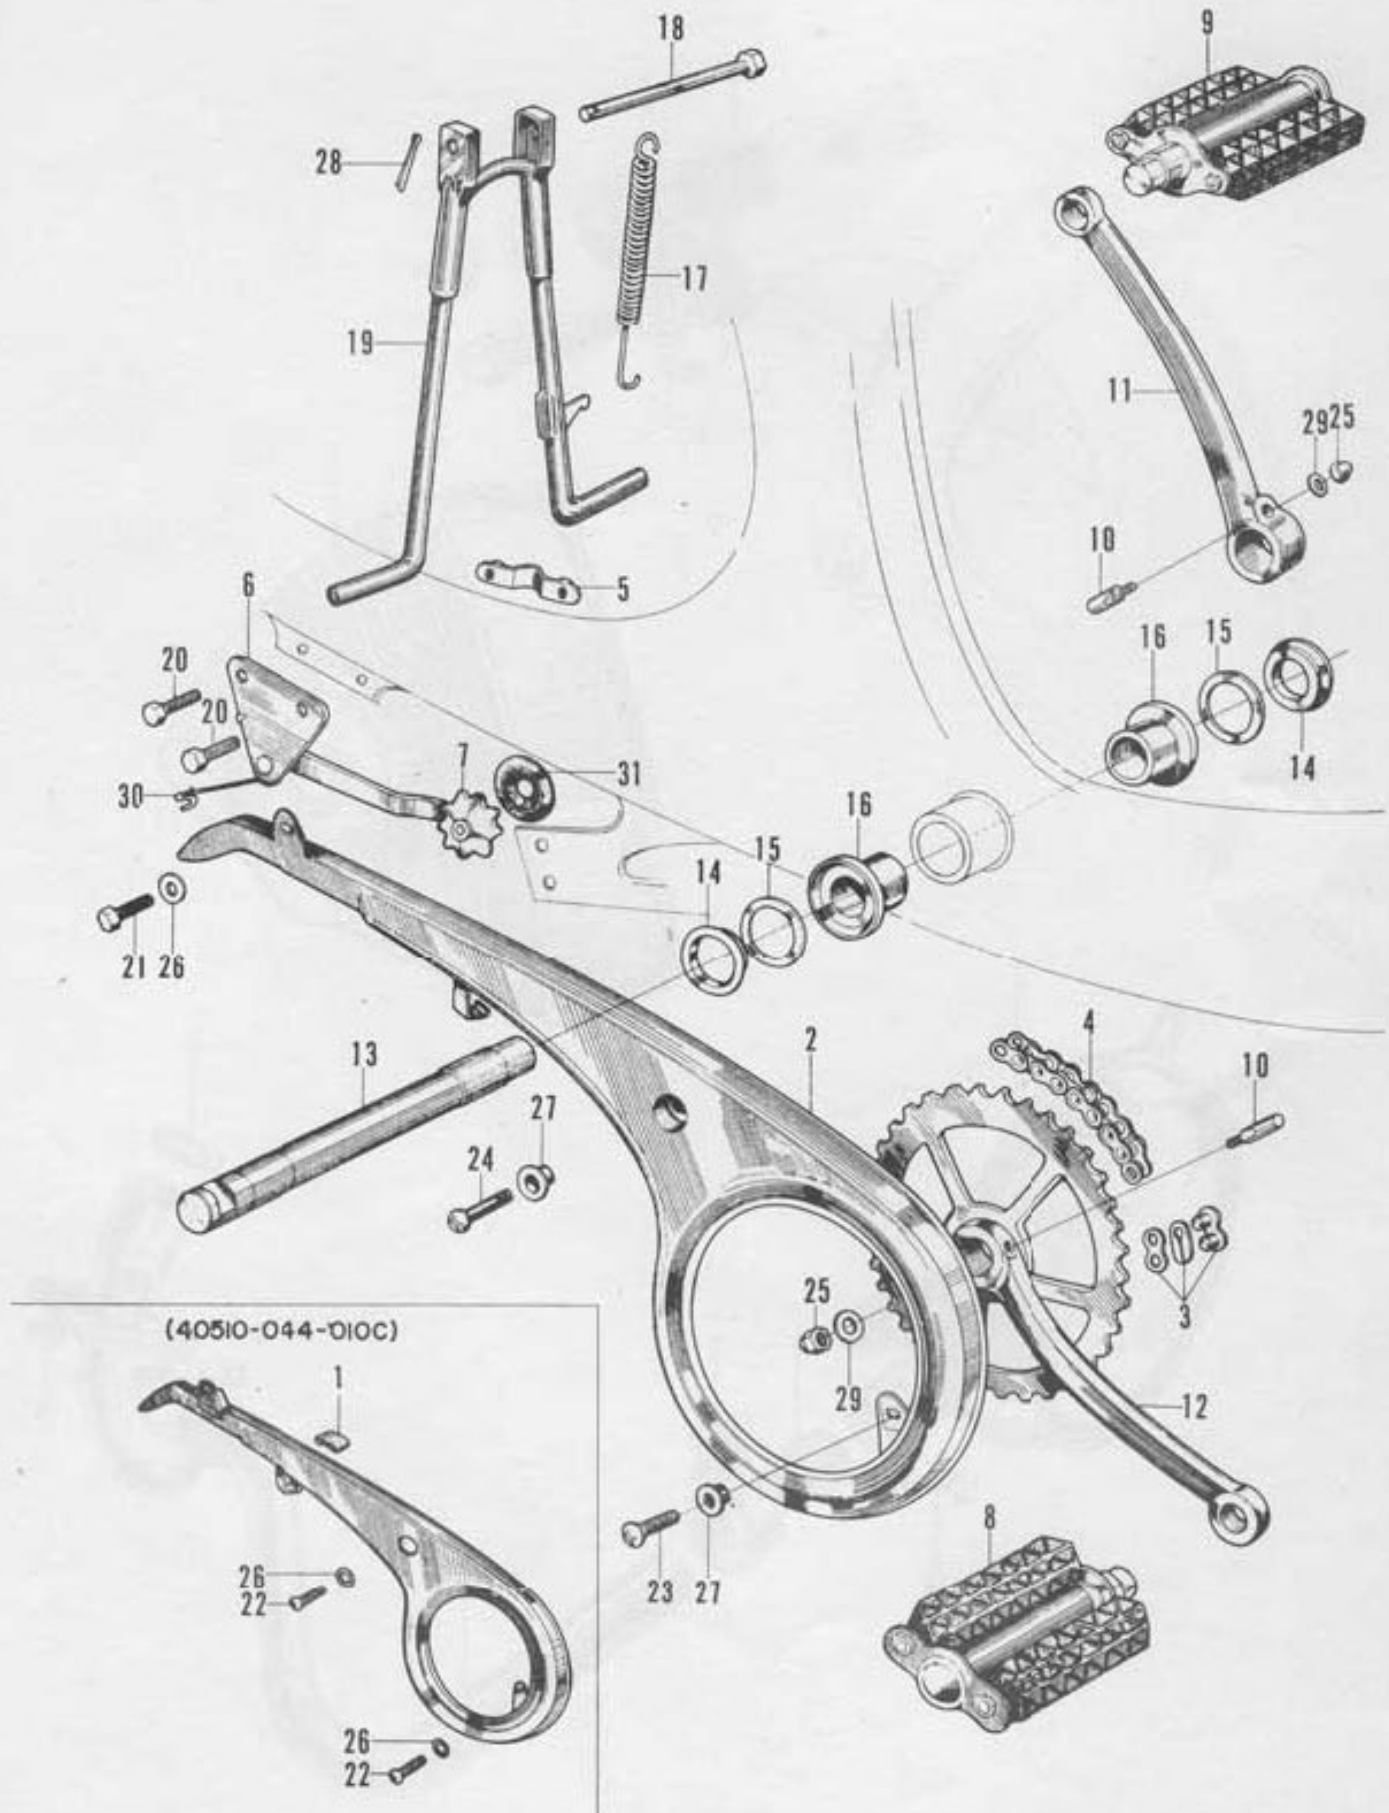

F-9 Carburetor Cover • Muffler

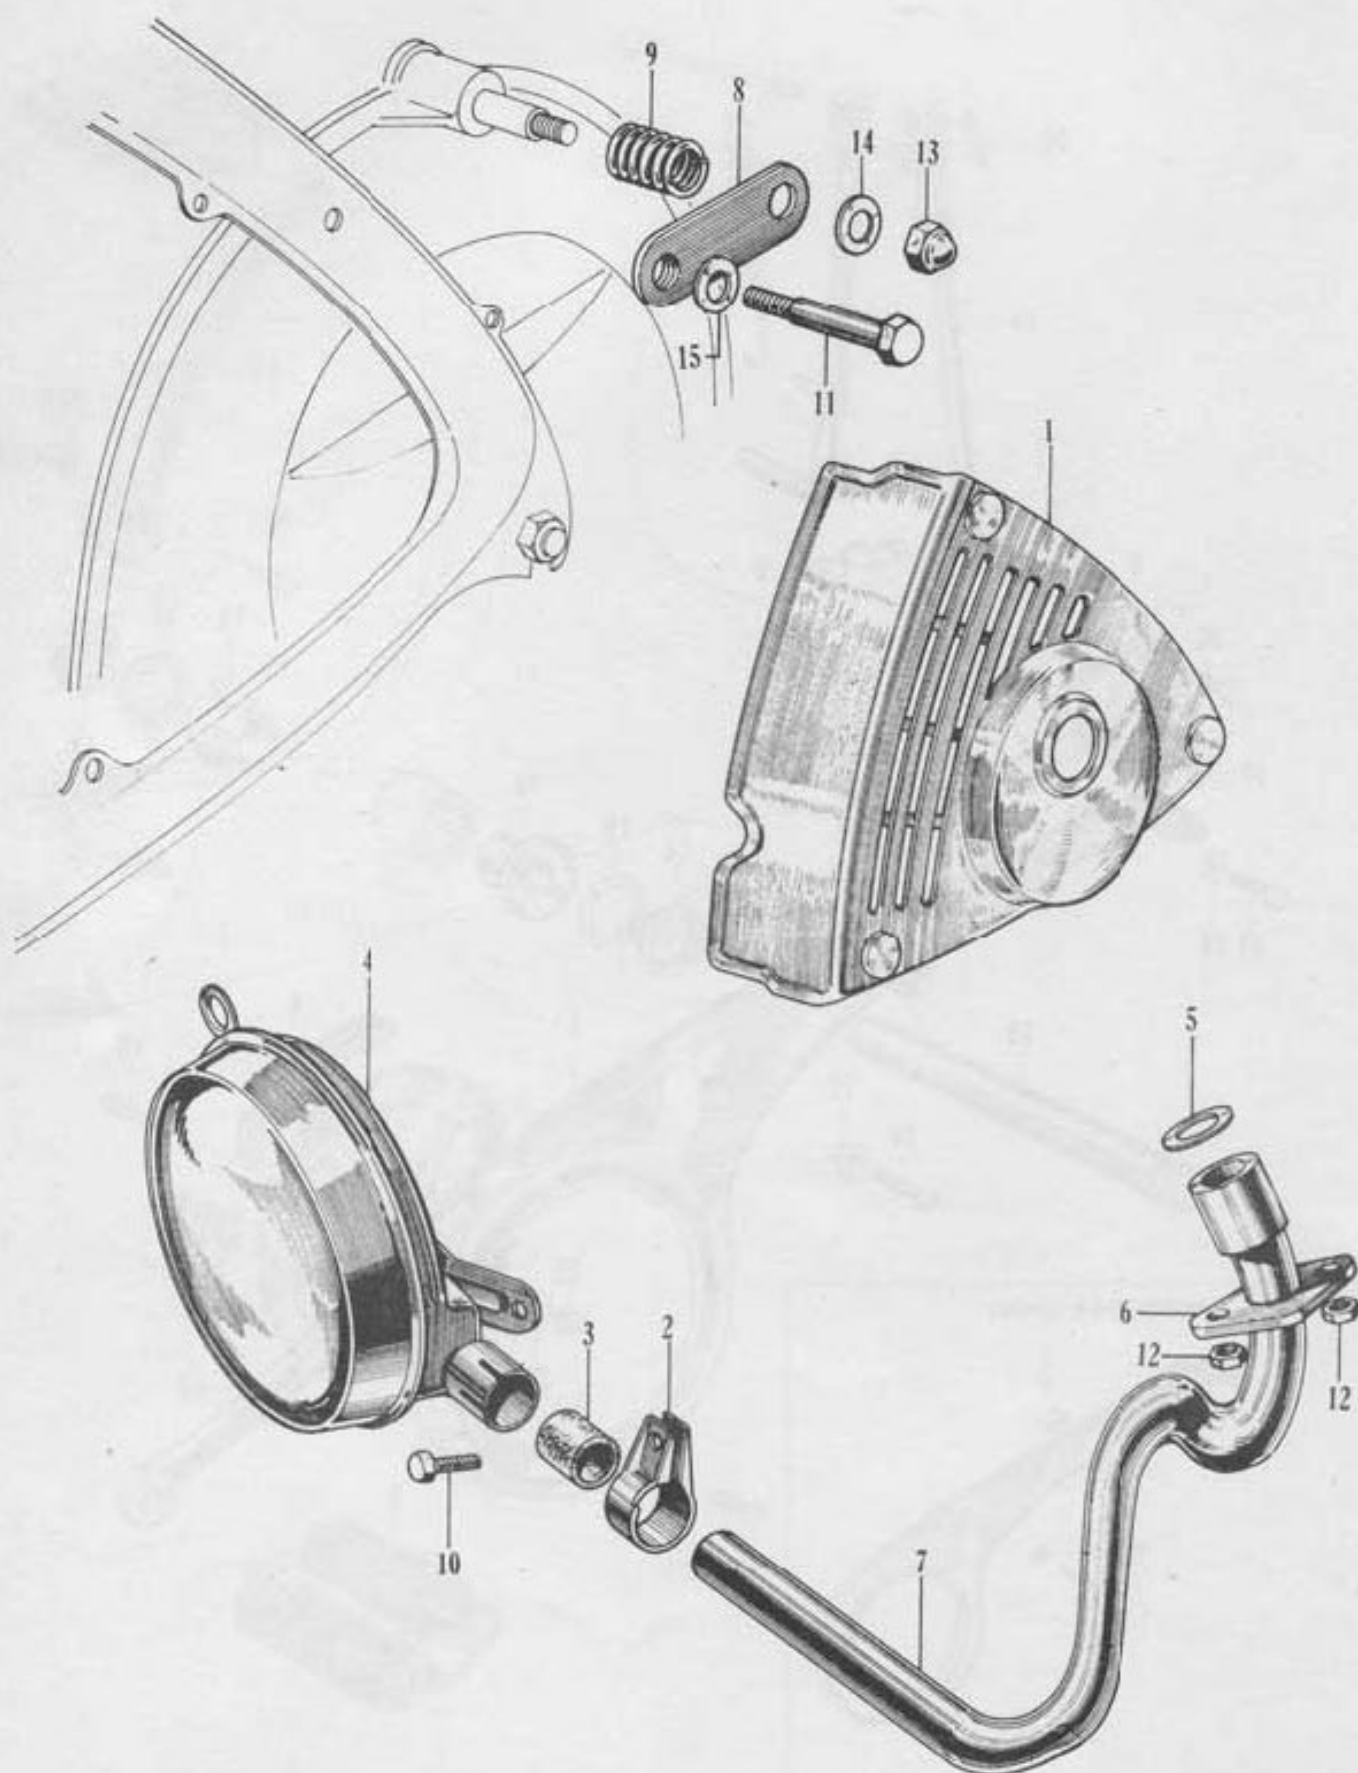


F-9 Carburetor Cover · Muffler

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	17260-044-010XL	COVER B, carburetor (Ivory white)	1	P50-A100001		
	17260-044-010R	COVER B, carburetor (Ivory yellow)	1	P50-A128651		
		(Used in Netherland)				
2	18395-044-020	BAND, muffler	1	P50-A100001		
3	18391-044-040	PACKING, muffler	1	P50-A100001		
4	18300-044-090	MUFFLER	1	P50-A100001		
	18300-044-100	MUFFLER	1	P50-A100001		
	18300-044-620	MUFFLER (Used in France + Ned.)	1	P50-A100001	P50-A102125	
	18300-044-621	MUFFLER (Used in France)	1	P50-A102126		
5	18291-044-020	GASKET, exhaust pipe	1	P50-A100001		
6	18231-044-050	JOINT, exhaust pipe	1	P50-A100001		
7	18200-044-680	PIPE, exhaust	1	P50-A100001	P50-A102125	
	18200-044-681	PIPE, exhaust	1	P50-A102126		
	18200-044-690	PIPE, exhaust (Used in Netherland)	1	P50-A128651		
8	43431-044-010	ARM, rear torque	1	P50-A100001	P50-A122060	
	43431-044-680	ARM, rear torque	1	P50-A122061		
9	43434-044-020	SPRING, rear torque	1	P50-A100001		
10	92000-06014	BOLT, hex., 6×14	1			
	93000-06016	BOLT, hex., 6×16	1			
11	92000-08042	BOLT, hex., 8×42	1			
12	94001-06000	NUT, hex., 6 mm	2			
13	94022-06000	NUT, blind, 6 mm	1			
14	94101-06000	WASHER, flat, 6 mm	1			
15	94101-08000	WASHER, flat, 8 mm	1			


F-10 Rear Wheel

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	90305-044-000	NUT, rear axle	2	P50-A100001		
2	90541-044-000	WASHER, rear wheel axle	1	P50-A100001		
3	90436-044-020	WASHER, 16 mm	1	P50-A100001		
4	42315-044-000	COLLER, oil-seal	1	P50-A100001		
5	90082-044-010	BOLT, 6 mm	5	P50-A100001		
6	90523-044-000	WASHER, tongued, 6 mm	1	P50-A100001		
7	90456-044-030	WASHER C, thrust, 50 mm	1	P50-A100001		
8	90601-044-000	CIR-CLIP, 61 mm	1	P50-A100001		
9	90454-044-000	WASHER B, thrust, 50 mm	1	P50-A100001		
10	41321-044-000	SPRING B, free wheel	1	P50-A100001		
11	41201-044-040	SPROCKET, free wheel	1	P50-A100001		
12	41315-044-010	SPRING A, free wheel	1	P50-A100001		
13	41311-044-020	POLE, ratchet	2	P50-A100001		
14	90453-044-030	WASHER A, thrust, 50 mm	1	P50-A100001		
15	91212-044-000	OIL-SEAL, 23-35-7	1	P50-A100001		
16	23410-044-080	SHAFT, final driven	1	P50-A100001		
17	42711-044-000	TIRE, rear wheel (2.25~17)	1	P50-A100001		
18	44712-044-000	TUBE, wheel	1	P50-A100001		
	44712-044-601	TUBE, wheel (Used in England & Netherland, Belgium)	1	P50-A127431		
19	44713-001-000	FLAF, tire	1	P50-A100001		
20	42608-044-010	SPOKE A, rear	20	P50-A100001		
	97064-120111	SPOKE B, $\phi 12 \times 85.5$ (Used in Netherland)	20			
21	42638-044-010	SPOKE B, rear	20			
	97543-120101	SPOKE B, $\phi 12 \times 85$ (Used in Netherland)	20			
22	42601-044-030	HUB, rear wheel	1	P50-A100001		
23	42701-044-010	RIM, rear wheel	1	P50-A100001		
	42701-044-690	RIM, rear wheel (Used in Netherland) ...	1	P50-A128651		
24	94001-06000	NUT, hex, 6 mm	5			
25	94510-50120	CIR-CLIP, 50 mm	1			
26	94520-35120	CIR-CLIP, internal, 35 mm	1			
27	96100-60030	BEARING, radial ball, 6003	1			

F-10 Rear Wheel

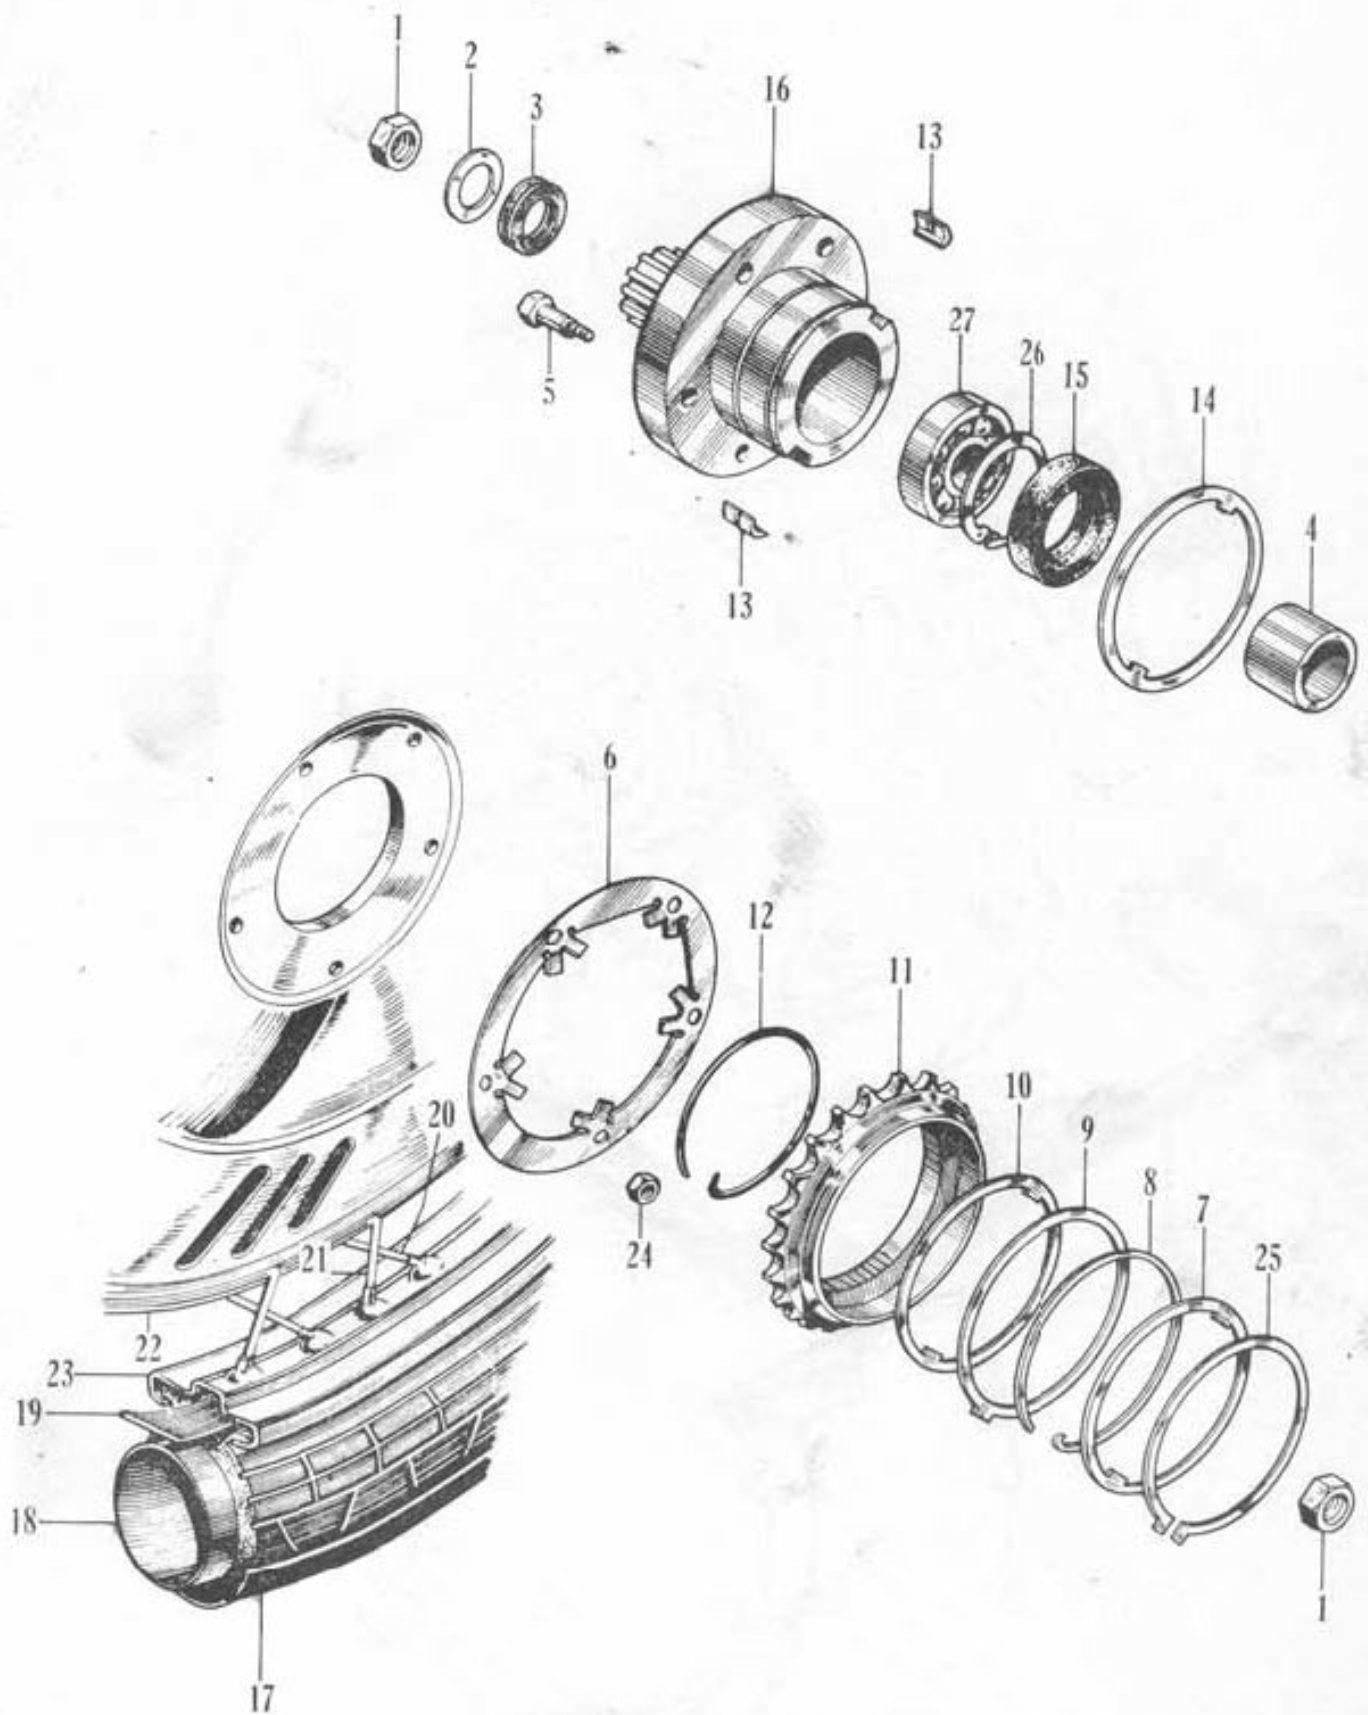

F-11 Rear Brake

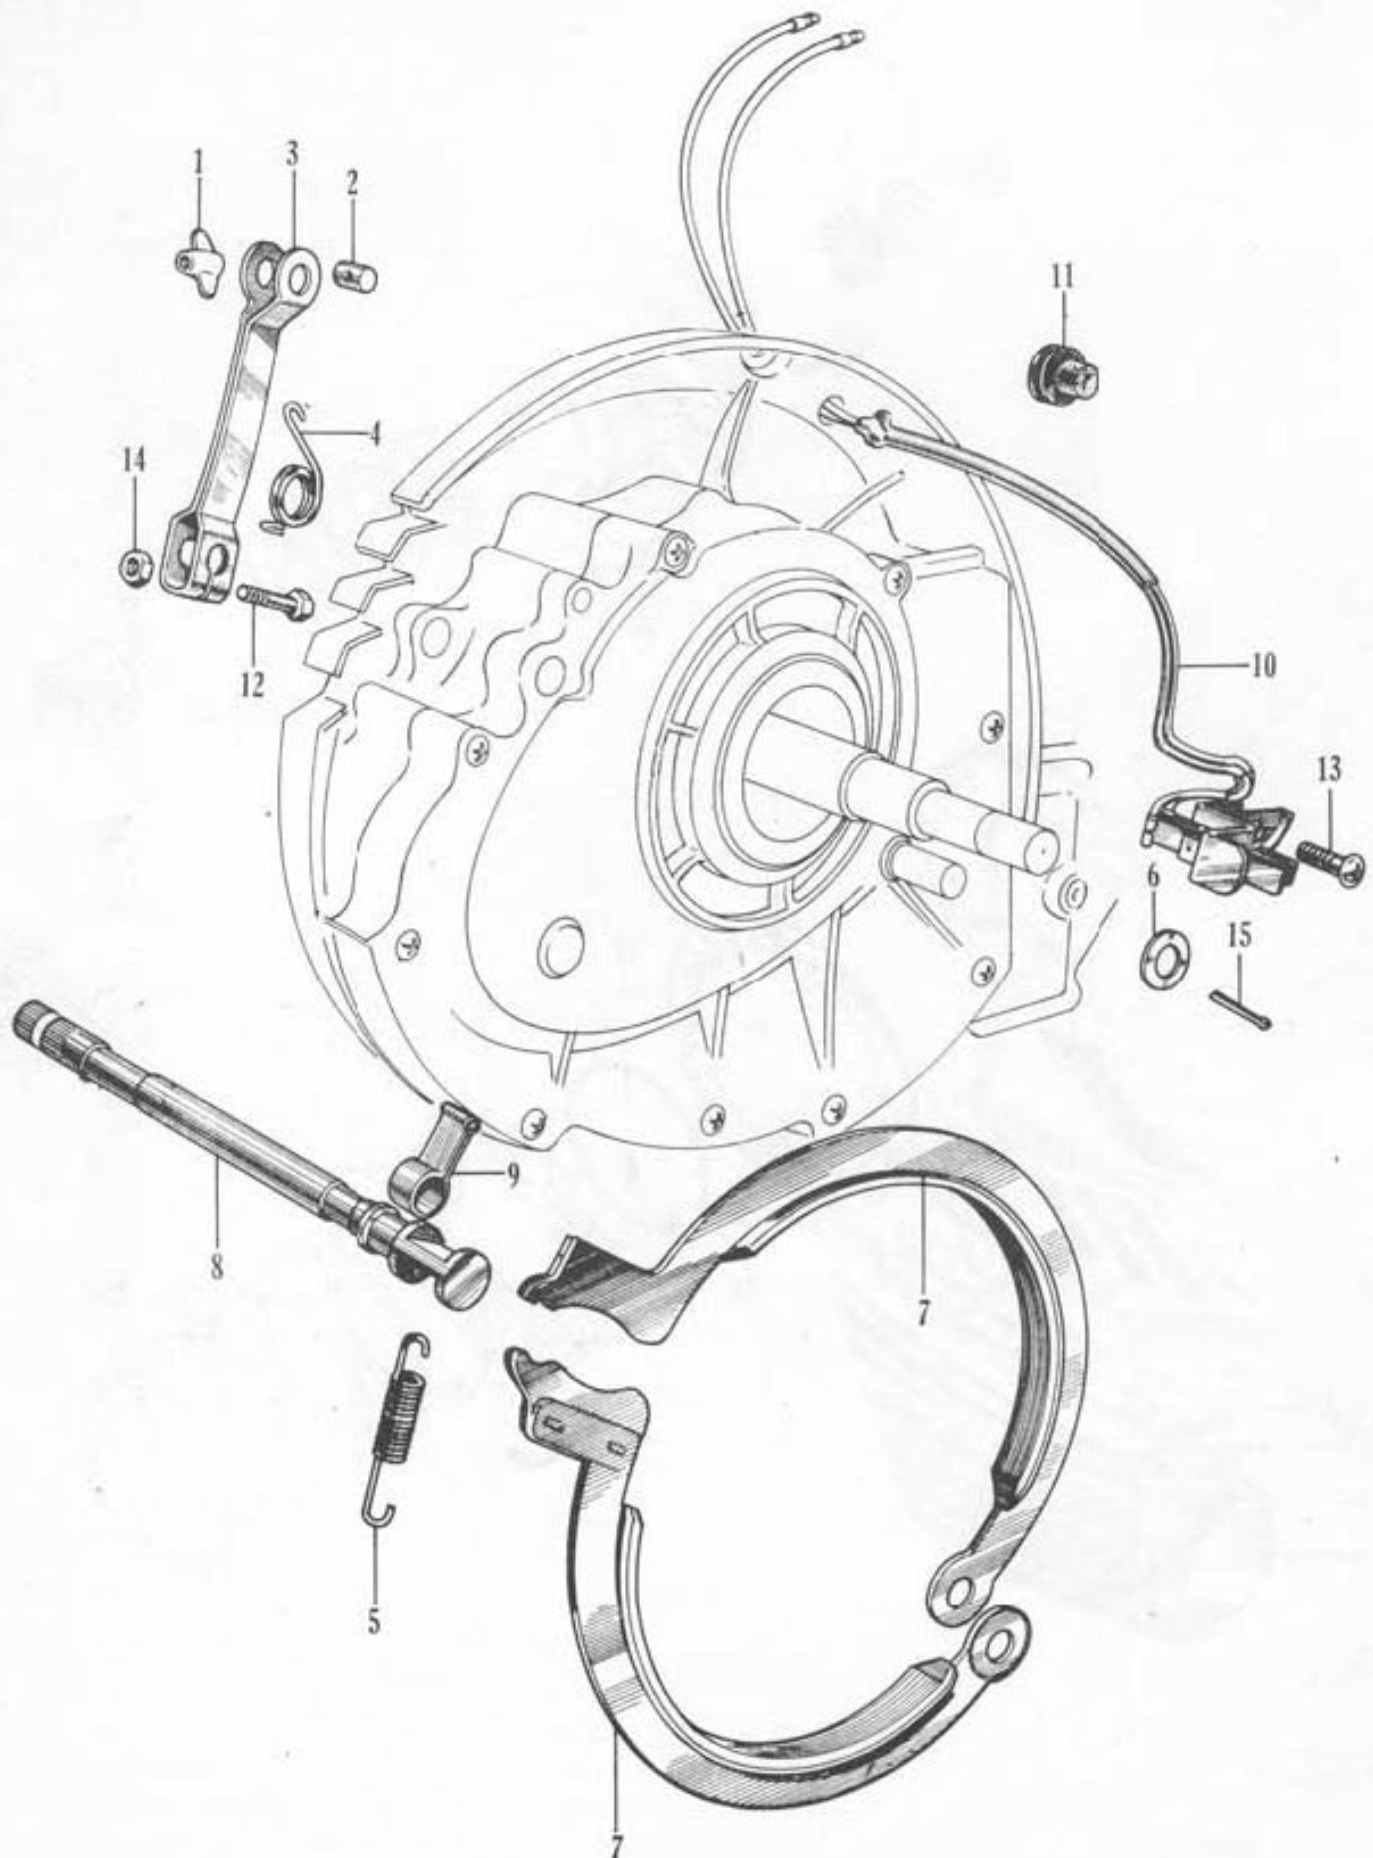


F-11 Rear Brake


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	43473-044-000	NUT, rear brake adjust	1	P50-A100001.....		
	43473-044-010	NUT, rear brake adjust	1	P50-A143861.....		
2	45461-001-000	JOINT, front brake arm	1	P50-A100001.....		
3	43410-044-030	ARM, rear brake	1	P50-A100001.....		
	43410-044-050	ARM, rear brake	1	P50-A143861.....		
4	43472-044-010	SPRING, rear brake arm	1	P50-A100001		
5	43133-044-020	SPRING, rear brake shoe	1	P50-A100001		
6	90515-044-000	WASHER, 10 ϕ $\times$ 20 ϕ	1	P50-A100001.....		
7	43120-044-010	SHOE, rear brake	2	P50-A100001.....		
8	43141-044-030	CAM, rear brake	1	P50-A100001.....		
9	35353-044-010	SPRING, stop switch..... (Used in General, France & Belgium)	1	P50-A100001.....		
10	35350-044-010	SWITCH, stop..... (Used in General, France & Belgium)	1	P50-A100001	P50-A102891	
	35350-044-020	SWITCH, stop	1	P50-A102892.....		
		(Used in General, France & Belgium)				
	35350-044-671	SWITCH, stop (Used in U.S.A.)	1	P50-A167186		
11	32985-044-000	GROMMET B, wire cord	1	P50-A100001.....		
12	92000-06025	BOLT, hex., 6 $\times$ 25	1			
13	93600-06012	SCREW, cross, 6 $\times$ 12	1			
14	94001-06000	NUT, hex., 6 mm	1			
15	94201-20180	PIN, cotter, 2.0 $\times$ 18.....	1			

F-12 Frame Body · Air Cleaner · Wire Harness

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	17255-044-000	BAND, air cleaner connecting	2	P50-A100001		
2	17236-044-000	PACKING B, air cleaner connecting tube	1	P50-A100001	P50-A148606	
	17236-044-010	PACKING, air cleaner connecting tube ...	1	P50-A148637		
3	17234-044-000	PACKING A, air cleaner connecting tube	1	P50-A100001		
4	17253-044-C50	TUBE, air cleaner connecting	1	P50-A100001	P50-A148606	
	17253-044-060	TUBE, air cleaner connecting	1	P50-A100001		
5	87121-044-680	EMBLEM, right side	1	P50-A100001		
	87123-044-680	EMBLEM, right side (Used with scarlet body)	1	P50-A100001		
6	87122-044-680	EMBLEM, left side	1	P50-A100001		
	87124-044-680	EMBLEM, left side (Used with scarlet body)	1	P50-A100001		
7	17221-044-030C	COVER, air cleaner (Scarlet)	1	P50-A100001		
	17221-044-030XE	COVER, air cleaner (Sky blue)	1	P50-A100001		
	17221-044-030XP	COVER, air cleaner (Peppermint blue) ...	1	P50-A100001		
	17221-044-030XN	COVER, air cleaner (Apple green)	1	P50-A100001		
	17221-044-030XT	COVER, air cleaner (Charcoal gray)	1	P50-A100001		
	17221-044-030Z	COVER, air cleaner (Non sanding)	1	P50-A100001		
8	17227-044-000	CAP, air cleaner case	1	P50-A100001		
9	17230-044-010	PLATE, element set	2	P50-A100001		
10	17211-044-020	ELEMENT, air cleaner	1	P50-A100001		
11	17251-044-010	PIPE, air cleaner inlet	1	P50-A100001		
	17251-044-690	PIPE, air cleaner inlet (Used in Netherland)	1	P50-A128651		
12	17225-044-030	CASE, air cleaner	1	P50-A100001		
13	50202-044-000	SPRING, frame patch	1	P50-A100001		
	50202-044-690	SPRING, frame patch (Used in Netherland)	1	P50-A128651		
14	50203-044-000	PIN, frame patch spring setting ...	1	P50-A100001		
15	50201-044-000	PATCH, frame	1	P50-A100001		
	50201-044-690R	PATCH, frame (Ivory yellow) (Used in Netherland)	1	P50-A128651		
16	90131-044-000	SCREW, tapping, 3 mm	1	P50-A100001		
17	17950-044-000	CABLE, choke	1	P50-A100001		
18	30700-044-682	CAP, noise suppressor	1	P50-A100001		
19	30500-044-010	COIL, ignition	1	P50-A100001		

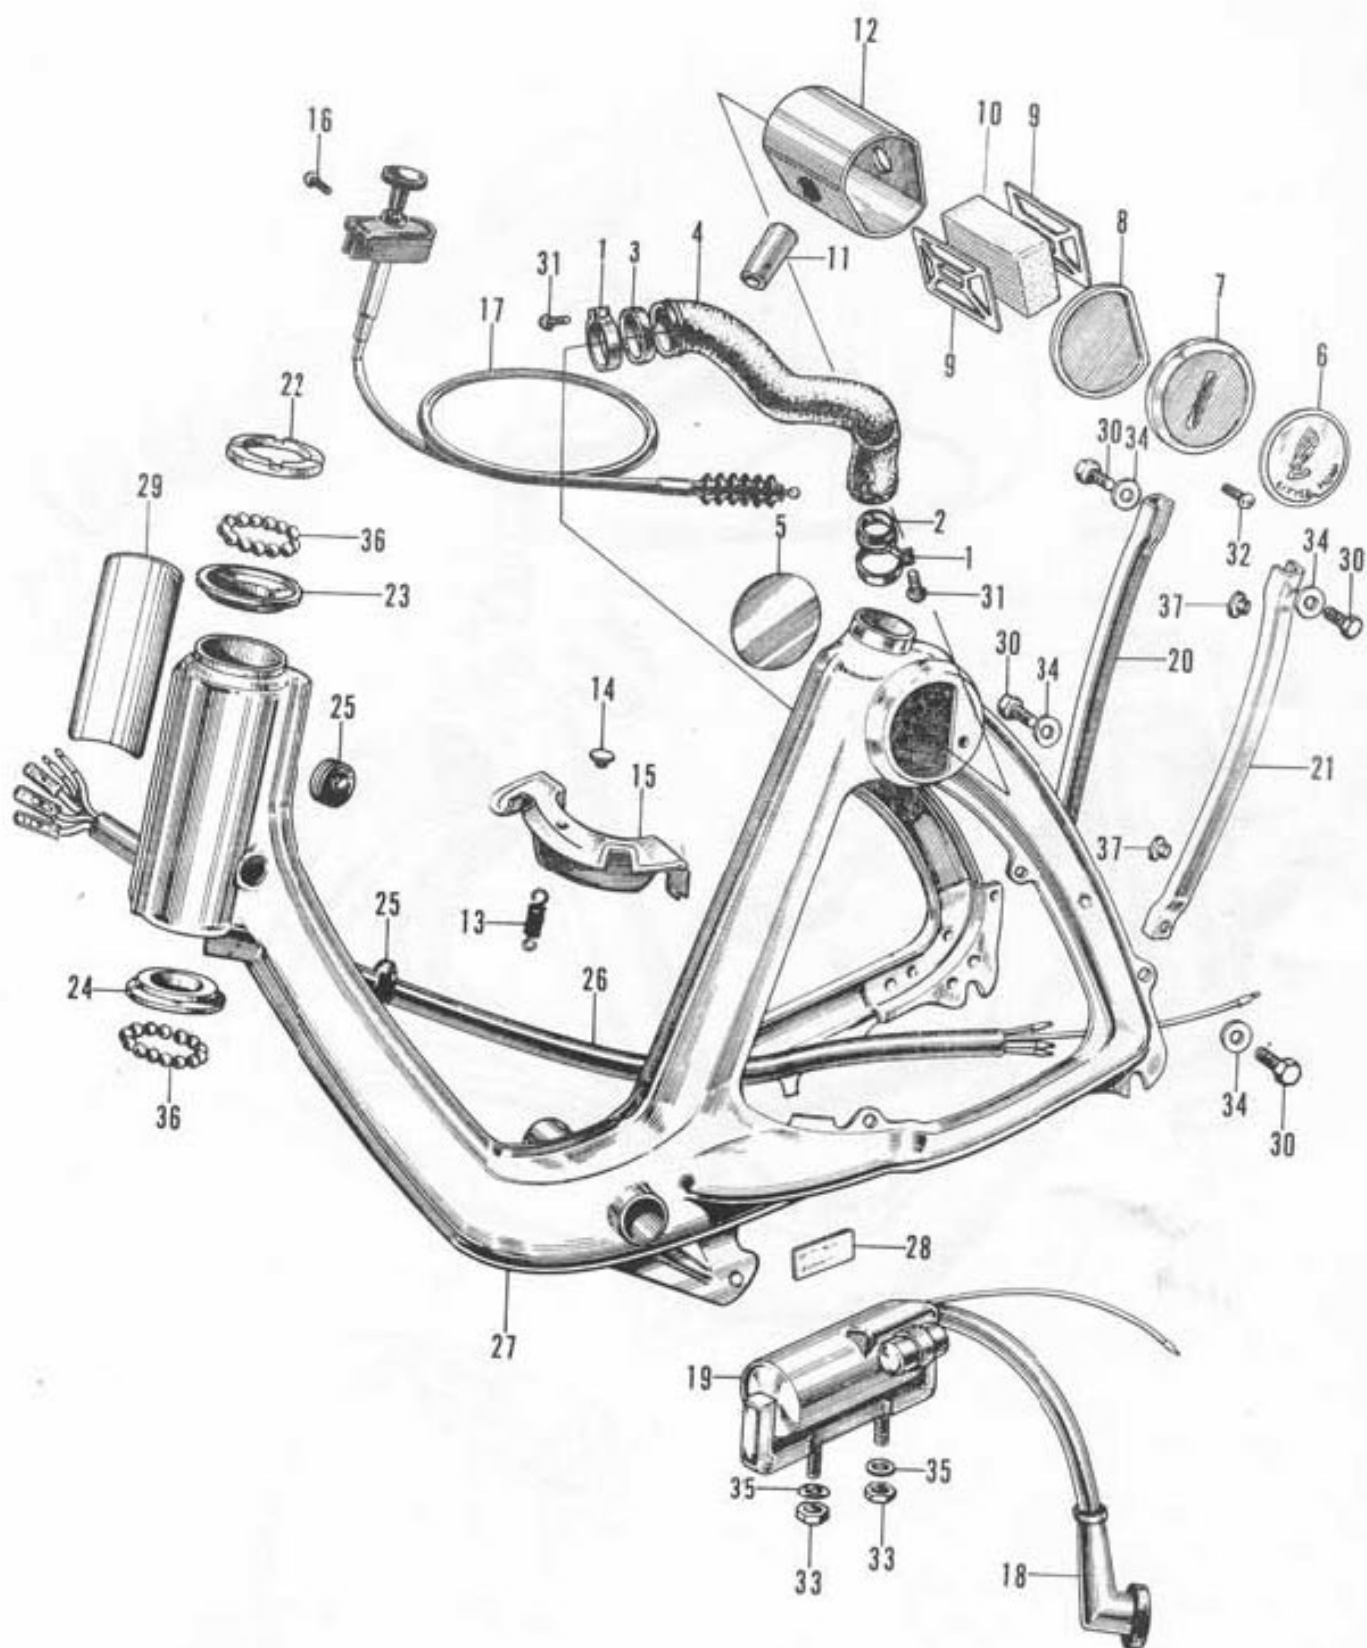

F-12 Frame Body · Air Cleaner · Wire Harness

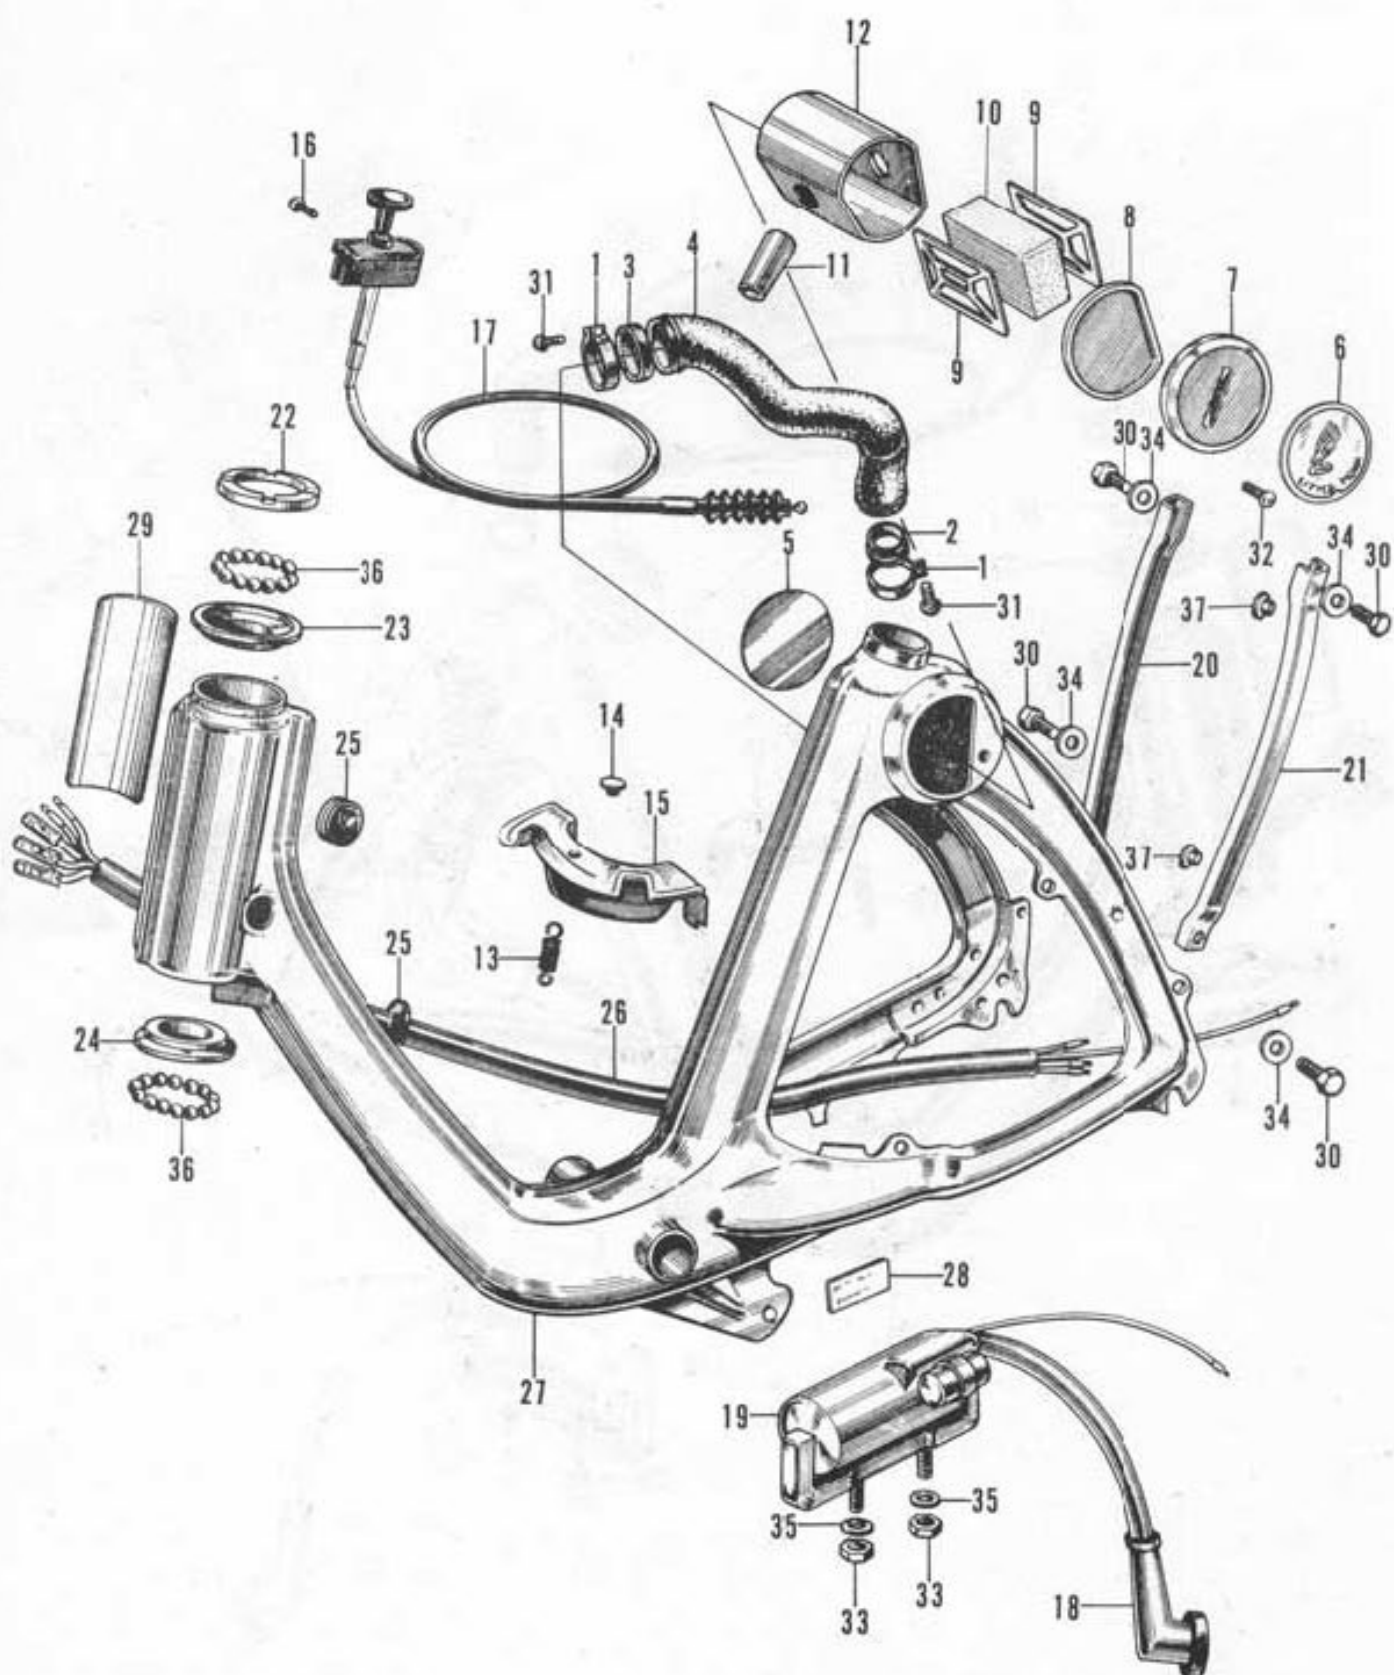


F-12 Frame Body • Air Cleaner • Wire Harness


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
20	17701-044-305C	STAY, right, fuel tank (Scarlet).....	1	P50-A100001.....	P50-A107562	
	17701-044-305XE	STAY, right, fuel tank (Sky blue).....	1	P50-A100001.....	P50-A107562	
	17701-044-305XP	STAY, right fuel tank (Peppermint blue)	1	P50-A100001.....	P50-A107562	
	17701-044-305XN	STAY, right, fuel tank (Apple green)	1	P50-A100001.....	P50-A107562	
	17701-044-305XT	STAY, right, fuel tank (Charcoal gray) ...	1	P50-A100001.....	P50-A107562	
	17701-044-305Z	STAY, right, fuel tank (Nonsanding)	1	P50-A100001.....	P50-A107562	
	17701-044-010C	STAY, right, fuel tank (Scarlet).....	2	P50-A107569.....		
	17701-044-010XE	STAY, right, fuel tank (Sky blue).....	2	P50-A107569.....		
	17701-044-010XP	STAY, right, fuel tank (Peppermint blue)	2	P50-A107569.....		
	17701-044-010XN	STAY, right, fuel tank (Apple green)	2	P50-A107569.....		
	17701-044-010XT	STAY, right, fuel tank (Charcoal gray) ...	2	P50-A107569.....		
	17701-044-010Z	STAY, right, fuel tank (Non Sanding) ...	2	P50-A107569.....		
21	17706-044-010C	STAY, left, fuel tank (Scarlet)	1	P50-A100001.....	P50-A107568	
	17706-044-010XE	STAY, left fuel tank (Sky blue)	1	P50-A100001.....	P50-A107568	
	17706-044-010XP	STAY, left, fuel tank (Peppermint blue)...	1	P50-A100001.....	P50-A107568	
	17706-044-010XN	STAY, left, fuel tank (Apple green)....	1	P50-A100001.....	P50-A107568	
	17706-044-010XT	STAY, left, fuel tank (Charcoal gray).....	1	P50-A100001.....	P50-A107568	
	17706-044-010Z	STAY, left, fuel tank (Nonsanding)	1	P50-A100001.....	P50-A107568	
22	53211-044-010	RACE, top steering cone	1	P50-A100001.....		
23	50301-044-020	RACE, top steering ball	1	P50-A100001.....		
24	50302-044-000	RACE, bottom, steering ball	1	P50-A100001.....		
25	32983-044-000	GROMMET, wire cord.....	2	P50-A100001	P50-A127971	
	32983-044-010	GROMMET, wire cord.....	2	P50-A127972.....		
26	32100-044-030	HARNESS, wire	1	P50-A100001.....	P50-A102891	
	32100-044-040	HARNESS, wire	1	P50-A102892.....		
	32100-044-600	HARNESS, wire (Used in England).....	1	P50-A100001	P50-A102891	
	32100-044-601	HARNESS, wire (Used in England)	1	P50-A102892.....		
	32100-044-671	HARNESS, wire (Used in U.S.A.)	1	P50-A167186.....		
27	50100-044-080C	BODY, frame (Scarlet)	1	P50-A100001	P50-A100070	
	50100-044-080XE	BODY, frame (Sky blue)	1	P50-A100001.....	P50-A100070	
	50100-044-080XP	BODY, frame (Peppermint blue)	1	P50-A100001.....	P50-A100070	
	50100-044-080XN	BODY, frame (Apple green)	1	P50-A100001.....	P50-A100070	
	50100-044-080XT	BODY, frame (Charcoal gray).....	1	P50-A100001.....	P50-A100070	
	50100-044-080Z	BODY, frame (Non sanding)	1	P50-A100001	P50-A100070	

F-12 Frame Body · Air Cleaner · Wire Harness

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	50100-044-405C	BODY, frame (Scarlet)	1	P50-A100071.....	P50-A104860	
	50100-044-405XE	BODY, frame (Sky blue)	1	P50-A100071.....	P50-A104860	
	50100-044-405XP	BODY, frame (Peppermint blue)	1	P50-A100071.....	P50-A104860	
	50100-044-405XN	BODY, frame (Apple green)	1	P50-A100071.....	P50-A104860	
	50100-044-405XT	BODY, frame (Charcoal gray)	1	P50-A100071.....	P50-A104860	
	50100-044-405Z	BODY, frame (Non sanding)	1	P50-A100071.....	P50-A104860	
	50100-044-415C	BODY, frame (Scarlet)	1	P50-A104861.....	P50-A136371	
	50100-044-415XE	BODY, frame (Sky blue)	1	P50-A104861.....	P50-A136371	
	50100-044-415XP	BODY, frame (Peppermint blue)	1	P50-A104861.....	P50-A136371	
	50100-044-415XN	BODY, frame (Apple green)	1	P50-A104861.....	P50-A136371	
	50100-044-415XT	BODY, frame (Charcoal gray)	1	P50-A104861.....	P50-A136371	
	50100-044-415Z	BODY, frame (Non sanding)	1	P50-A104861.....	P50-A136371	
	50100-044-425C	BODY, frame (Scarlet)	1	P50-A136372.....		
	50100-044-425XE	BODY, frame (Sky blue)	1	P50-A136372.....		
	50100-044-425XP	BODY, frame (Peppermint blue)	1	P50-A136372.....		
	50100-044-425XN	BODY, frame (Apple green)	1	P50-A136372.....		
	50100-044-425XT	BODY, frame (Charcoal gray)	1	P50-A136372.....		
	50100-044-425Z	BODY, frame (Non sanding)	1	P50-A136372.....		
	50100-044-620C	BODY, frame (Scarlet) (Used in France)	1	P50-A100001.....	P50-A104860	
	50100-044-620XE	BODY, frame (Sky blue) (Used in France)	1	P50-A100001.....	P50-A104860	
	50100-044-620XP	BODY, frame (Peppermint blue)	1	P50-A100001.....	P50-A104860	
		(Used in France)				
	50100-044-620XN	BODY, frame (Apple green)	1	P50-A100001.....	P50-A104860	
		(Used in France)				
	50100-044-620XT	BODY, frame (Charcoal gray)	1	P50-A100001.....	P50-A104860	
		(Used in France)				
	50100-044-620Z	BODY, frame (Non sanding)	1	P50-A100001.....	P50-A104860	
		(Used in France)				
	50100-044-621C	BODY, frame (Scarlet) (Used in France)	1	P50-A104861.....	P50-A136371	
	50100-044-621XE	BODY, frame (Sky blue) (Used in France)	1	P50-A104861.....	P50-A136371	
	50100-044-621XP	BODY, frame (Peppermint blue)	1	P50-A104861.....	P50-A136371	
		(Used in France)				
	50100-044-621XN	BODY, frame (Apple green)	1	P50-A104861.....	P50-A136371	
		(Used in France)				
	50100-044-621XT	BODY, frame (Charcoal gray)	1	P50-A104861.....	P50-A136371	
		(Used in France)				
	50100-044-621Z	BODY, frame (Non sanding)	1	P50-A104861.....	P50-A136371	
		(Used in France)				
	50100-044-622C	BODY, frame (Scarlet) (Used in France)	1	P50-A136372.....		
	50100-044-622XE	BODY, frame (Sky blue) (Used in France)	1	P50-A136372.....		

F-12 Frame Body · Air Cleaner · Wire Harness

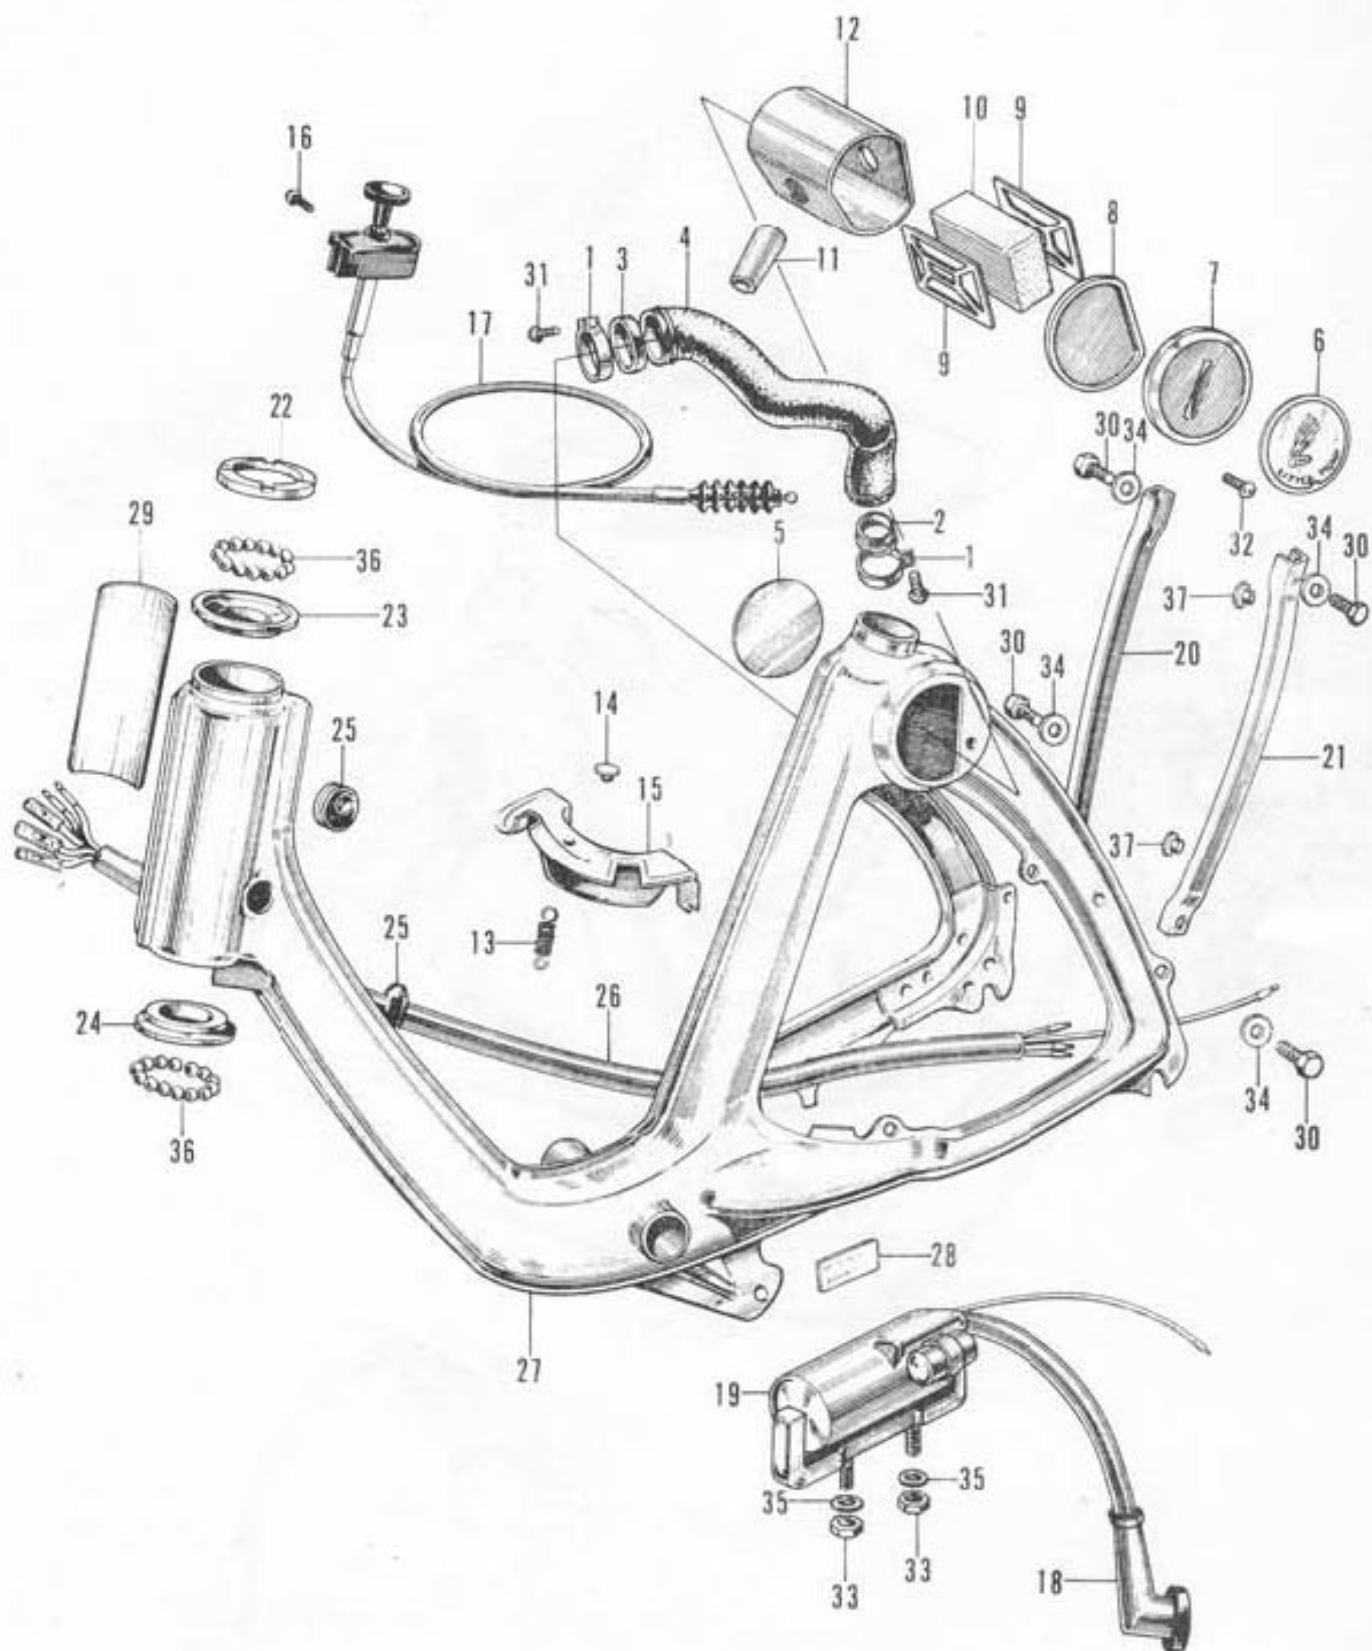

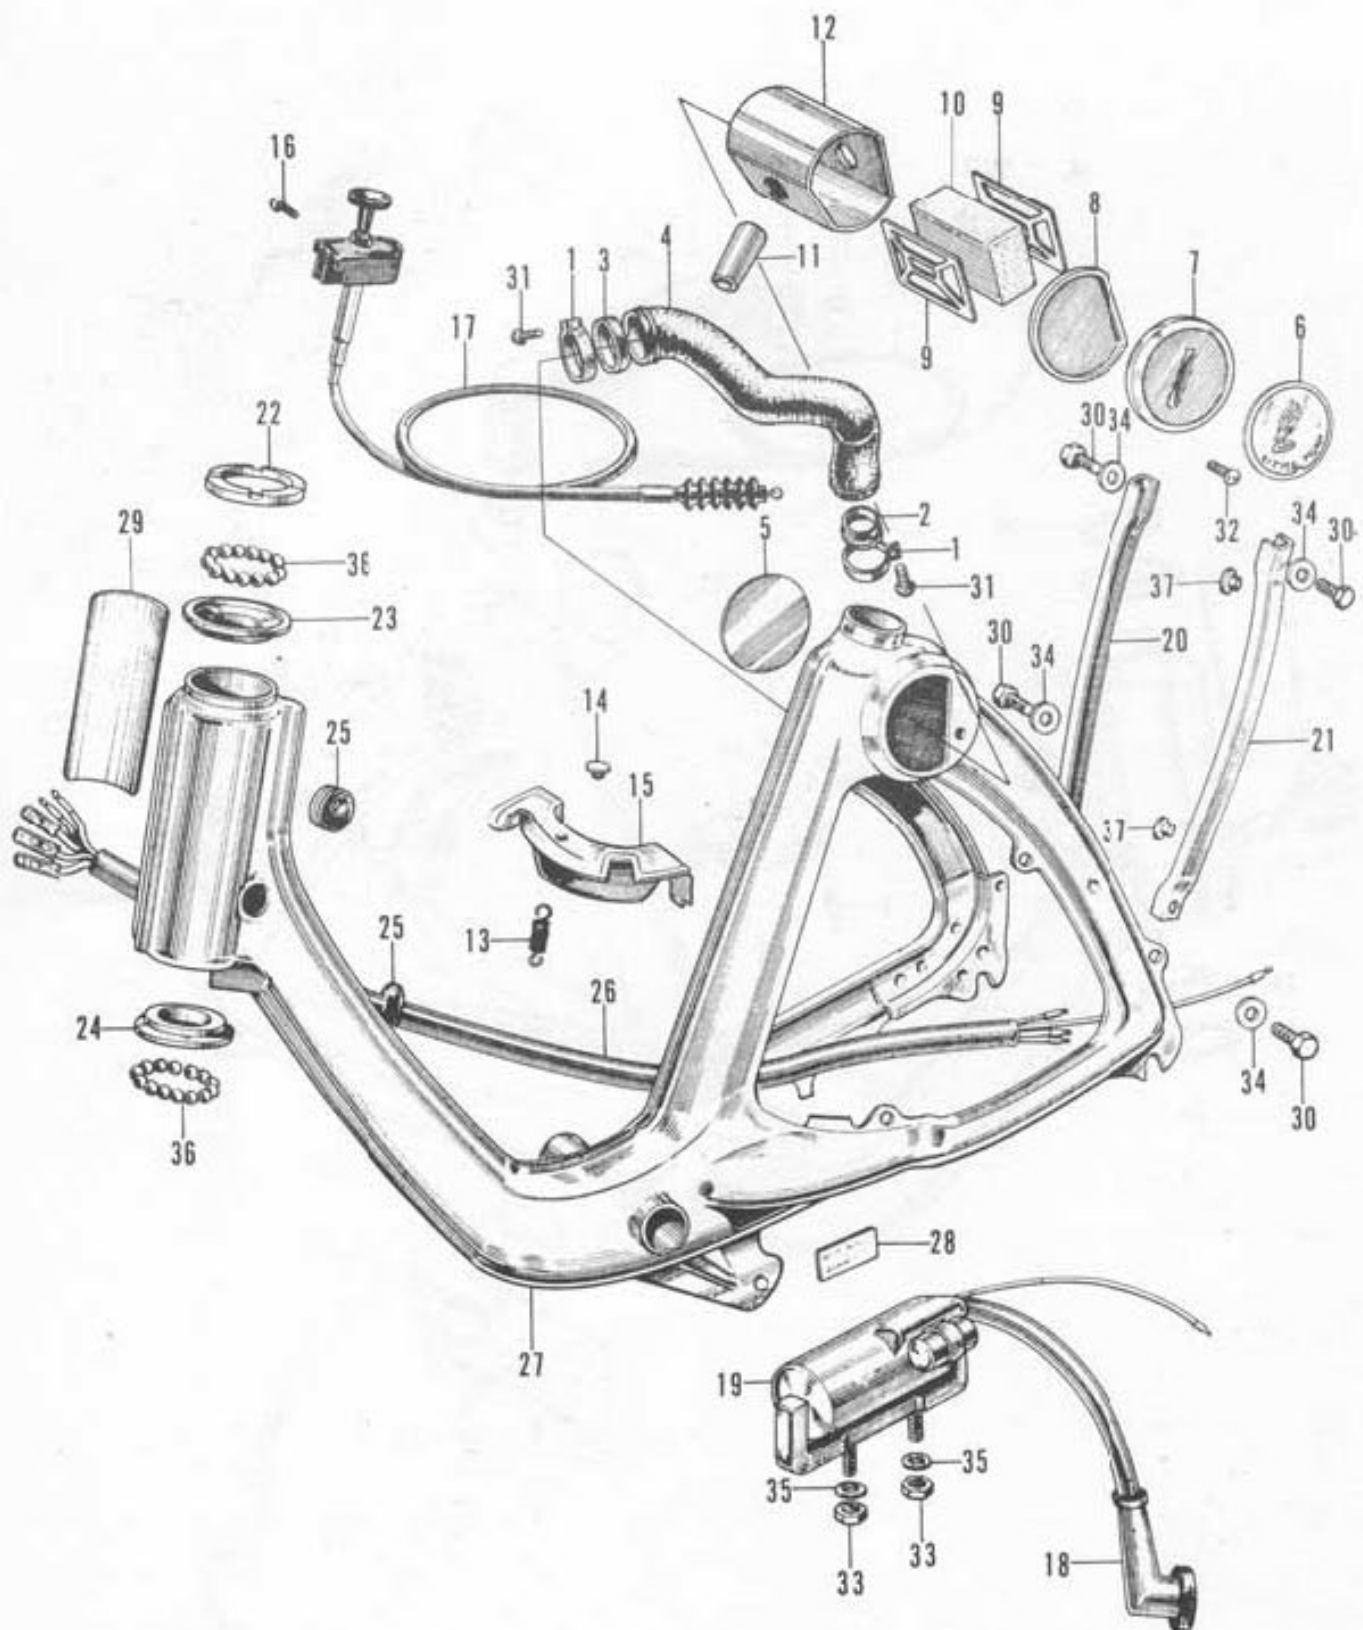


F-12 Frame Body · Air Cleaner · Wire Harness

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	50100-044-622XP	BODY, frame (Peppermint blue) (Used in France)	1	P50-A136372		
	50100-044-622XN	BODY, frame (Apple green) (Used in France)	1	P50-A136372		
	50100-044-622XT	BODY, frame (Charcoal gray) (Used in France)	1	P50-A136372		
	50100-044-622Z	BODY, frame (Non sanding) (Used in France)	1	P50-A136372		
	50100-044-690C	BODY, frame (Scarlet) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-690XE	BODY, frame (Sky blue) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-690XP	BODY, frame (Peppermint blue) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-690XN	BODY, frame (Apple green) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-690XT	BODY, frame (Charcoal gray) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-690Z	BODY, frame (Non sanding) (Used in Netherland)	1	P50-A128651	P50-A136371	
	50100-044-691C	BODY, frame (Scarlet) (Used in Netherland)	1	P50-A136372		
	50100-044-691XE	BODY, frame (Sky blue) (Used in Netherland)	1	P50-A136372		
	50100-044-691XP	BODY, frame (Peppermint blue) (Used in Netherland)	1	P50-A136372		
	50100-044-691XN	BODY, frame (Apple green) (Used in Netherland)	1	P50-A136372		
	50100-044-691XT	BODY, frame (Charcoal gray) (Used in Netherland)	1	P50-A136372		
	50100-044-691Z	BODY, frame (Non sanding) (Used in Netherland)	1	P50-A136372		
28	87125-044-680	PLATE, name	1	P50-A100001		
29	87501-044-620	PLATE, registered number	1	P50-A100001		
30	92000-06014	BOLT, hex., 6×14	4			
31	93518-04020	SCREW, cross, 4×20	2			
32	93714-04016	SCREW, cross, 4×16	1			
33	94001-06000	NUT, hex., 6 mm	2			
34	94101-06000	WASHER, flat, 6 mm	4			
35	94111-06000	WASHER, spring, 6 mm	2			
36	96211-06000	BALL, steel, 2 5/8	46			
37	17707-044-000	GROMMET, tail cord	2	P50-A107569		


F-13 Battery (Used in U.S.A.)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	31500-044-670	BATTERY ASSY.	1	P50-A167186.....		
2	31501-044-670	RUBBER A, battery mount.....	1	P50-A167186.....		
3	31503-044-670	RUBBER B, battery mount.....	2	P50-A167186.....		
4	31700-044-670	RECTIFIER ASSY., selenium	1	P50-A167186.....		
5	32101-044-810	CORD, battery sub.....	1	P50-A167186.....		
6	32106-253-000	CONNECTOR B, fuse	1	P50-A167186.....		
7	32112-253-010	CONNECTOR A, fuse.....	1	P50-A167186.....		
8	38201-030-000	FUSE	1	P50-A167186.....		
9	50373-044-671	BAND, battery.....	1	P50-A167186.....		
10	50381-044-671XL	PLATE, battery hunger	1	P50-A167186.....		
11	83600-044-671XL	COVER, battery	1	P50-A167186.....		
12	93500-06010	SCREW, cross, 6×10	2			
13	93500-06014	SCREW, cross, 6×14	1			
14	38301-044-870	STAY, signal stat	1	P50-A167186.....		
15	38305-044-303	CORD, winker relay	1	P50-A167186.....		
16	38300-044-870	SIGNAL STAT COMP	1	P50-A167186.....		

F-13 Battery (Used in U.S.A.)

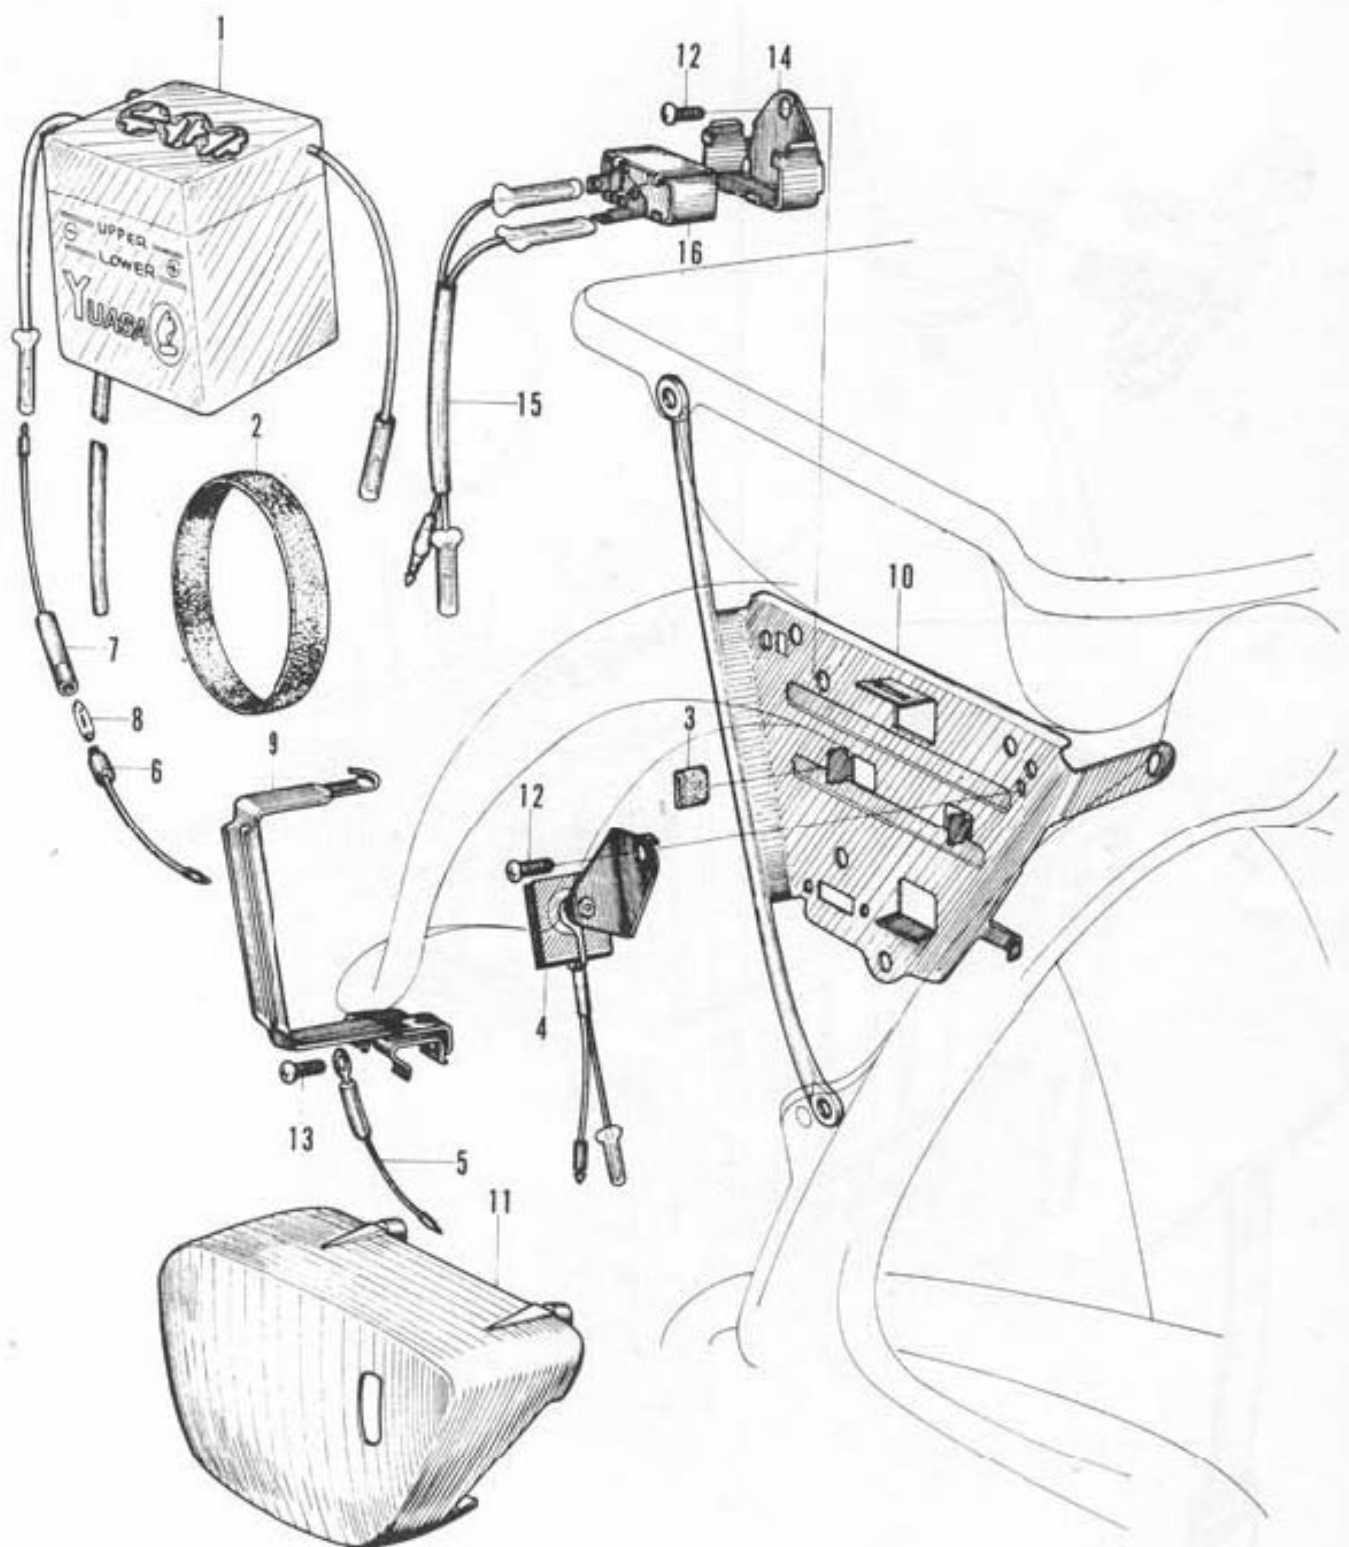

F-14 Basket Hook (Optional Parts)

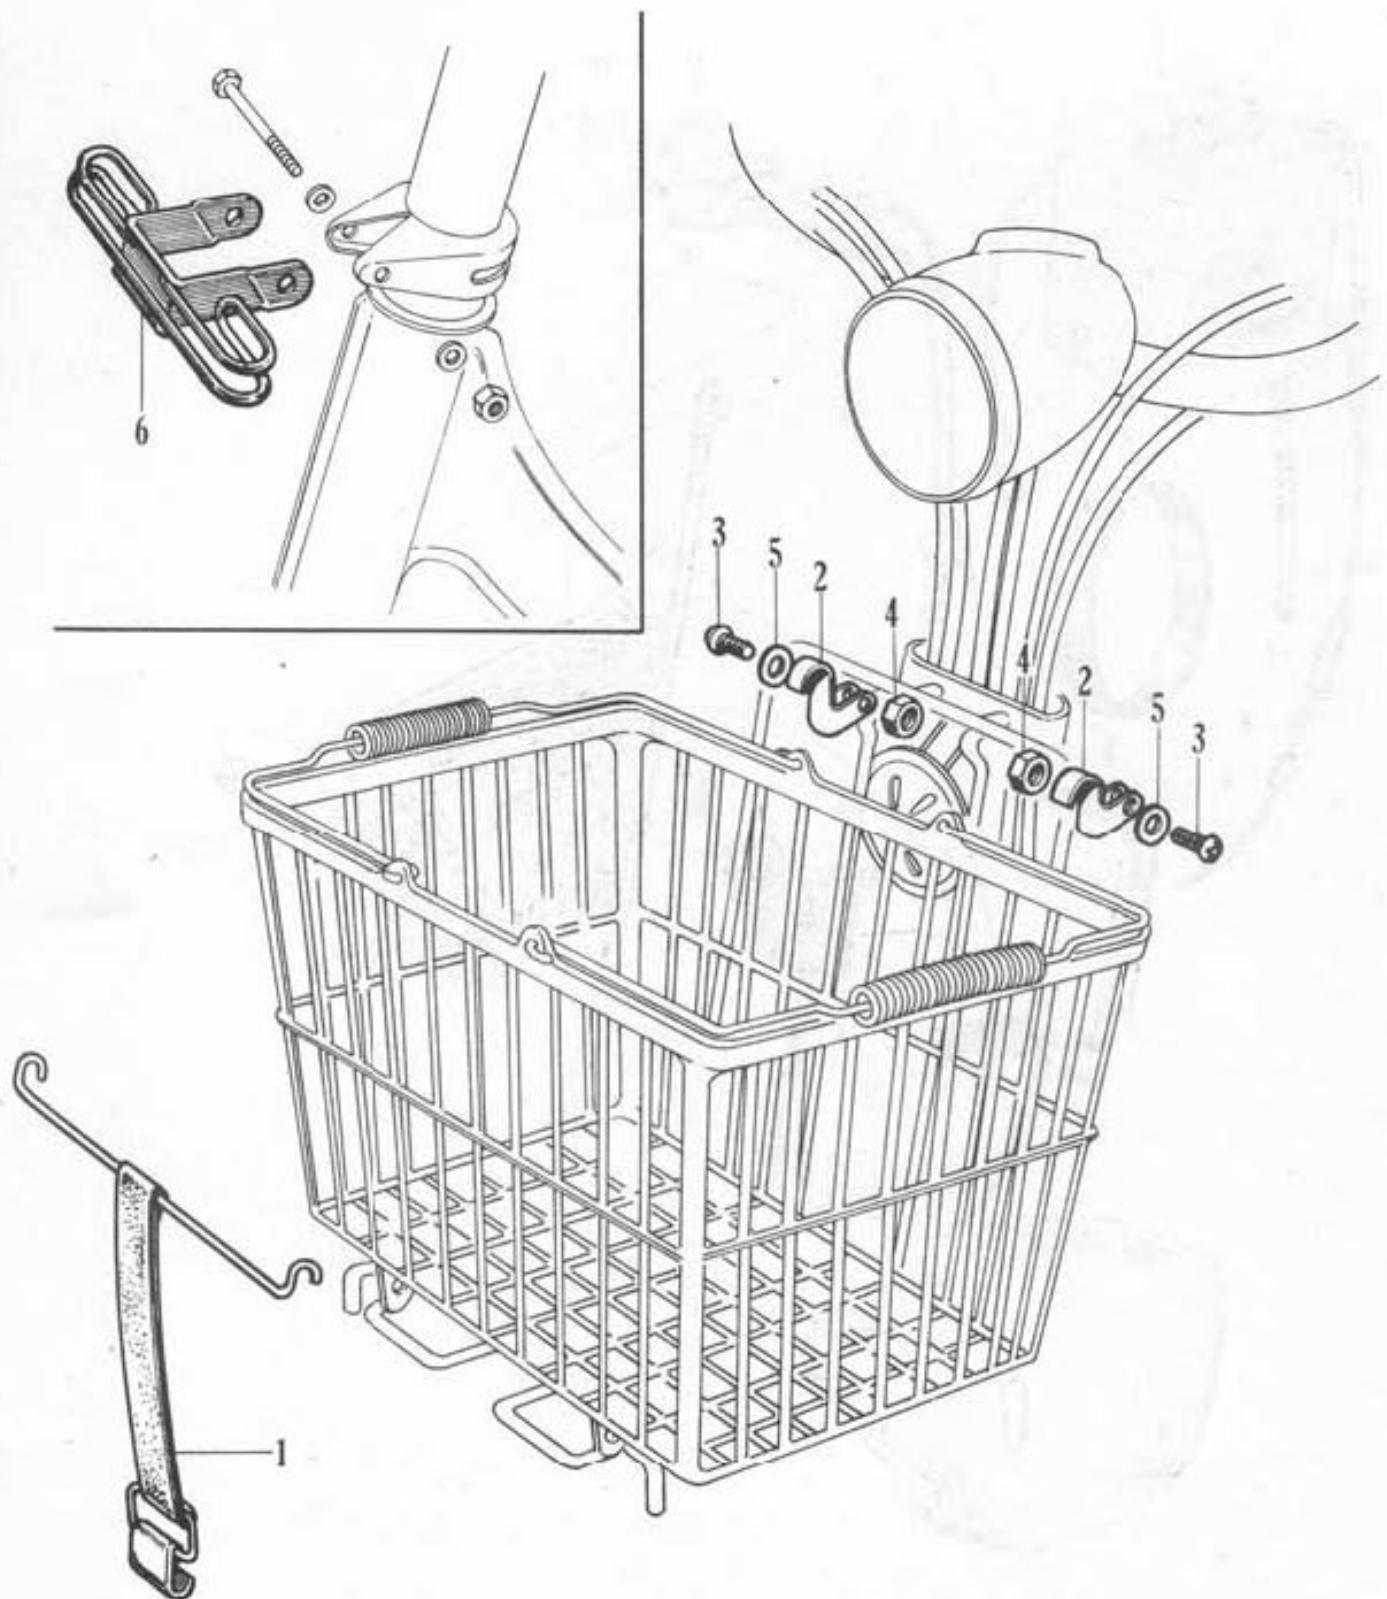


F-14 Basket Hook (Optional Parts)


Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	06800-044000	HOOK-KIT, basket	1	P50-A100001		
1	81221-044-811	HORK A, basket	1	P50-A100001		
2	81222-044-810	HOOK B, basket	2	P50-A100001		
3	93500-06012	SCREW, cross, 6×12	2			
4	94001-06000	NUT, hex., 6 mm	2			
5	94101-06000	WASHER, flat, 6 mm	2			
6	81213-044-690	CLIP, wire	1	P50-A100001		

F-15 Head Light Bracket · Exhaust Pipe Protector (Optional Parts)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	06810-044000	BRACKET-KIT, head light	1	P50-A100001		
2	18240-044-810	PROTECTOR, exhaust pipe	1	P50-A100001		
3	92000-06016	BOLT, hex., 6×16	2			
4	94001-06000	NUT, hex., 6 mm	2			
5	94101-06000	WASHER, flat, 6 mm	2			

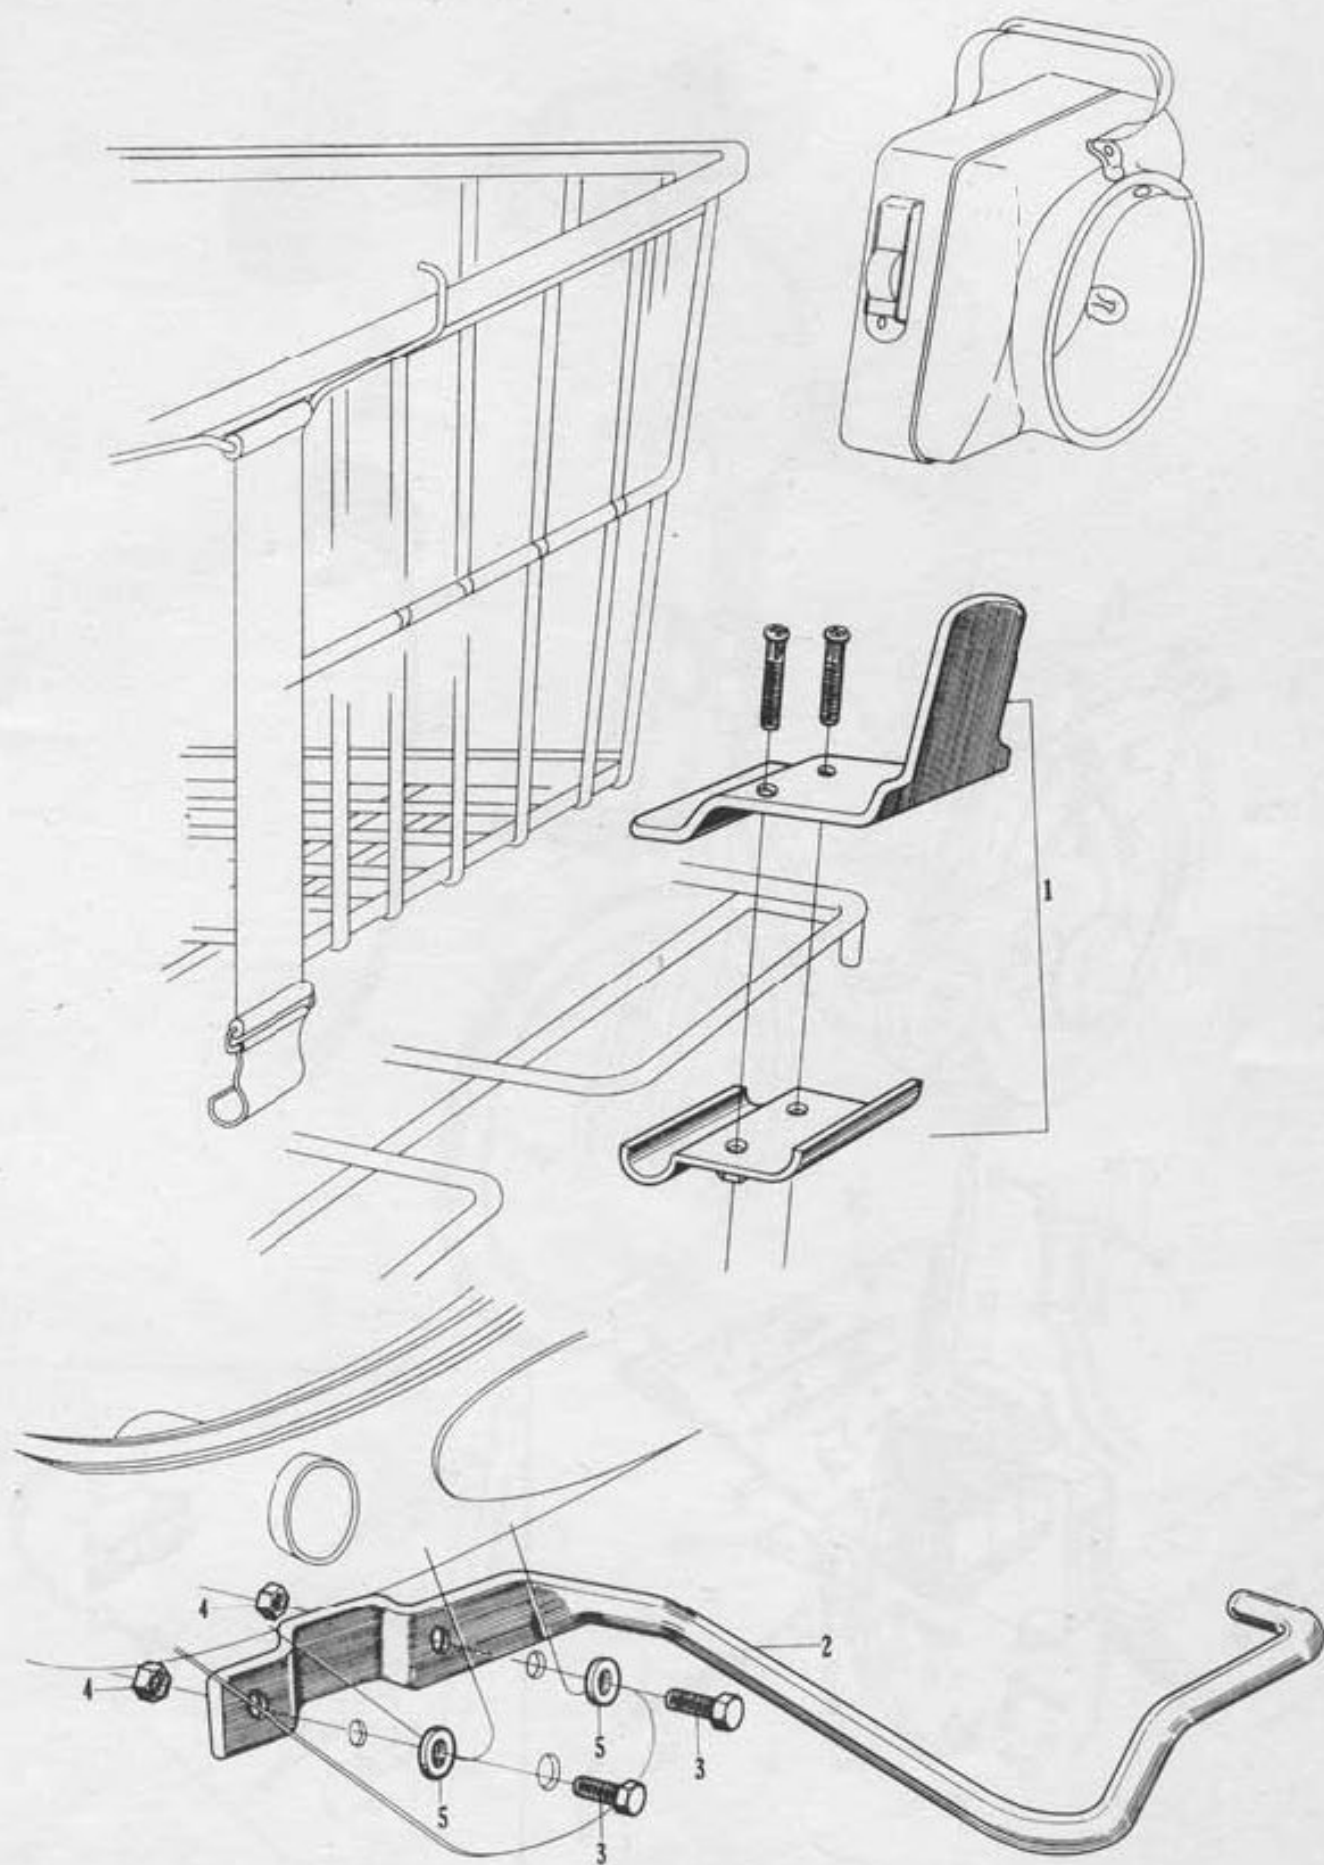

F-16 Winker (1) (Optional Parts)

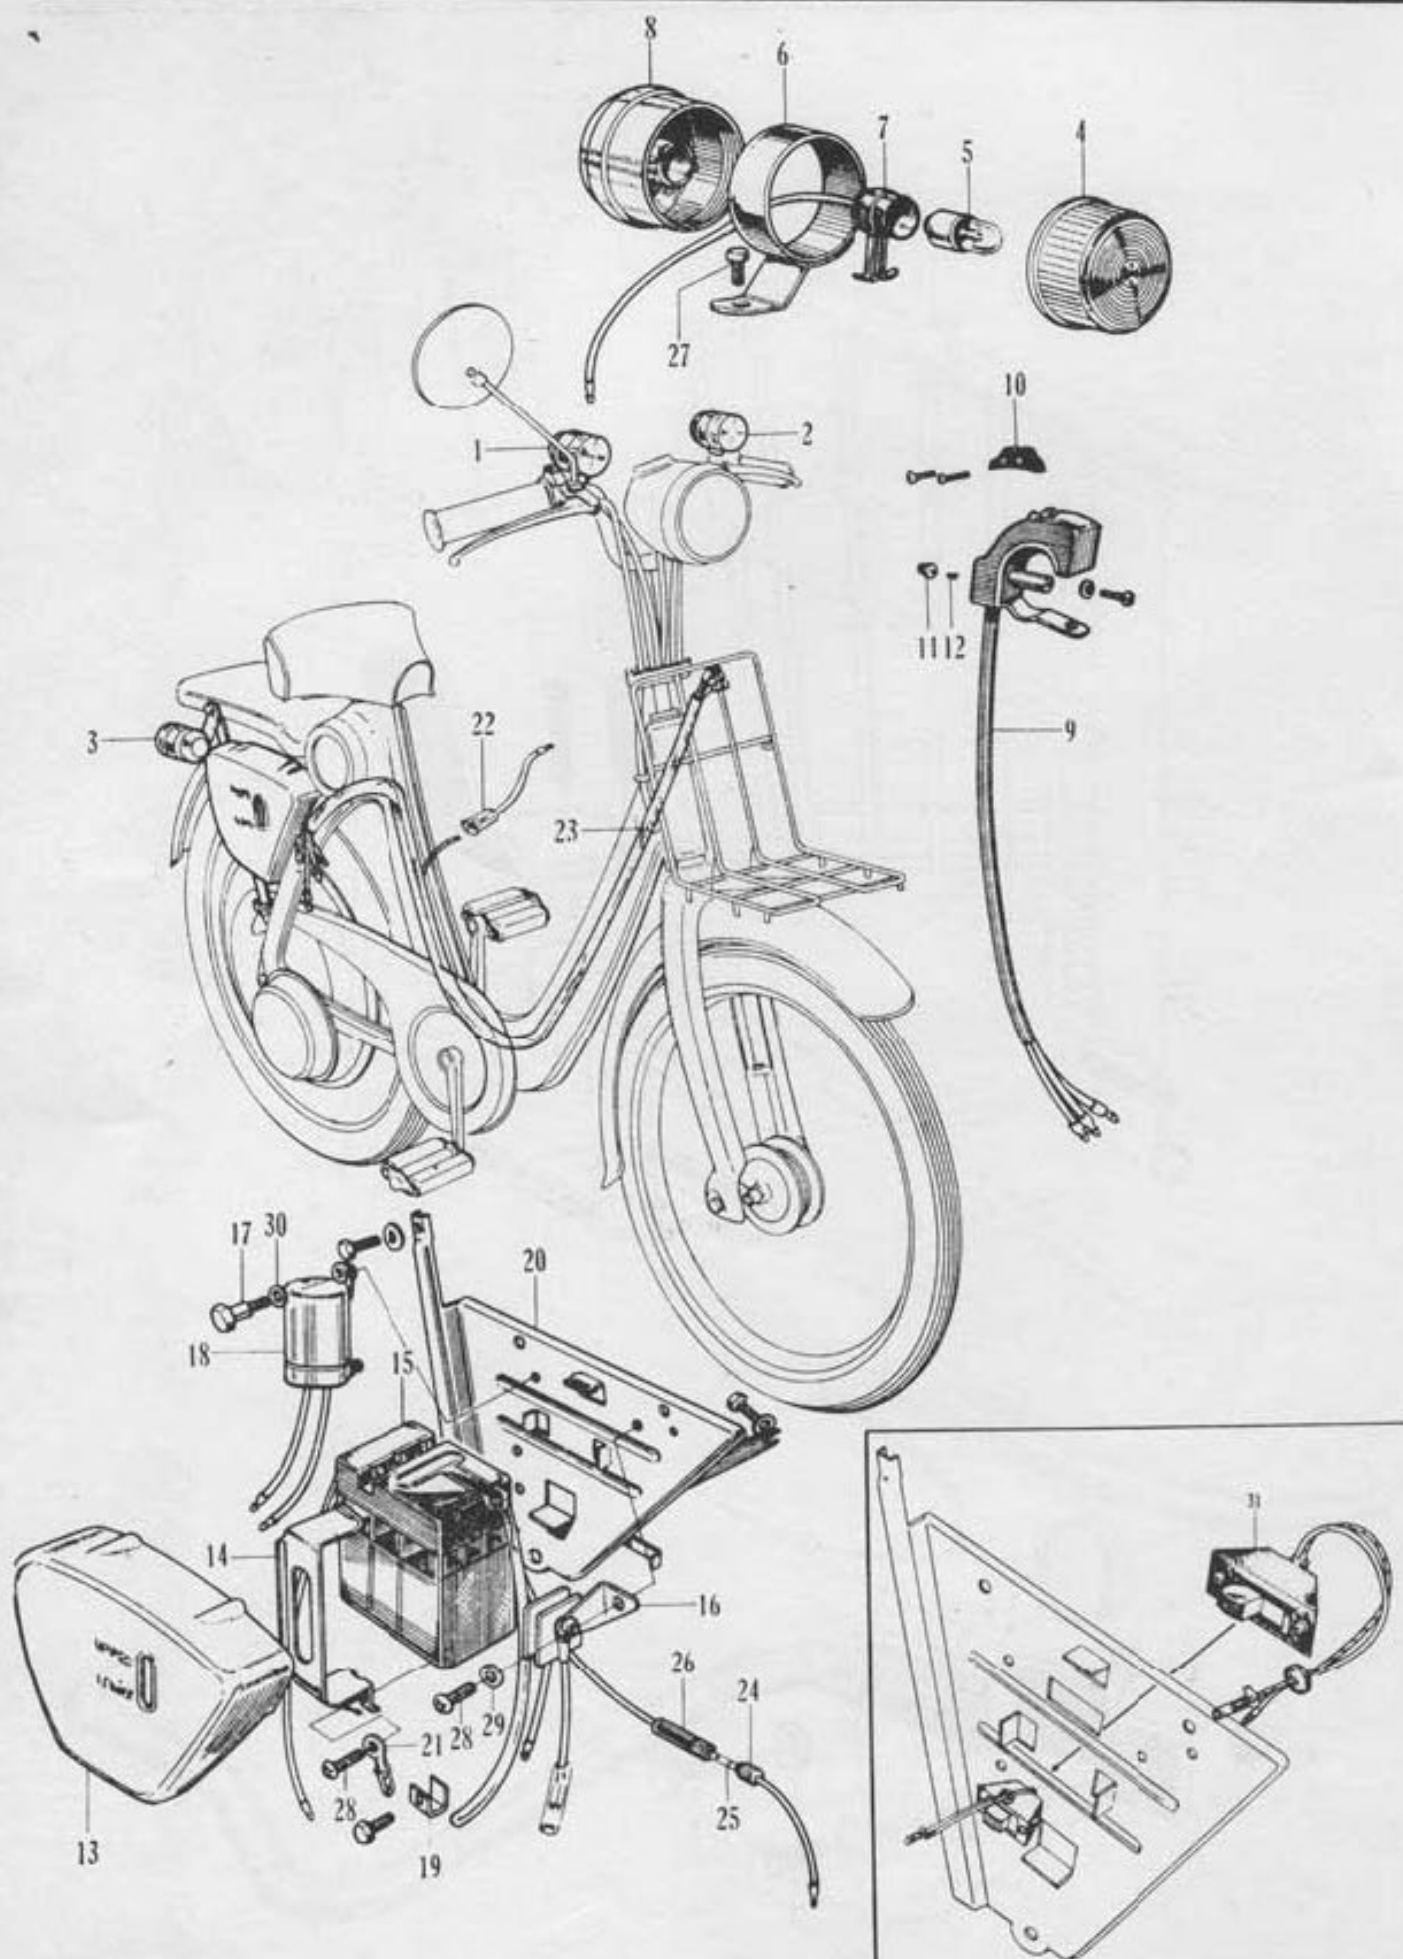


F-16 Winker (1) (Optional Parts)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	06300-044000C	KIT, winker (Scarlet)	1	P50-A100001		
	06300-044000XE	KIT, winker (Sky blue).....	1	P50-A100001		
	06300-044000XP	KIT, winker (Peppermint blue)	1	P50-A100001		
	06300-044000XN	KIT, winker (Apple green)	1	P50-A100001		
	06300-044000XT	KIT, winker (Charcoal gray)	1	P50-A100001		
1	33410-044-811	WINKER ASSY., right front	1	P50-A100001		
2	33450-044-811	WINKER ASSY., left front	1	P50-A100001		
3	33420-044-811	WINKER ASSY., right rear	1	P50-A100001		
	33470-044-811	WINKER ASSY., left rear	1	P50-A100001		
4	33415-044-810	LENS, winker	4	P50-A100001		
5	34905-001-000	BULB, winker	4	P50-A100001		
6	33411-044-810	BRACKET, right, front winker	1	P50-A100001		
	33451-044-810	BRACKET, left, front winker	1	P50-A100001		
	33421-044-810	BRACKET, right, rear winker	1	P50-A100001		
	33471-044-810	BRACKET, left, rear winker	1	P50-A100001		
7	33412-044-811	SOCKET, right winker	2	P50-A100001		
	33452-044-811	SOCKET, left winker	2	P50-A100001		
8	33413-044-810XL	BODY, winker (Ivory white)	4	P50-A100001		
9	35269-044-810	SWITCH ASSY., horn button winker.....	1	P50-A100001		
10	35253-259-300	KNOB, winker switch	1	P50-A100001		
11	35317-001-310	BUTTON, horn push	1	P50-A100001		
12	35318-259-000	SPRING, push button	1	P50-A100001		
13	83600-044-810XL	COVER, battery	1	P50-A100001		
14	50373-044-810B	BAND, battery	1	P50-A100001		
15	31500-001-030	BATTERY ASSY.	1	P50-A100001		
16	31700-044-810	RECTIFIER, selenium	1	P50-A100001		
17	90157-001-000	BOLT, winker relay setting... ..	1	P50-A100001		
18	38300-041-000	RELAY ASSY, winker	1	P50-A100001		
19	31505-044-810	CLIP, breather pipe	1	P50-A100001		
20	50381-044-810C	PLATE, battery hanger (Scarlet)	1	P50-A100001		
	50381-044-810XE	PLATE, battery hanger (Sky blue)	1	P50-A100001		
	50381-044-810XP	PLATE, battery hanger (Peppermint blue)	1	P50-A100001		
	50381-044-810XN	PLATE, battery hanger (Apple green).....	1	P50-A100001		


F-16 Winker (1) (Optional Parts)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
	50381-044-810XT	PLATE, battery hanger (Charcoal gray)...	1	P50-A100001		
21	32101-044-810	SUB-CORD, battery	1	P50-A100001		
22	32102-044-810	SUB-CORD, A.C. genera er	1	P50-A100001		
23	32100-044-810	HARNESS, wire	1	P50-A100001		
24	32112-253-010	CONNECTOR A, fuse	1	P50-A100001		
25	38201-001-000	FUSE	1	P50-A100001		
26	32106-253-010	CONNECTOR B, fuse	1	P50-A100001		
27	92000-08014	BOLT, hex., 3x14	1			
28	93500-06014	SCREW, cross, 6x14	2			
29	94101-06000	WASHER, flat, 6 mm.....	1			
30	94101-08000	WASHER, flat, 8 mm	1			
31	35100-044-810	SWITCH ASSY., battery	1	P50-A100001		

F-16 Winker (1) (Optional Parts)

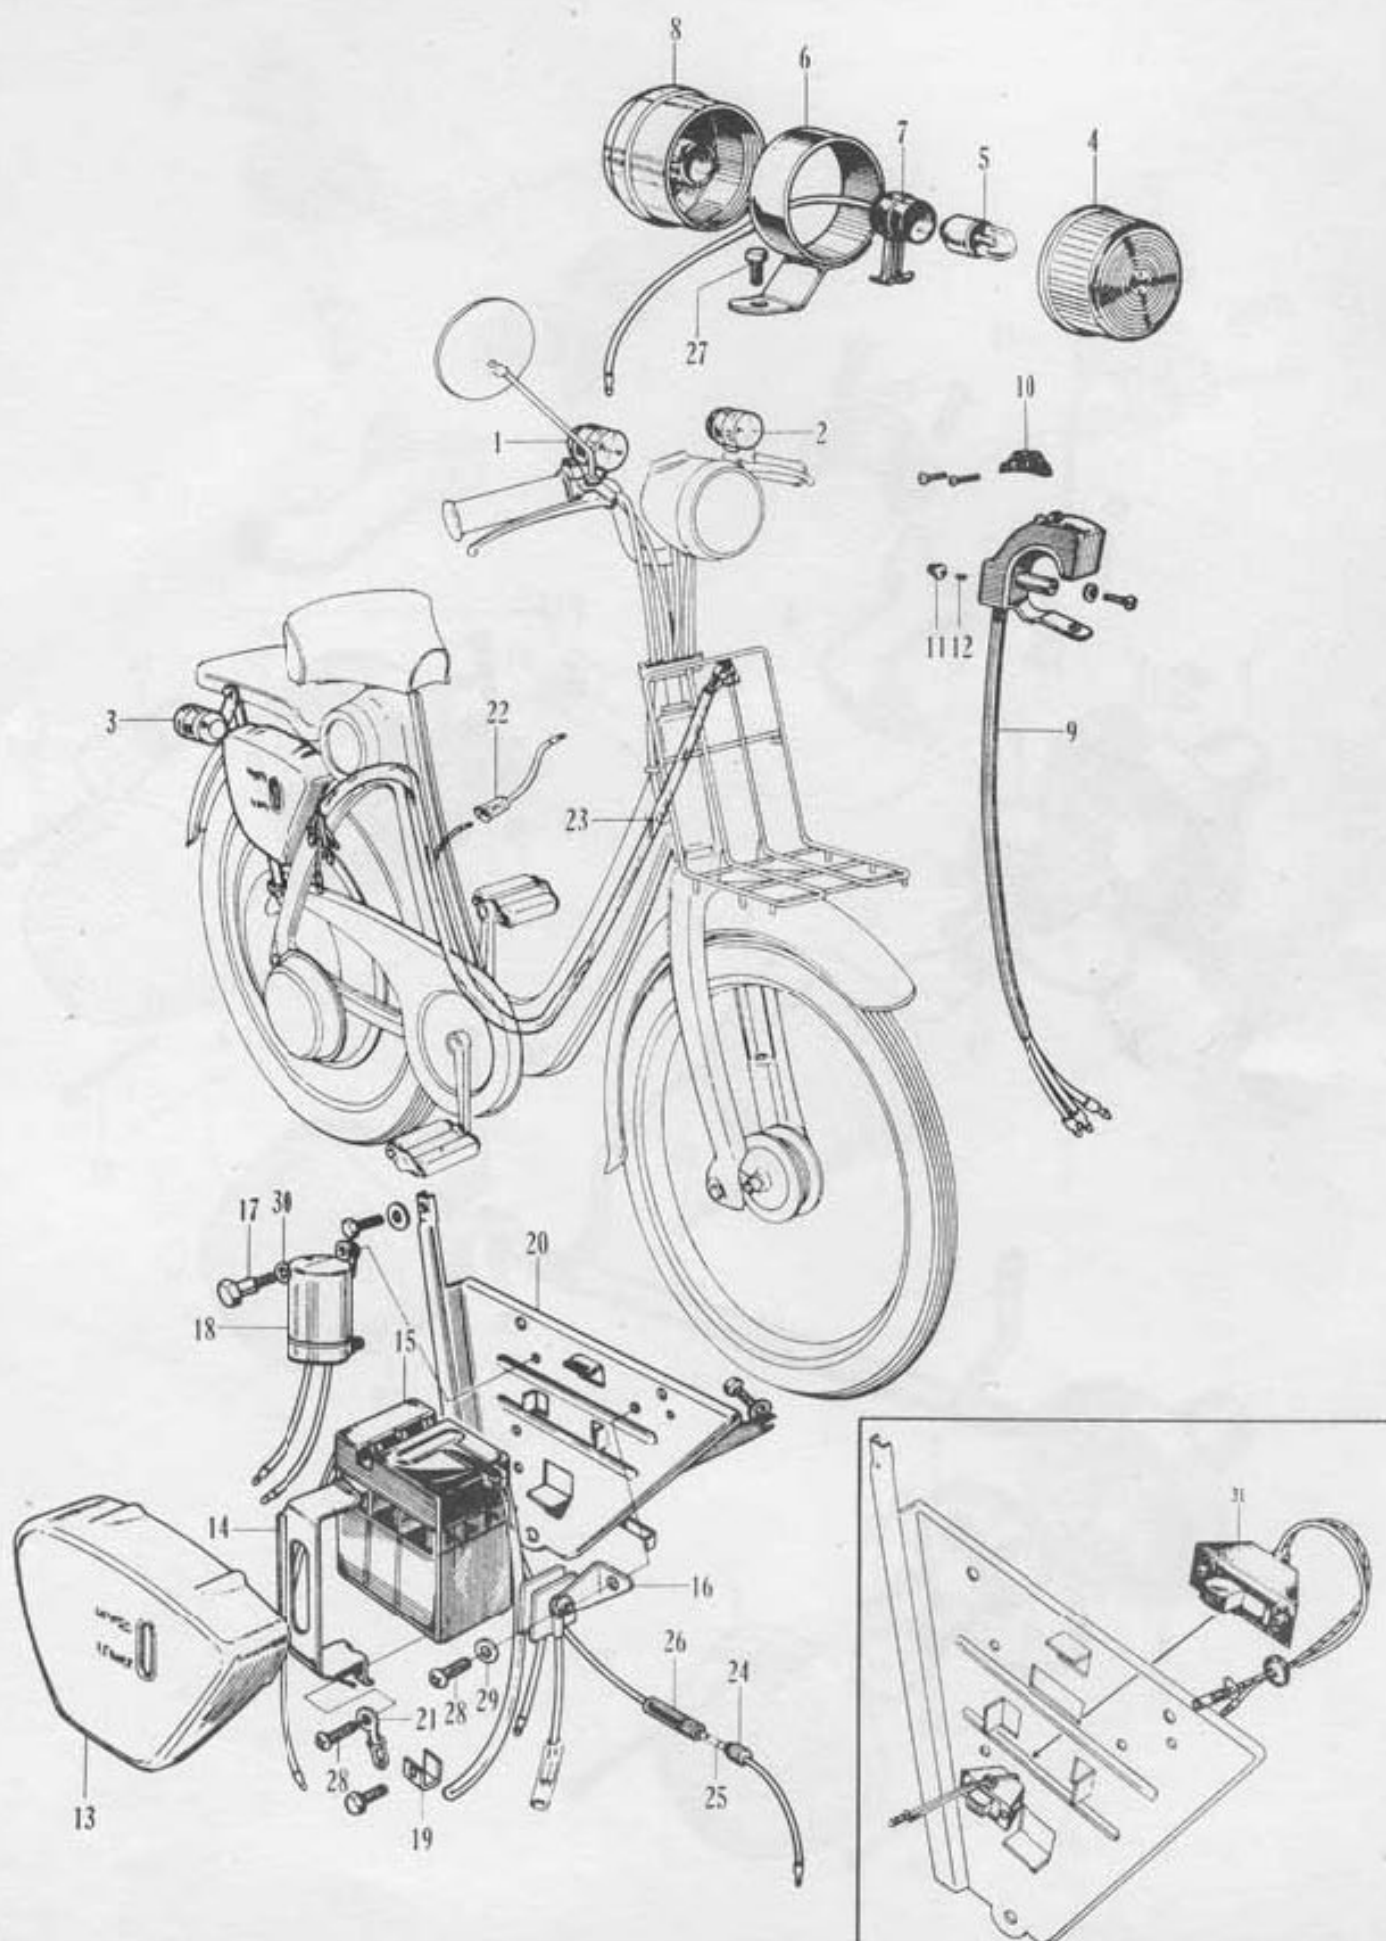

F-16 Winker (2) (Used in U.S.A.) (Optional Parts)

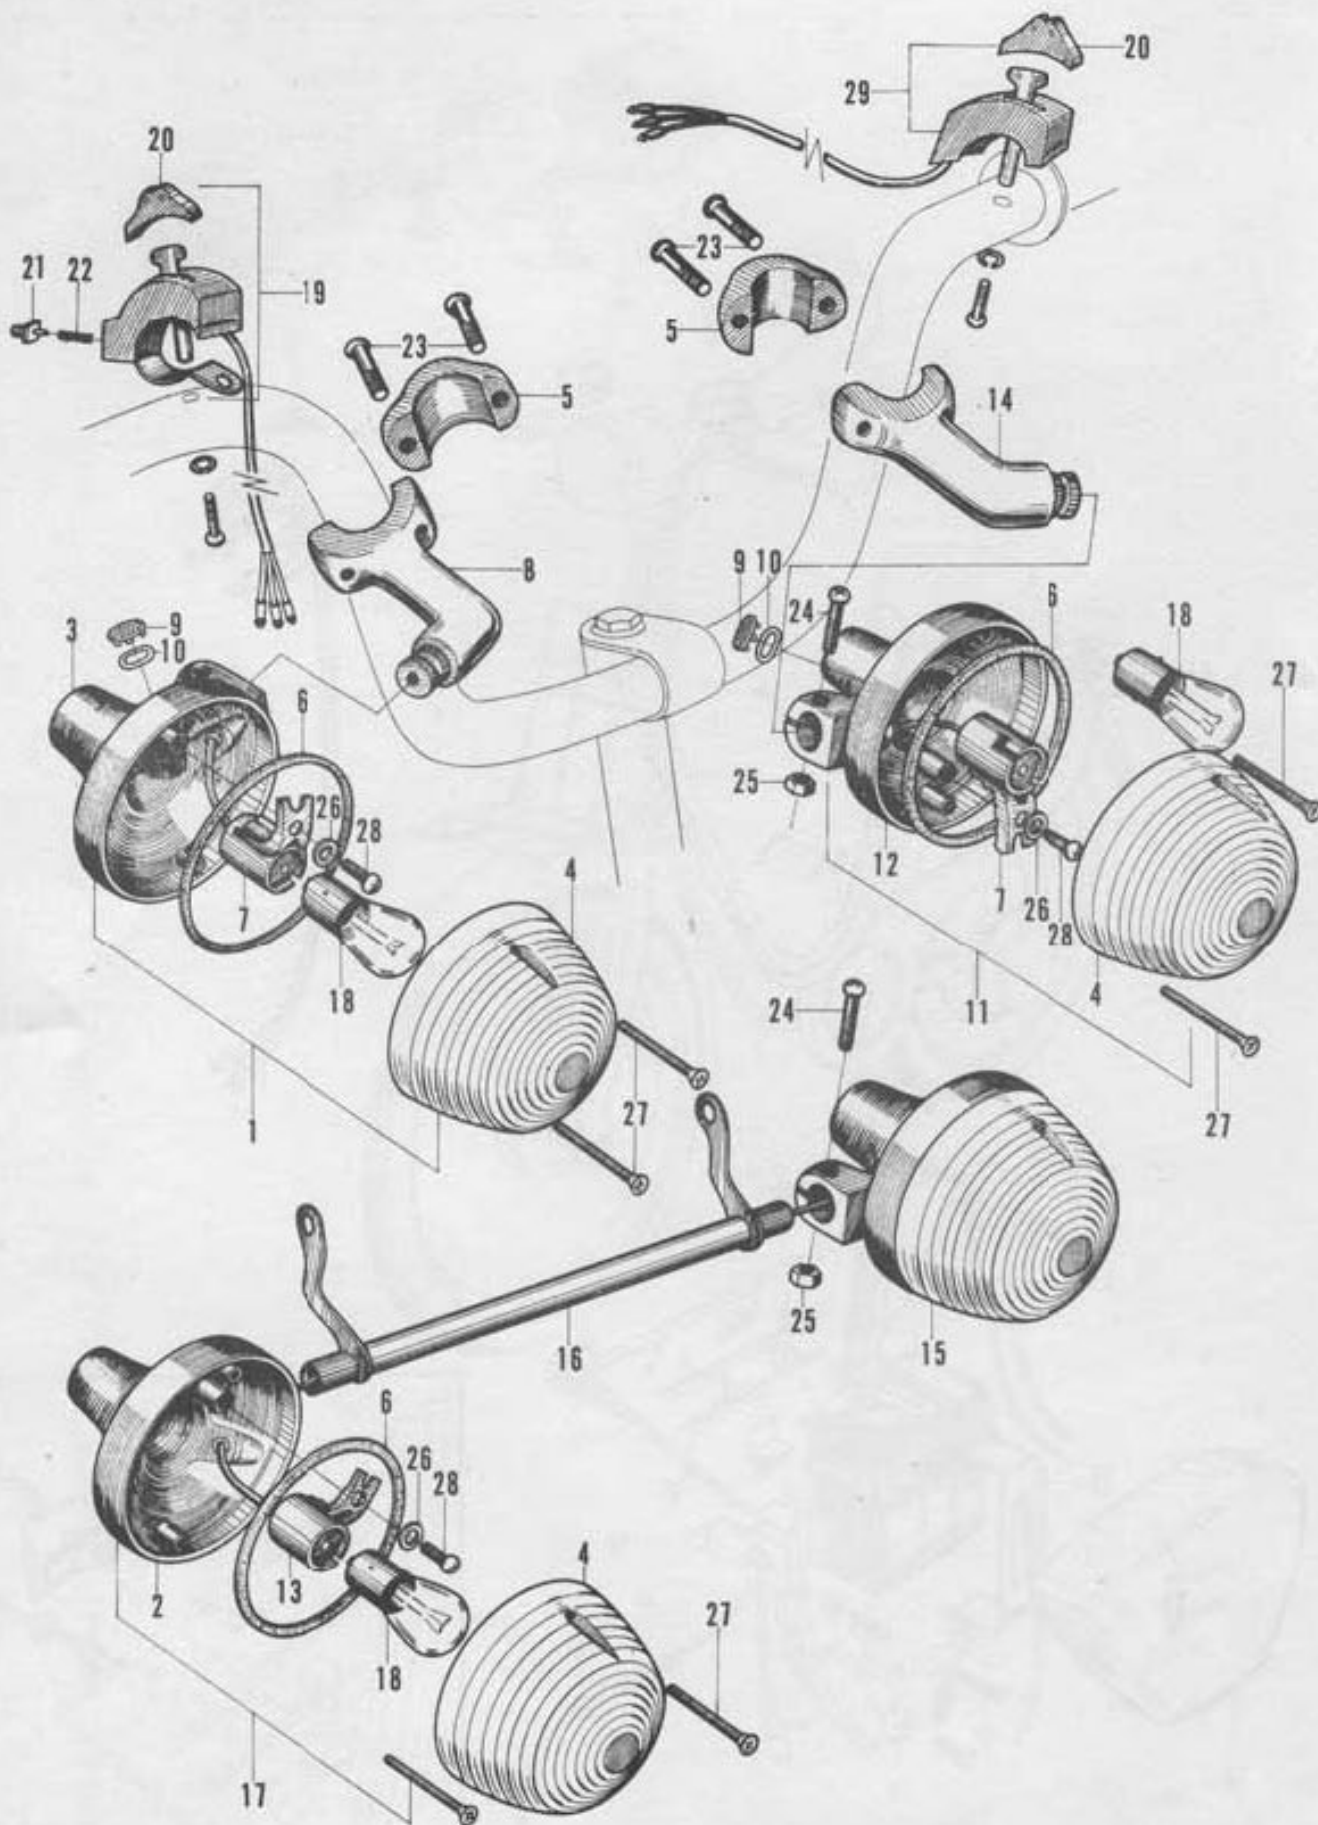

F-16 Winker (2) (Used in U.S.A.) (Optional Parts)

Ref. No.	Part No.	Description	Reqd. No.	No. Used on		News No.
				From	To	
1	33400-044-870	WINKER ASSY., right front	1	P50-A167186.....		
2	33401-268-671	BASE, winker	2	P50-A167186.....		
3	33401-272-305	BASF, right front winker	1	P50-A167186.....		
4	33402-268-671	LENS, winker	4	P50-A167186.....		
5	33406-035-670	HOLDER, front winker	2	P50-A167186.....		
6	33443-268-671	PACKING, winker lens	4	P50-A167186.....		
7	33410-044-870	SOCKET, right front winker	2	P50-A167186.....		
8	33420-044-870	BRACKET, right front winker	1	P50-A167186.....		
9	33420-041-672	LENS, winker pilot	2	P50-A167186.....		
10	33421-283-670	PACKING, winker pilot lens	2	P50-A167186.....		
11	33450-044-870	WINKER ASSY., left front	1	P50-A167186		
12	33451-272-305	BASE, left front winker	1	P50-A167186.....		
13	33453-044-870	SOCKET, left	2	P50-A167186.....		
14	33470-044-870	BRACKET, left front winker.....	1	P50-A167186.....		
15	33600-044-870	WINKER, ASSY., right rear	1	P50-A167186.....		
16	33606-044-870	BRACKET, rear winker	1	P50-A167186		
17	33650-044-870	WINKER ASSY., left rear	1	P50-A167186.....		
18	34905-053-000	BULB, winker	4	P50-A167186.....		
19	35269-044-870	SWITCH ASSY., horn winker	1	P50-A167186		
20	35253-044-870	KNOB, winker switch	2	P50-A167186		
21	35317-001-310	BUTTON, horn winker switch push	1	P50-A167186.....		
22	35318-259-000	SPRING, push button	1	P50-A167186.....		
23	93500-05025	SCREW, cross, 5×25	4			
24	93500-06025	SCREW, cross, 6×25	4			
25	94001-06000	NUT, hex., 6 mm	4			
26	94111-05000	WASHER, spring, 5 mm	4			
27	93700-03025	SCREW, cross, 3×25	8			
28	93500-05008	SCREW, cross, 5×8	4			
29	35300-044-670	SWITCH ASSY., dimmer	1	P50-A167186.....		

PART NO. INDEX

[illegible]

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
23150-044-000.....	7	32101-044-810... 64,72		33453-044-870.....	75	35353-044-010.....	55
23211-044-000.....	7	32102-044-810.....	72	33470-044-811.....	71		
23221-044-030.....	7	32106-253-000.....	64	33470-044-870.....	75	37000 Parts	
23221-044-690.....	7	32106-253-010.....	72	33471-044-810.....	71	37200-044-602.....	27
23310-044-691.....	7	32112-253-010... 64,72		33600-044-870.....	75	37200-044-680.....	27
23311-044-020.....	7	32906-044-020.....	12	33606-044-870.....	75	37200-044-682.....	27
23311-044-030.....	7	32956-044-000.....	15	33650-044-870.....	75	37200-044-691.....	27
23320-044-691.....	7	32956-044-670.....	15	33700-044-000.....	39	37201-044-680.....	27
23321-044-020.....	7	32983-044-000.....	59	33700-044-600.....	43	37550-044-671.....	31
23350-044-000.....	7	32983-044-010.....	59	33700-044-620.....	39	37551-044-670.....	31
23410-044-080.....	52	32985-044-000.....	55	33700-044-671.....	44		
				33701-044-000.....	39		
24000 Parts		33000 Parts		33701-268-600.....	43	38000 Parts	
24111-044-010.....	7	33100-044-000.....	27	33701-268-680.....	44	38100-044-010.....	27
24611-044-020.....	15	33100-044-620.....	27	33703-044-000.....	39	38100-044-670.....	27
24611-044-030.....	15	33100-044-671.....	31	33703-044-600.....	43	38201-001-000.....	72
24612-044-000.....	15	33101-044-671.....	31	33703-044-621.....	39	38201-030-000.....	64
24615-044-000.....	7	33102-001-003.....	31	33703-044-671.....	44	38300-041-000.....	71
24615-044-010.....	7	33107-001-003.....	31	33705-044-600.....	44	38300-044-870.....	64
24621-044-020.....	7	33117-001-003.....	31	33705-044-670.....	43	38301-044-870.....	64
		33120-044-671.....	31	33705-268-670.....	39	38305-044-303.....	64
		33121-044-000.....	27	33709-044-000.....	39		
30000 Parts		33123-044-000.....	27	33709-268-810... 43,44		40000 Parts	
30202-044-000.....	15	33125-200-030.....	31	33711-044-000.....	39	40210-044-020.....	47
30206-044-004.....	15	33128-200-033.....	31	33712-044-690A.....	40	40210-044-690.....	47
30500-044-010.....	56	33130-044-000.....	27	33719-041-300.....	44	40215-044-000.....	47
30540-044-004.....	15	33130-044-620.....	27			40220-044-020.....	47
30700-044-682.....	56	33130-044-671.....	31	34000 Parts		40225-044-000.....	47
		33182-044-671.....	31	34901-001-671.....	31	40230-044-020.....	47
31000 Parts		33183-044-671.....	31	34902-044-000.....	28	40230-044-030.....	47
31121-044-681.....	12	33400-044-870.....	75	34905-001-000.....	71	40235-044-000.....	47
31500-001-030.....	71	33401-268-671.....	75	34905-053-000.....	75	40240-044-020.....	47
31500-044-670.....	64	33401-272-305.....	75	34906-044-000.....	39	40245-044-000.....	47
31501-044-670.....	64	33402-268-671.....	75	34906-202-830... 43,44		40510-044-010C.....	47
31503-044-670.....	64	33406-035-670.....	75			40510-044-010XE.....	47
31505-044-810.....	71	33410-044-811.....	71	35000 Parts		40510-044-010XP.....	47
31631-044-601.....	15	33410-044-870.....	75	35100-044-030.....	27	40510-044-010XN.....	47
31631-044-621.....	15	33411-044-810.....	71	35100-044-671.....	31	40510-044-010XT.....	47
31631-044-671.....	15	33412-044-811.....	71	35100-044-810.....	72	40510-044-010Z.....	47
31631-044-681.....	15	33413-044-810XL.....	71	35253-259-300.....	71	40510-044-020XL.....	47
31700-044-670.....	64	33415-044-810.....	71	35253-044-870.....	75	40512-044-000.....	47
31700-044-810.....	71	33420-041-672.....	75	35269-044-810.....	71	40530-044-000.....	47
		33420-044-811.....	71	35269-044-870.....	75	40531-044-000.....	47
		33420-044-870.....	75	35300-044-010.....	24	40540-044-040.....	47
32000 Parts		33421-283-670.....	75	35300-044-670.....	75	40543-044-030.....	48
32100-044-030.....	59	33421-044-810.....	71	35310-044-680.....	24	40545-044-040.....	47
32100-044-040.....	59	33443-268-671.....	75	35317-001-310... 71,75		40553-044-000.....	48
32100-044-600.....	59	33450-044-811.....	71	35318-259-000... 71,75			
32100-044-601.....	59	33450-044-870.....	75	35350-044-010.....	55		
32100-044-671.....	59	33451-272-305.....	75	35350-044-020.....	55		
32100-044-810.....	72	33451-044-810.....	71	35350-044-671.....	55		
		33452-044-811.....	71				

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
41000 Parts		45000 Parts		50100-044-622XE ...60		51100-044-070Z 32	
41201-044-040.....52		45100-044-050.....36		50100-044-622XP ...63		51210-044-040.....32	
41311-044-020.....52		45100-044-060.....36		50100-044-622XN ...63		51210-044-303.....32	
41315-044-010.....52		45100-044-070.....36		50100-044-622XT ...63		51211-044-000.....32	
41321-044-000.....52		45120-044-000.....36		50100-044-622Z63		51213-044-000.....32	
42000 Parts		45131-044-020.....36		50100-044-690C63		51220-044-040.....35	
42300-044-040.....11		45131-044-030.....36		50100-044-690XE ...63		51220-044-303.....35	
42315-044-000.....52		45133-044-000.....36		50100-044-690XP ...63		51220-044-690.....35	
42601-044-030.....52		45410-044-030.....36		50100-044-690XN ...63		51221-044-000.....32	
42608-044-010.....52		45450-044-000.....24		50100-044-690XT ...63		51223-044-000.....32	
42638-044-010.....52		45461-001-000.....55		50100-044-690Z63		51231-044-000.....32	
42701-044-010.....52		50000 Parts		50100-044-691C63		51400-044-030.....32	
42701-044-690.....52		50100-044-080C59		50100-044-691XE ...63		51400-044-691.....32	
42711-044-000.....52		50100-044-080XE ...59		50100-044-691XP ...63		51401-044-040.....32	
43000 Parts		50100-044-080XP ...59		50100-044-691XN ...63		51402-044-030.....32	
43120-044-010.....55		50100-044-080XN ...59		50100-044-691XT ...63		51403-044-040.....32	
43133-044-020.....55		50100-044-080XT ...59		50100-044-691Z63		51403-044-690.....32	
43141-044-030.....55		50100-044-080Z59		50201-044-000.....56		51404-044-030.....32	
43410-044-030.....55		50100-044-405C60		50201-044-690R56		51405-044-000.....32	
43431-044-010.....51		50100-044-405XE ...60		50202-044-000.....56		51405-044-690.....32	
43431-044-680.....51		50100-044-405XP ...60		50202-044-690.....56		53000 Parts	
43434-044-020.....51		50100-044-405XN ...60		50203-044-000.....56		53100-044-050.....24	
43441-044-020.....15		50100-044-405XT ...60		50301-044-020.....59		53100-044-671.....24	
43450-044-000.....24		50100-044-405Z60		50302-044-000.....59		53109-044-000.....24	
43472-044-010.....55		50100-044-415C60		50305-044-010.....47		53141-044-000.....24	
43473-044-000.....55		50100-044-415XE ...60		50305-044-020.....47		53161-044-000.....24	
44000 Parts		50100-044-415XP ...60		50373-044-810B71		53162-044-000.....24	
44301-044-000.....35		50100-044-415XN ...60		50373-044-671.....64		53163-044-000.....24	
44311-044-010.....35		50100-044-415XT ...60		50381-044-671XL ...64		53165-044-010.....24	
44601-044-010.....35		50100-044-415Z60		50381-044-810C71		53166-044-010.....24	
44620-044-000.....35		50100-044-425C60		50381-044-810XE ...71		53175-044-010.....24	
44701-044-010.....35		50100-044-425XE ...60		50381-044-810XP ...71		53178-044-010.....24	
44701-044-690.....35		50100-044-425XP ...60		50381-044-810XN ...71		53181-044-010.....24	
44711-044-000.....35		50100-044-425XN ...60		50381-044-810XT ...72		53185-044-670.....24	
44712-044-000... 35,52		50100-044-425XT ...60		50401-044-040.....32		53211-044-010.....59	
44712-044-601.....52		50100-044-425Z60		50500-044-040B47		53212-044-000.....32	
44713-001-000... 36,52		50100-044-620C60		50500-044-690B47		53600-001-020.....32	
44806-044-030.....35		50100-044-620XE ...60		50522-044-010.....47		61000 Parts	
44806-044-040.....35		50100-044-620XP ...60		51000 Parts		61100-044-020R28	
44806-044-690.....35		50100-044-620XN ...60		51100-044-050C32		61100-044-020XL ...28	
44809-044-000.....35		50100-044-620XT ...60		51100-044-050XE ...32		61105-044-000.....27	
44830-044-030.....27		50100-044-620Z60		51100-044-050XP ...32		61131-044-600.....27	
44830-044-670.....27		50100-044-621C60		51100-044-050XN ...32		61135-044-600.....28	
44831-044-000.....27		50100-044-621XE ...60		51100-044-050XT ...32		63000 Parts	
44831-044-670.....27		50100-044-621XP ...60		51100-044-050Z32		63101-044-000C27	
		50100-044-621XN ...60		51100-044-070C32		63101-044-000XE ...27	
		50100-044-621XT ...60		51100-044-070XE ...32		63101-044-000XP ...27	
		50100-044-621Z60		51100-044-070XP ...32			
		50100-044-622C60		51100-044-070XN ...32			
				51100-044-070XT ...32			

PART NO. INDEX

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
63101-044-000XN ...27		87000 Parts		90559-044-000.....28			
63101-044-000XT ...27				90601-044-000.....52			
63101-044-000Z ...27			87121-044-680.....56	90602-044-000.....7			
63101-044-010XL ...27			87122-044-680.....56	90603-044-000.....3,8			
63101-044-671XL ...31			87123-044-680.....56	90704-035-000... 11,15			
			87124-044-680.....56	90741-044-000.....16			
			87125-044-680.....63	90742-044-000.....3			
			87501-044-620.....63	90751-044-000.....36			
77000 Parts		90000 Parts		90752-044-000.....36			
77011-044-010.....40							
77100-044-010.....40			90012-044-000.....3				
77123-044-300.....40			90013-044-000.....15	91000 Parts			
77125-044-300.....40			90081-044-000.....3	91005-044-000.....8			
77131-044-000.....40			90082-044-010.....52	91101-268-000.....11			
77133-044-020.....40			90091-044-000.....12	91111-044-000.....16			
77135-044-000.....40			90101-044-000.....24	91211-044-000.....15			
			90111-044-020.....47	91212-044-000.....52			
80000 Parts			90114-044-010.....24	91213-044-010.....7			
80100-044-040XL ...39			90121-044-000.....27	91215-044-010.....15			
80100-044-600XL ...39			90131-044-000.....56	91216-044-000.....3			
80100-044-620XL ...39			90149-044-000.....32	91302-044-000.....3			
80100-044-670XL ...40			90151-044-000.....24	91307-044-000.....11			
80100-044-690A39			90152-044-000.....27	91311-044-000.....15			
80109-044-010.....39			90157-001-000.....71	91315-044-000.....15			
80111-044-600.....43			90201-044-000.....12				
80112-044-600.....43			90206-001-000.....3				
			90231-001-000.....7	99000 Parts			
81000 Parts			90301-044-000.....24	99114-044-050120			
81200-044-010XL ...27			90305-044-000.....52	99114-044-052120			
81211-044-000.....24			90325-044-000.....39	99114-044-055120			
81213-044-690.....67			90327-044-000.....47	99114-044-058120			
81221-044-811.....67			90345-044-000.....28	99114-044-060120			
81222-044-810.....67			90426-001-000.....12	99114-044-062120			
			90436-044-020.....52	99114-044-065120			
83000 Parts			90443-044-000.....7	99114-044-068120			
83500-044-010C39			90444-044-000.....3	99120-0450419			
83500-044-010XE39			90445-044-30011	99120-0480419			
83500-044-010XP39			90452-044-000.....7	99120-0500419			
83500-044-010XN39			90453-044-030.....52	99120-0520419			
83500-044-010XT39			90454-044-000.....52	99120-0550419			
83511-044-000.....39			90456-044-030.....52	99120-0551423			
83513-044-000.....39			90457-044-010.....3	99120-0580420			
83517-044-000.....39			90458-044-000.....11	99120-0581423			
83600-044-671XL ...64			90488-044-000.....3,15	99120-0600420			
83600-044-810XL ...71			90515-044-000.....55	99120-0601423			
			90523-044-000.....52	99144-0350419			
84000 Parts			90525-030-000.....27	99144-0351423			
84701-044-600.....43			90527-044-000.....40	99144-0380419			
84701-044-671.....44			90541-044-000.....52	99144-0381423			
			90544-044-000.....24				
			90545-044-000.....48				
			90554-028-000.....48				

Part No.	Price	Part No.	Price	Part No.	Price
11100-044-100	51.85	16141-044-004	5.--	23410-044-080	16.95
11116-044-300	0.15	16151-044-004	2.20	24111-044-010	0.50
11117-044-320	0.15	16156-044-004	0.35	24611-044-020	0.50
11120-044-330	5.--	16157-044-004	0.35	24612-044-000	0.20
11191-044-040	1.15	16162-259-004	1.25	24615-044-000	0.45
		(=C72, 3701.61K)			
11200-044-050	40.60			24621-044-020	0.20
11330-044-020	28.75	16163-044-004	2.05	30202-044-000	4.25
11394-044-010	1.15	16171-044-004	0.50	30205-044-004	0.45
11431-044-030	5.05	16173-260-004	0.50	30500-044-000	19.45
12023-044-000	1.65	(C76, 3701.55K)		30540-044-004	16.95
		16173-044-004	0.45		
12101-044-020	12.--	16175-001-004	0.35	18231-044-050	0.60
12191-044-000	0.40	(=C100, 3701.55K)		18291-044-020	0.20
12200-044-100	31.80			18300-044-620	14.25
12206-044-300	0.15	16174-044-004	0.45	18391-044-040	0.75
12251-044-010	2.10	16181-202-004	0.35	18395-044-020	0.60
		(=C92, 3701.65K)			
12301-044-020	6.40	16182-011-004	0.35	22131-044-020	1.10
12361-044-030	1.10	(=C110, 3701.66K)		22201-044-050	2.85
12391-044-030	0.45	16185-044-004	0.60	22300-044-000	6.45
12401-044-020	0.30	16188-044-004	0.20	22401-044-010	0.20
12901-044-010	1.65			22802-044-000	1.25
		16123-044-004	0.30		
13000-044-060	52.20	16124-044-004	0.75	22804-044-000	0.75
13010-044-000	4.50	16125-044-004	2.85	23100-044-040	2.40
13101-044-020	8.80	16133-044-004	2.10	23110-044-030	6.75
13111-044-010	1.60	16139-027.004	1.25	23131-044-000	0.75
13115-001-000	0.25	(=C310, 3701.26K)		23150-044-000	7.25
14100-044-000	19.80	17227-044-000	0.50	34901-044-000	1.65
14120-044-010	2.50	17234-044-000	0.45	34906-044-000	0.90
14311-044-020	1.95	17236-044-000	0.65	35100-044-030	4.70
14315-044-010	2.70	17251-044-010	0.45	35300-044-010	1.55
14401-044-000	6.80	17253-044-050	3.--	35350-044-010	1.55
14431-044-020	4.25	17255-044-000	0.95	35353-044-010	0.45
14451-044-000	1.40	17260-044-010	2.50	37200-044-680	11.10
14481-044-000	0.20	17500-044-010	25.30	38100-044-010	
14711-044-680	2.70	17620-044-000	1.60	38110-044-680	6.40
14721-044-680	2.80	17701-044-010	1.60	40210-044-020	7.95
14751-044-000	0.45	17706-044-010	1.60	31121-044-681	57.50
14771-044-000	0.35	17910-044-000	2.35	31631-044-621	16.95
14781-044-000	0.30	17911-023-000	0.20	32100-044-030	7.--
14921-044-010	0.80	17950-044-000	4.25	32906-044-020	0.20
14925-044-020	0.65	18200-044-680	5.90	32983-044-000	0.20
14935-044-010	0.35	16193-044-004	0.65	32985-044-000	0.20
14950-044-000	4.05	16194-044-004	0.50	33100-044-620	12.30
14955-044-000	0.65	16950-044-010	6.--	33121-044-000	6.65
15420-044-040	1.60	16960-044-004	0.45	33123-044-000	0.45
15650-044-010	1.--	16997-044-004	0.60	33130-044-620	2.--
16100-044-681		17112-044-020	2.65	33700-044-620	9.75
16112-044-004	1.75	17120-044-000	1.55	33701-044-000	1.65
16118-044-004	1.10	17211-044-020	1.25	33703-044-620	1.65
16119-044-004	2.05	17221-044-030	0.65	33709-044-000	0.20
16122-044-004	1.55	17225-044-030	1.30	33711-044-000	0.20
13201-044-010	12.65	23210-044-000	5.35	42608-044-010	0.30
13211-044-010	2.--	23221-044-333	6.40	42638-044-010	0.30
13311-044-050	21.15	23311-044-020	10.45	42701-044-010	16.95
13321-044-050	21.15	23321-044-020	6.40	43120-044-010	2.15
13381-044-020	1.50	23350-044-000	9.25	43133-044-020	0.20

Part No.	Price	Part No.	Price	Part No.	Price
43141-044-030	3.70	50302-044-000	1.70	90102-044-000	0.20
43410-044-030	1.10	50305-044-010	0.95	90111-044-020	0.75
43431-044-010	1.10	50500-044-040B	4.--	90114-044-010	0.25
43434-044-020	0.20	50522-044-010	1.10	90121-044-000	0.45
43441-044-020	0.45	51100-044-040	27.--	90131-044-000	0.20
40215-044-000	4.90	51210-044-040	4.20	90149-044-000	0.35
40220-044-020	6.40	51211-044-000	0.60	90151-044-000	3.60
40225-044-000	4.90	51213-044-000	0.35	90201-044-000	0.25
40230-044-020	2.75	51220-044-040	4.20	90206-001-000(=C100.2773)	0.25
40235-044-000	0.45	51221-044-000	1.55	90231-001-001	0.75
40240-044-020	0.35	51223-044-000	0.45	90301-044-000	1.10
40245-044-000	0.25	51231-044-000	0.60	90305-044-000	0.45
40510-044-010	5.35	51400-044-030	14.05	90325-044-000	0.40
40512-044-000	0.95	51401-044-040	7.65	90327-044-000	0.60
40530-044-000	7.80	51402-044-030	5.05	90426-001-000	0.25
40531-044-000	1.05	51403-044-040	1.50	90436-044-020	0.60
40540-044-040	3.85	51404-044-030	0.45	90443-044-000	0.30
40545-044-040	2.60	51405-044-000	1.20	90444-044-000	0.30
41201-044-040	5.35	53100-044-050	18.65	90445-044-300	0.35
41311-044-020	0.80	53109-044-000	0.70	90452-044-000	0.30
41315-044-010	0.30	53141-044-000	1.40	90453-044-030	0.35
41321-044-000	1.65	53161-044-000	0.65	90454-044-000	0.35
42300-044-030	13.10	53162-044-000	0.45	90456-044-030	0.35
42315-044-000	2.15	53163-044-000	0.30	90457-044-030	0.30
42601-044-030	26.70	53165-044-010	2.--	90458-044-000	0.30
50100-044-620	87.--	53212-044-000	1.25	90488-700-000	0.20
50201-044-000	1.10	53600-044-000	6.55	90515-044-000	0.20
50202-044-000	0.45	61100-044-020	7.--	90523-044-000	0.95
50203-044-000	0.35	61105-044-000	0.35	90541-044-000	0.20
50301-044-020	1.55	63101-044-000	4.--	90544-044-000	0.20
43450-044-000	4.85	77100-044-010A	32.15	90601-044-000	0.30
43472-044-010	0.35	77011-044-000	16.95	90602-044-000	0.20
43473-044-000	0.65	77123-044-300	0.70	90603-044-000	0.20
43474-044-000	0.35	77125-044-300	0.60	90741-044-000	0.20
44301-044-000	1.10	77131-044-000	0.45	90742-044-000	0.20
44311-044-010	0.65	77135-044-000	12.65	90751-044-000	1.40
44601-044-010	14.--	80100-044-620	9.--	90752-044-000	0.75
44620-044-000	0.85	81200-044-010	9.--	91101-268-000(=CB72.2924)	0.30
44701-044-010	14.50	81211-044-000	0.60	91111-044-000	0.20
44711-044-000		81221-044-811	1.20	91211-044-000	1.30
44712-044-000	5.95	83500-044-010	1.10	91212-044-000	1.30
44806-044-020	3.55	83511-044-000	1.20	91213-044-010	1.95
44830-044-030	3.75	83513-044-000	0.65	91215-044-010	0.75
44831-044-000	1.95	83517-044-000	1.10	91216-044-000	0.60
45100-044-060	12.10	87121-044-680	0.65	91302-044-000	0.60
45120-044-010	2.05	87122-044-680	0.65	91307-044-000	0.20
45131-044-020	2.05	87123-044-680	0.65	91311-044-000	0.35
45133-044-000	0.60	87124-044-680	0.65	91313-500-000	0.45
45410-044-030	1.60	88100-044-000	5.60	91315-044-000	0.35
45450-044-000	4.40	90012-044-000	0.45	94022-06060	0.30
53166-044-010	2.--	90013-044-000	0.45	96100-60070	5.20
53175-044-010	1.55	90081-044-000	0.30	96211-10000	
53178-044-010	1.55	90082-044-010	0.25	97142-111941	0.30
53181-044-010	1.55	90091-044-000	0.20	97243-111941	0.30
53211-044-010	1.25	90101-044-000	0.20	99120-04504	2.10
				99144-03504	2.10